


210 cm (7ft) Prelit White Kingston Pine Tree with glitter - tree L

Keycode: 42651598

How to assemble:

1. Before you start to assemble your tree, place the tree stand on a level surface.
2. Read instruction completely before you assemble the tree.
3. Insert bottom section into stand with screws provided, make sure it is tightly secured.
4. Insert the trunk end of the middle section into the pole of the bottom section.(Different size of the tree may contains several parts of middle section)
5. Insert tree top into the trunk and make sure the tab fits tightly into the slot in the tree trunk.
6. Open all the branches. Shape the branches, start with tips farthest from the pole, one to the right, one to the left and one at the centre of the main stem.
7. Wrap the end tip around the wire near the pole.
8. After shaping the whole tree following the previous steps, step back and take an overall look at the tree. Shift branches to fill any gap. Slightly upsweep all branch tips for a natural look.
9. The tree comes with connector(s) and adaptor(s). (Different styles of the tree may contain several pieces of connector and adaptor). Plug the light set to the connector provided and plug the connector into the adaptor, then plug the adaptor to the power outlet.
10. Connect the male and female plug by locating the matching color coding label.

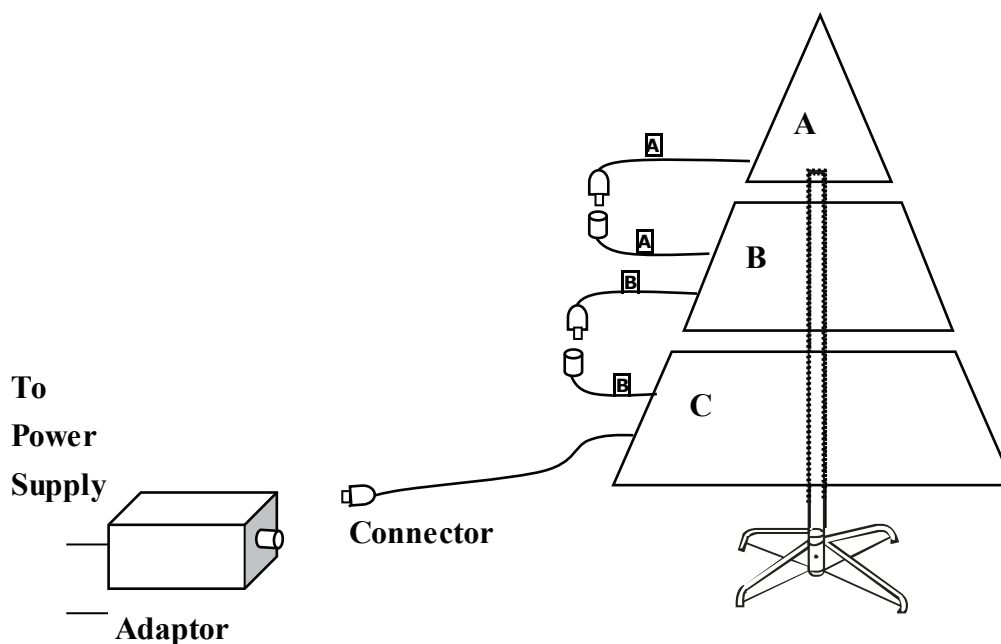

Disassembly and Storage tips:

- 1. Save the carton.**
- 2. Pull out the plug from wall outlet, and remove all ornaments and decorations**
- 3. Disassemble the tree by reversing the sequences stated in the assembly instruction. Do not detach factory pre-plugged light sets**
- 4. In case of difficulty separating the tree poles (trunk), apply a small amount of lubricant at the joint and rotate the upper pole in both directions. Lift up the upper pole again.**
- 5. Pressing branches against stem before removing the top to bottom section gently. Carefully replace the tree in its box and tape it shut. Store carton in a loose and dry place.**
- 6. Do not put the tree direct under sunlight or in a damp area or an area where the temperature exceeds 40°C or 90°F.**
- 7. Please save these instructions.**

Installation instructions:

- 1.This string light is suitable for indoor use only.**
- 2.The AC adaptor MUST be installed INDOORS away from weather.**
- 3.Do not position or place near heaters or any other direct sources of heat.**
- 4. This product is suitable for positioning on surfaces which have normal flammability, e.g. wood, plasticboard, masonry. However this does not include highly flammable surfaces (e.g. polystyrene, textiles)**
- 5. Always position cables and extension leads so that they will not be a hazard to the elderly, pets and children.**
- 6. DO NOT position this set where it may become covered by other items. e.g. curtains, nets or bedding**
- 7. Ensure the unit is positioned so that you have enough cable to reach an indoor mains power socket.**

WARNING:

- This string light is suitable for **INDOOR USE ONLY**.
- This product is **NOT** designed for permanent or long term use.
- The AC adaptor **MUST** be located **INDOORS** away from weather.
- The supplied adaptor is suitable for operation of LED Modules only.
- Only operate this light chain with the supplied adaptor, **Model No.**

JT-DC31V3.6W-E1

- Do not connect this light chain electrically to another light chain.
- Do not connect this light chain to the power supply while it is in the packaging.
- **DO NOT** attempt to replace the non-replaceable bulbs in this light chain.
- Never allow any part of the set to come into contact with a source of heat or flame.
- Care must be taken to avoid damage the cable or fittings.
- If part of light set or cable is damaged, the light set **MUST** be discarded.
- This product is for use as a decoration only. Not to be used by children as a toy.

Keep out of reach of children.

- Do not position the bulbs or product where it will be exposed to extreme wet weather or submerged in water.
- Always switch off this light set or unplug an adaptor if unattended.
- **DO NOT** overload power sockets or extension leads.

· **DO NOT** pierce the cable when securing in place, bend or stand on the light chain, as this will damage the bulbs or wiring

LED Bulbs (3V 0.015W)

This light set is constructed with Non-replacement LED bulbs.

Adaptor: Model no. **JT-DC31V3.6W-E1**

Input: 220-240 – 50-60Hz

Output: 31V DC, 3.6W

Adaptor for indoor use only.

Adaptor Approval No. SGS-170594-EA

Made in China