

# Light and Sound Lawn Mower

## Instruction Manual




3+ Years

**WARNING: CHOKING HAZARD**  
SMALL PARTS. NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.

Caution: DO NOT IMMERSE UNIT IN WATER.



### Battery Diagram

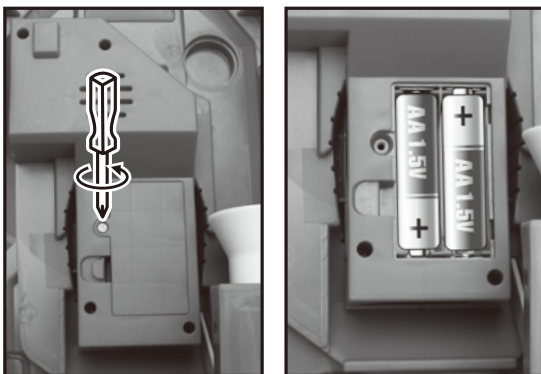

**2 X AA**

REQUIRES 2 X 1.5V AA BATTERIES

### WARNING:

- BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY.
- DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES.
- NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.
- RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION.
- RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED.
- THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.
- REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED.
- DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.
- THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.

### CAUTION:

- BATTERY INSTALLATION BY AN ADULT IS REQUIRED.