

Assembly Instructions

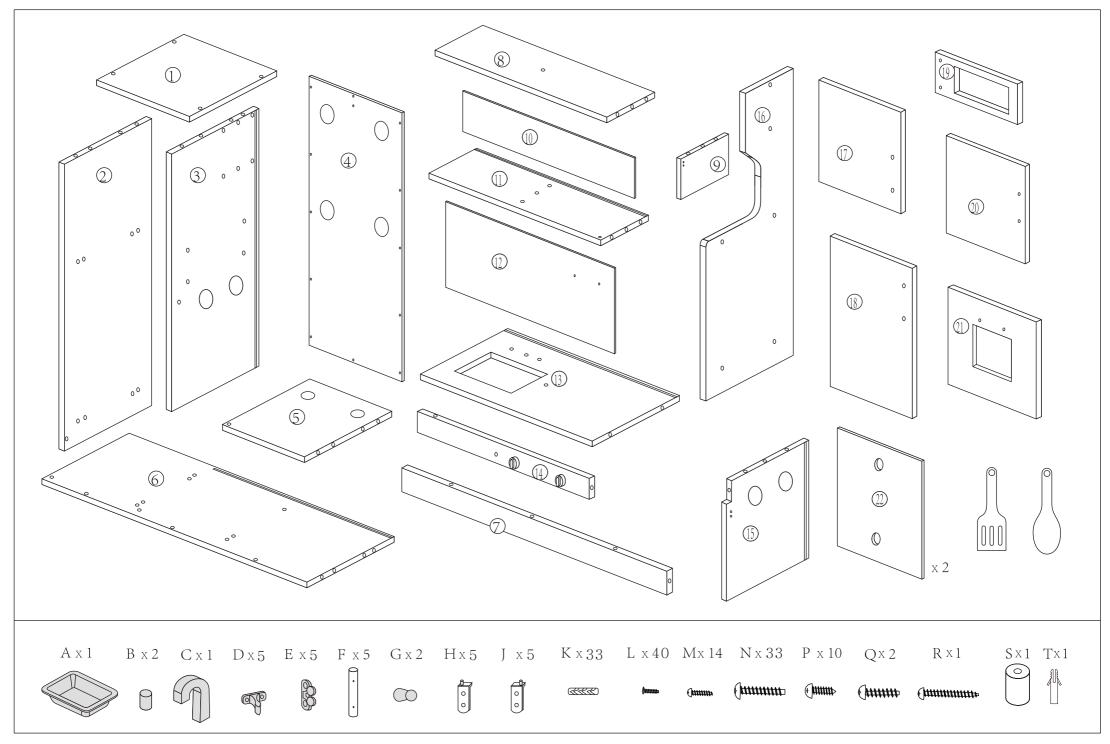

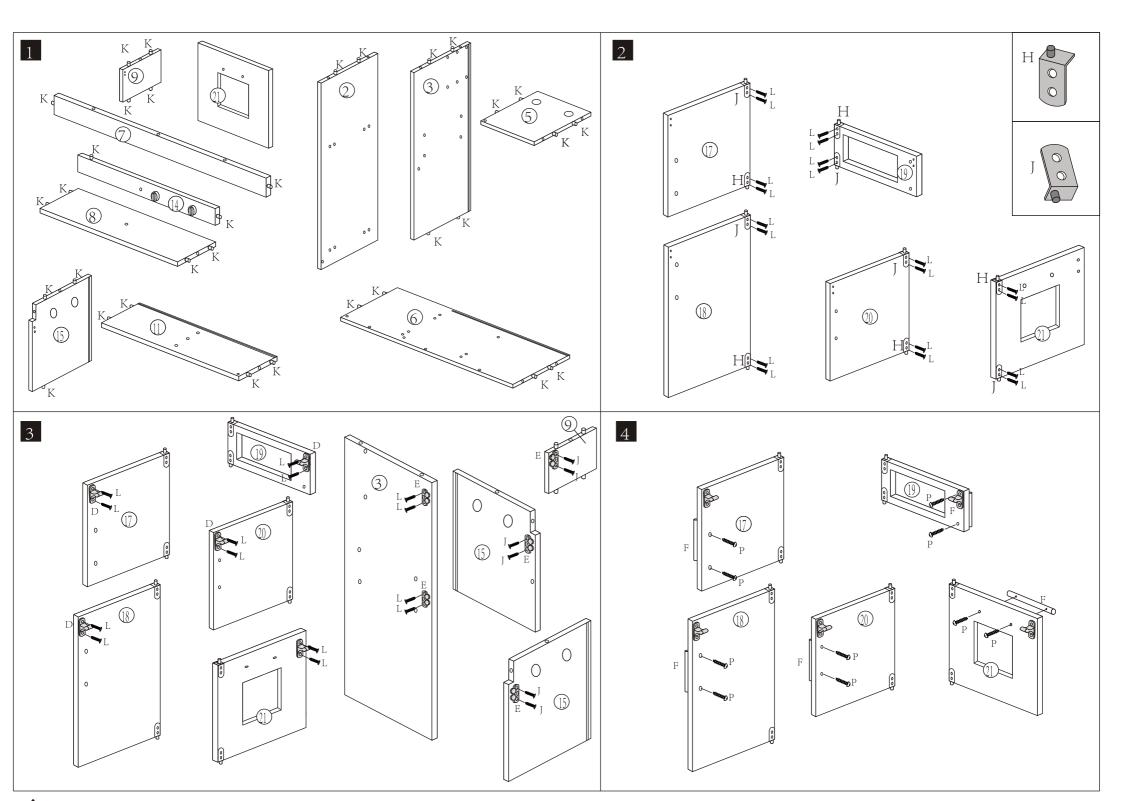







CHOKING HAZARD-SMALL PARTS.

NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.

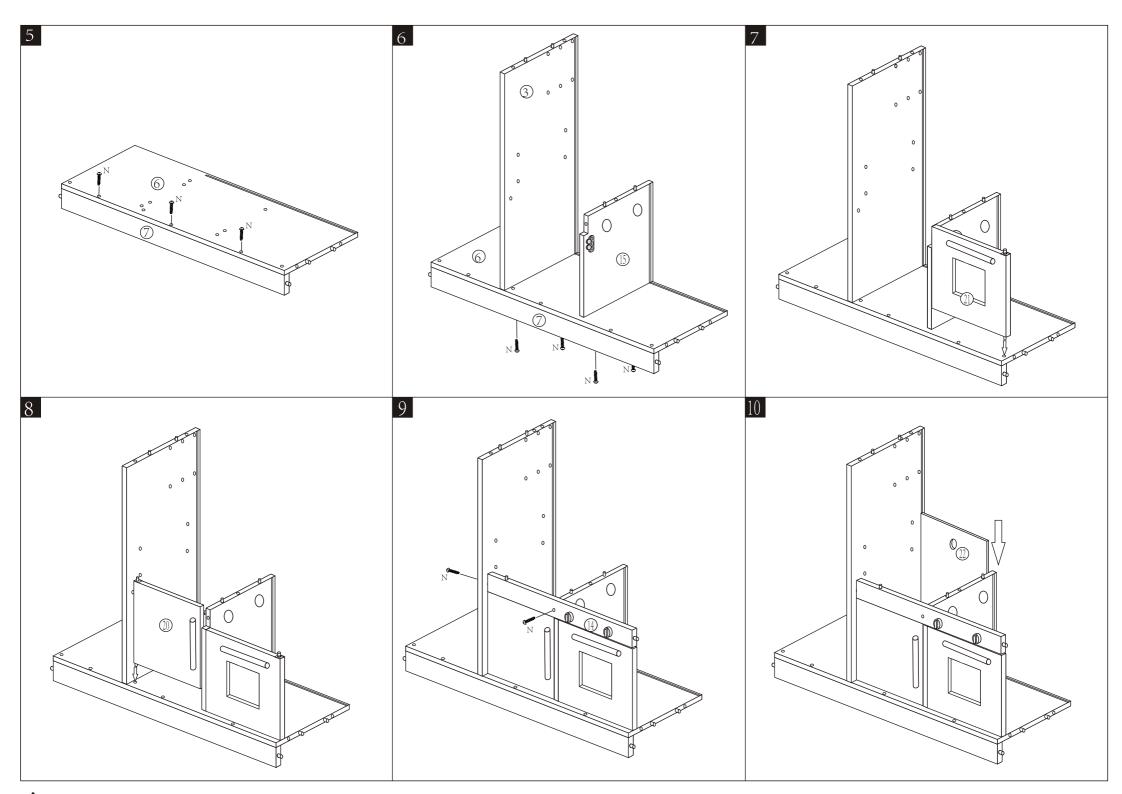




AWARNING CHOKING HAZARD-SMALL PARTS. ADULT ASSEMBLY IS REQUIRED. HARDWARE CONTAINS SCREWS WITH SHARP POINTS. KEEP UNASSEMBLED NOT SUITABLE FOR CHILDREN UNDER 3 YEARS. PARTS OUT OF THE REACH OF SMALL CHILDREN. ADULT SUPERVISION IS RECOMMENDED. THIS IS A TOY, FOR ROLE PLAY ONLY.

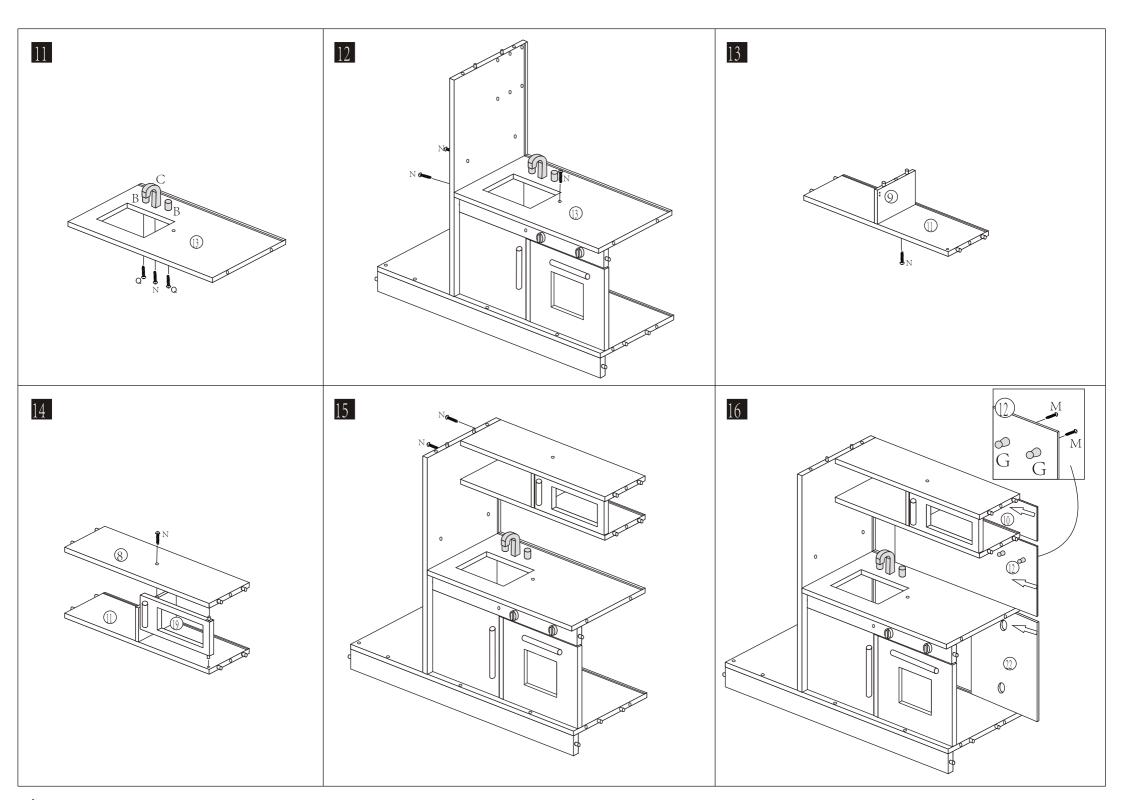



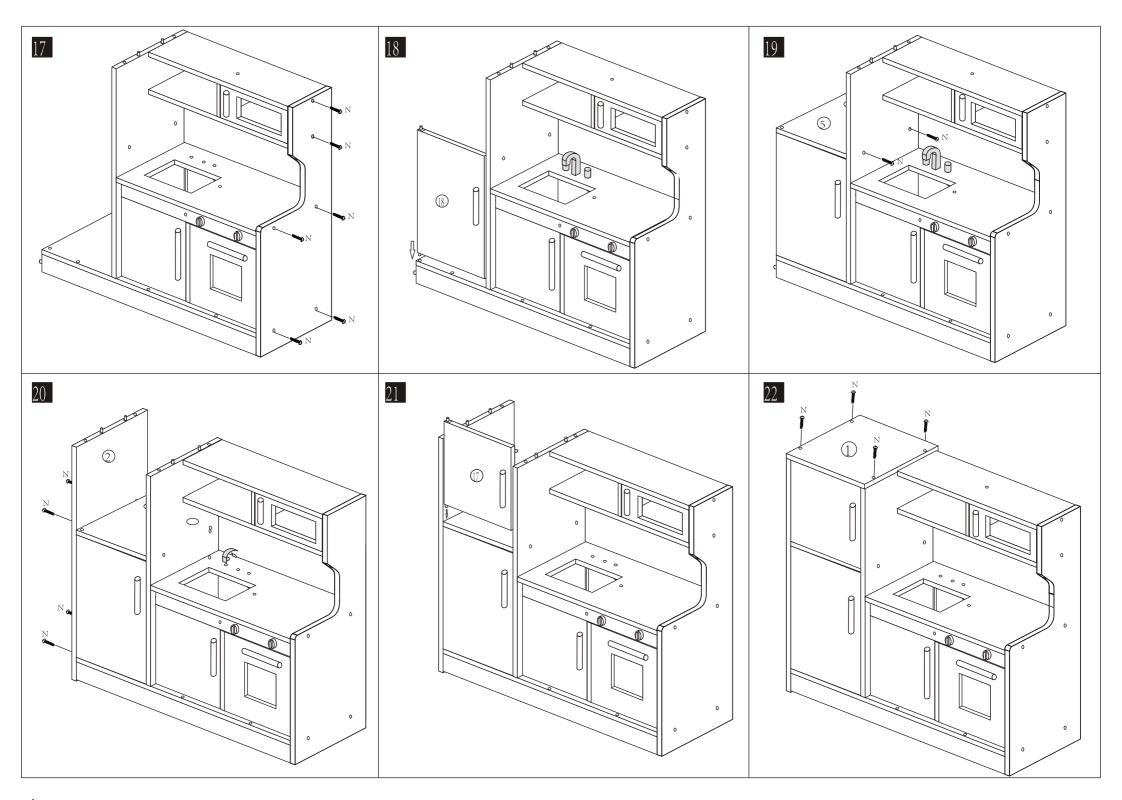





AWARNING
CHOKING HAZARD-SMALL PARTS.
NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.



For safe use of this kitchen we recommend that you secure it to the wall with the wall screw included. Drill a hole for the wall anchor the same size so that it sits in the hole snuggly.
Screw part R pass through part ① and S into part T

wall anchor.

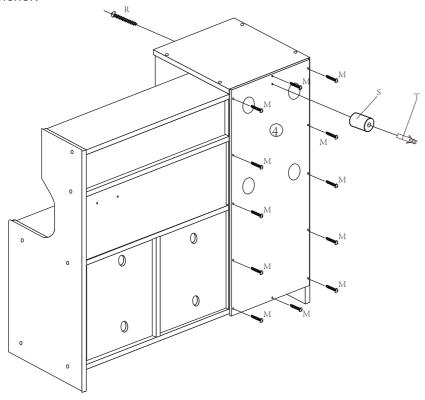

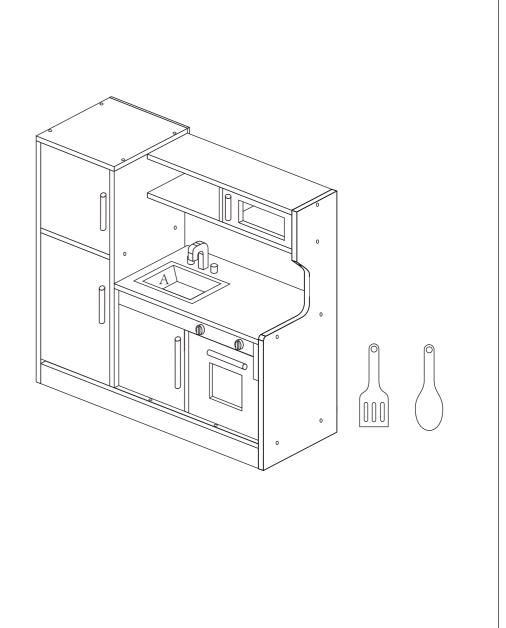

24

