


anko

Electronic Money Safe

The "MONEY SAFE" guards your personal stuff. Use the safe to store all your exciting valuables. The coin slot at the top lets you use the safe as a piggy bank.

BATTERY INSTALLATION

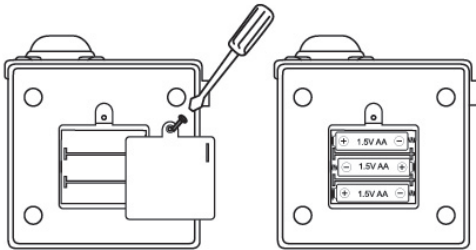

REQUIRES 3 X 1.5V AA BATTERIES
(NOT INCLUDED).

OPEN THE SAFE

1. Use default code "0000" and open the door clockwise.



CHANGING THE CODE

1. Press the default code 0000 to open the door.
2. Press and hold the "*" button until the red light flickers, input a new 4-digit code and press the "#" button to save it and release the "*" button and close the door, thus finishing the code reset.

Note: If you forget the password, it can be reset to the default one by removing and reinstalling the batteries.



WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED BY ADULT. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

KEYCODE: 42845553

MADE IN CHINA

FOR AU / NZ: IMPORTED FOR KMART STORES IN AUSTRALIA AND NEW ZEALAND.

FOR USA: IMPORTED BY ANKO RETAIL INC. 19500 ALDERWOOD MALL PARKWAY LYNNWOOD WA 98036 USA.

ADULT SUPERVISION REQUIRED.
PRODUCT MAY VARY FROM IMAGE SHOWN.
PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.