 
 


RC WIFI QUADCOPTER MANUAL

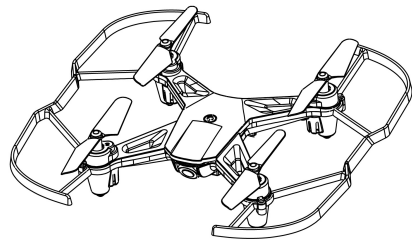


Attention: The quadcopter includes a built-in rechargeable battery that is non-replaceable. The included rechargeable battery is not fully charged prior to shipment and must be charged before the first use.

QUADCOPTER

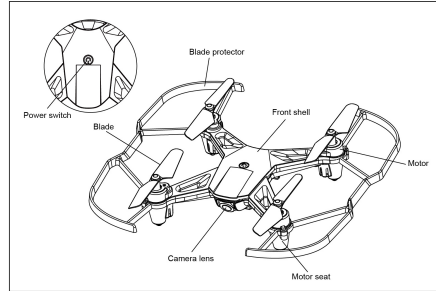


REMOTE CONTROL

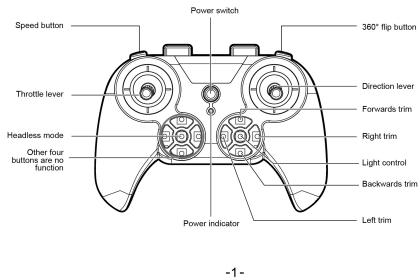

BATTERY INSTALLATION

1. Unscrew to open battery cover, insert 4 x 1.5V AA batteries, see Diagram 1.
2. Replace battery cover.

Attention: Remove batteries after you have finished using your product.

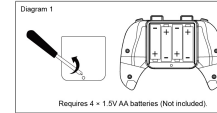

Requires 4 x 1.5V AA batteries (Not included).

LITHIUM BATTERY CHARGE INSTRUCTIONS

- Attention:** Do not charge battery immediately after each play, let the battery cool down for a while.
1. Turn off quadcopter. (Long press the switch button on the quadcopter until the flashing lights off.)
 2. Connect USB charging cable plug with quadcopter charging interface. (see Diagram 2)
 3. Put the cable into the computer USB interface. The USB indicator lights up when it has started charging.
 4. Once the indicator light extinguishes, the quadcopter is fully charged. Unplug the USB charging cable from computer USB interface and disconnect with quadcopter.
 5. Charging time: approximately 40-50 minutes.
 6. Play time: approximately 5-6 minutes.

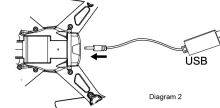


Diagram 2

CONTROL METHOD

Attention: Select a large, wide-open area for flying, and make sure that there are no obstructions, animals, people or overhead powerlines nearby. Do not operate the quadcopter in strong wind, rain or snow etc.

1. Set the quadcopter power switch to "ON" state (long press the switch button on the quadcopter until the light flashing and place flat ground, the red and blue LED lights on the quadcopter will flash alternately. Ensure you are least 2 metres from the back of quadcopter.
2. Set the remote control: push the throttle lever down and set the power to "ON". The red LED light on the quadcopter will flash rapidly.
3. Push the throttle lever up, you will hear one beep sound. And then push it down, you will hear beep sound again. If the red and blue LED lights on the quadcopter flash alternately again, the pairing is successful. If pairing is not successful, please repeat steps 1-3.
4. Now you can operate your quadcopter. See following instructions to play your quadcopter.

CONTROL METHOD OF THE QUADCOPTER

Throttle 	 ascend descend	Push up the throttle lever slowly, the quadcopter will ascend. Pull down the throttle lever slowly, the quadcopter will descend.
Rudder 		Move the throttle lever to left, the quadcopter will rotate anticlockwise. Move the throttle lever to right, the quadcopter will rotate clockwise.
Elevator 	 forwards backwards	Push up the direction lever, the quadcopter will fly forwards. Pull down the direction lever, the quadcopter will fly backwards.
Aileron 	 fly to the left fly to the right	Move the direction lever to left, the quadcopter will fly to the left. Move the direction lever to right, the quadcopter will fly to the right.

Tip: The red LED light will flash continuously when the quadcopter is low in battery. Please recharge the quadcopter when the light is flashing.

FLIPPING THE QUADCOPTER

Tip: Ensure the quadcopter flying height is at least 3 metres from the ground when you perform a 360 degree flip function.

	 Turning forward	1. Press the flip button, you will hear a beep sound. 2. To flip forward, push up the direction lever and then release it. The quadcopter will tumble forward. 3. To flip backward, pull down the direction lever and then release it. The quadcopter will tumble backward.
	 Turning to the left	1. Press the flip button, you will hear a beep sound. 2. To flip to the right, push the direction lever right and then release it. The quadcopter will tumble to the right. 3. To flip to the left, push the direction lever left and then release it. The quadcopter will tumble to the left.

HEADLESS MODE

In headless mode, any side of quadcopter can be treated as the front of the quadcopter.


How to transfer normal state to headless mode:

1. You can enter headless mode during stable flying or before flying.
2. Press the headless mode button, you will hear a beep sound, the LED light will be lit, that means the quadcopter has entered headless mode. You can play the quadcopter under headless mode now.
3. Press headless mode button again, you will hear two beep sounds, the red and blue LED lights will flash alternately, the quadcopter will turn back to the normal flying mode.

HOW TO TRIM THE QUADCOPTER

Slowly raise the throttle stick and let the quadcopter lift-off the ground, you can use the trim to correct the action if the quadcopter leans to the wrong direction.

1. If the quadcopter drifts forward, press the backwards trim button as shown in Diagram 4 to trim it backward until it stops drifting.
If the quadcopter drifts backward, press the forwards trim button as shown in Diagram 4 to trim it forward until it stops drifting.

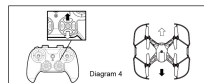

2. If the quadcopter drifts to left, press the right trim button as shown in Diagram 5 to trim it to right until it stops drifting.
If the quadcopter drifts to right, press the left trim button as shown in Diagram 5 to trim it to left until it stops drifting.


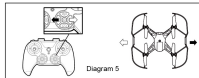


Diagram 5

WIFI/APP USAGE

Mobile phone holder installation (the mobile phone is not included):

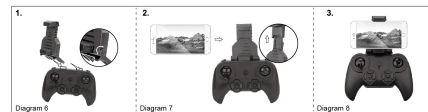

1. Slide mobile phone holder into controller, see Diagram 6.
2. Push up the mobile phone holder to affix the mobile phone, see Diagram 7 & 8.

WIFI Connection description

Please download and install the software SKY-WIFI-Drone or scan the QR code for Google Play & IOS App Store below.




QR code for Google Play & IOS App Store

Important information for drone users.
Drones must be kept in clear sight of the operator's own eyes and not through a device (such as VR goggles) at all times.
For more information on drone use, please see droneflyer.gov.au.

Connect description:

1. Ensure the quadcopter has been turned on.
 2. Turn on WIFI on mobile phone, choose the network "FPV-WIFI_XXXX" and connect.
 3. Once the WIFI connection is successful, launch the App SKY-WIFI. Please note that connection to the quadcopter's WIFI will disrupt the existing WIFI connection you may be using.
 4. After App SKY-WIFI is launched successfully, pair the quadcopter to remote control, see CONTROL METHOD on page 2.
- Attention:** Use the remote for navigating and holding a phone to capture images and avoid footage.

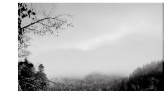

Start interface

Control interface description:

1. Take Pictures
2. Take Videos
3. Viewing Pictures / Videos
4. Screen Rotation



Flights



MOBILE PHONE HOLDER

WARNING

- Please follow the instructions for correct installation and use. Some parts are require assembly by an adult.
- The product contains small parts and is a choking hazard.
- Do not touch the hot motor and batteries.
- Do not touch working propellers.
- Do not fly towards yourself or other people.
- Adult supervision is required.
- Throw away the packaging material straight away, as this can cause harm to children.
- Non rechargeable batteries are not rechargeable.
- To charge the rechargeable battery, it will need to be done by an adult.
- Do not mix old and new batteries or batteries of different types.
- Do not short circuit the battery or put the battery in fire.
- Do not leave the toy unattended while charging it.
- When the battery is low, please return the quadcopter and recharge it.
- Charge the toy on non-flammable surface and keep it away from flammable items.
- Turn the charger off when the toy's battery is charged, and always unplug it from the toy.
- If the toy has been damaged, immediately stop use, unplug, and safely move the toy away from flammable materials.
- Follow the manufacturer's instructions for charging the toy. Do not charge longer than recommended.
- Do not use the product for a long time. Remove the battery.
- To avoid injury, do not touch the rotating parts.
- Do not impact or drop the quadcopter or remote control.
- Please use a clean soft cloth to clean the product.
- The user has the responsibility to ensure that the product will not cause harm to themselves or others.
- The manufacturers and dealers do not bear any responsibility for injuries or damage to property caused by improper use.
- The packaging and instructions contain important information of products, please keep for future reference.
- Only fly during the day and keep your quadcopter within visual line-of-sight. This means being able to see the quadcopter with your own eyes (rather than through a device) at all times.
- Do not fly your quadcopter higher than 120 metres (400ft) above the ground.
- Keep your quadcopter at least 30 metres away from other people.
- Do not fly your quadcopter over or near an area affecting public safety or where emergency operations are underway (without prior approval). This could include situations such as a car crash, police operations, a fire and associated firefighting efforts, and search and rescue.
- Only fly one quadcopter at a time.
- Do not fly over or above people. This could include beaches, parks, events, or sport ovals where there is a game in progress.
- Keep at least 5.5km away from controlled aerodromes if your quadcopter weighs more than 100g. Flying within 5.5km of a non-controlled aerodrome or quadcopter landing site (HLS) is possible, but only if no manned aircraft are operating to or from the aerodrome. If you become aware of manned aircraft operating to or from the aerodrome/HLS, you must manoeuvre away from the aircraft and land as soon as safely possible.
- Do not operate your quadcopter in a way that creates a hazard to another aircraft, person or property.
- Respect personal privacy do not record or photograph people without their consent – this may breach state laws.
- Important information for drone users.
Drones must be kept in clear sight of the operator's own eyes and not through a device (such as VR goggles) at all times. For more information on drone use, please see droneflyer.gov.au