

# anko

## Pet Electric Nail File



**Keycode: 42957638**

To ensure proper operation of this device, please read this instruction manual carefully before using the device and keep it for further reference.

## SAFETY INSTRUCTIONS

To ensure proper operation of this device, please read this instruction manual carefully before using the device and keep it for further reference.



### WARNING!

- This device is not a toy, keep out of reach of children.
- Please verify the device before you start using it. Do not use if there is any damage.
- Please keep the USB cable and the device charging port dry.
- Do not use the device while charging.
- Regularly clean the device and the accessories to extend its lifetime.
- Do not share the same device with others.
- Do not attempt to disassemble, repair or modify the device by yourself to avoid accidents.
- This device has a lithium battery. Do not place or store the device for long periods under a hot or humid environment. If you do not intend to use the device for a long time, store it after it is fully charged. Do not throw the device into a fire or put it in the general household waste. Please dispose of this device in an official recycling point.



**WARNING: Do not recharge non-rechargeable batteries.**



**WARNING: Before charging the product, please make sure your hands are dry.**

## SPECIFICATIONS

Input: 5V /0.5A

Type of Battery: Li-ion 3.7V 800mAh

Charging time: 4hrs

Working time: 1hr

## PARTS



1.	Speed increase button +	4.	Emery Head (coarse & fine)
2.	Speed decrease button -	5.	USB cable
3.	ON/OFF switch with charging indicator	6.	Charging port

## CHARGING THE DEVICE

Please charge the device before you start using it.

- Make sure the device is turned off.
- Insert the USB cable into the USB charging port, then connected the USB port to a DC 5V 500mA power source.
- While charging, the charging indicator lights flashes RED. When the battery is fully charged, all the charging indicator turns BLUE.
- Charging the device takes approximately 4 hours. When the battery is fully charged, the device can be used consecutively for about 60 minutes.

**NOTE: When battery is low, the charging indicator will flash RED 3 times, then automatically turned off.**

## FEATURES

**Turn ON and OFF the device:** Press and hold the ON/OFF switch to turn on the device, press and hold the switch again to turn off the device.

**Change Rotation Direction:** With the device turned on, press the on/off switch to change the rotating direction clockwise or counter-clockwise.

**Adjust the Speed Intensity:** Press and hold the speed increase or decrease button to adjust the speed intensity. The speed button will keep flashing until maximum or minimum speed had reached. Select speed according to the hardness of pet nails.


## HOW TO USE

1. Make sure the device is OFF.
2. Select the attachment and push it into the device. It is recommended to select the head from coarse to fine.
  - Emery Head (Coarse): Suitable to grind the front edge and the sides of nails.
  - Emery Head (Fine): Suitable to repair nails; can be used to smooth down sharp nails.
3. Turn ON the device for a while, to let the pet adapt to the sound of the nail file before applying.



**When trimming the nail, stay far enough from the Quick to avoid causing pain or drawing blood!**

4. For long nails, use a nail clipper to trim down nail prior to applying the nail file.
5. Grind the nail 2mm away from the Quick.

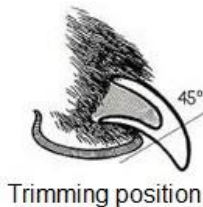

6. Use no more than 10 seconds each time, to allow your pet to adapt the environment alternately.
7. Turn off the unit when finished.

## CLEANING AND MAINTENANCE

Before and after each single use, please clean the device body and emery head to ensure the best performance of this device.

- Turn off device before you start cleaning.
- Clean the emery head with a brush or tissue after used.
- Clean the main body with wet cloth or tissue. Do not wash with water.



**Do not immerse the device in water.**

- Do not use alcohol, steel wool, abrasive cleansers, chemicals, **or** corrosive liquids to clean the device.
- Do not use lubricants, detergents, polishing agents, or air fresheners on this device.

## BATTERY DISPOSAL

If the nail file is to be disposed the batteries should be removed from the appliance before it is scrapped. The massage gun must be disconnected from the charger when removing the battery. The battery should be disposed safely. Used batteries should be taken to a recycling facility and not disposed with normal household waste.

**IMPORTANT: Always fully discharge the batteries before removal and ensure the charger is disconnected from mains power.**

## TROUBLE SHOOTING

Problem	Possible Cause	Solution
The device does not work properly.	The battery is running low or out of power.	Charge the device as guided.
Abnormal Noise.	The brush was installed incorrectly.	Turn off the device and install the brush correctly as guided.
The charging indicator does not light up.	The USB cable is not plugged correctly.	Insert the USB cable correctly into the power supply.
Note: If the device still does not work properly after using the above solutions, please stop using the device and contact your local dealer.		