

AGES 8+ YEARS

# GALAXY LIGHT MANUAL

 


Attention: The galaxy light must be turned on by touching and holding on the sensor switch about 8 seconds when the galaxy light is used for the first time.

## PACKAGE CONTENTS


• Galaxy Light • Remote Control • USB Charger • Base • User's Manual

## GALAXY LIGHT

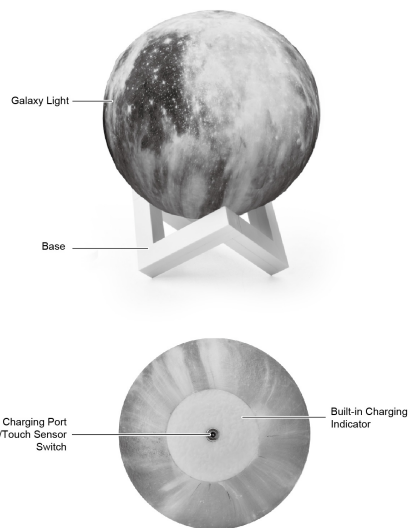

-1-

## REMOTE CONTROL

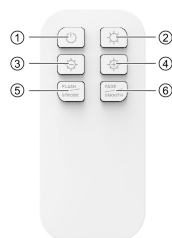 


- 1 ON/OFF Button**
- 2 Change Colour Button:**  
(There are 16 colours in total: dark red, red, orange, yellow, light yellow, dark green, green, light blue, blue, dark blue, dark purple, purple, blue purple, red purple, light purple, white.)
- 3 Weakened button:**  
(Press it to weaken the light when in monochromatic light mode. Press it to slow down the frequency of the flashing light when in Flash/Strobe/Fade/Smooth mode.)
- 4 Enhanced button:**  
(Press it to enhance the light when in monochromatic light mode. Press it to increase the frequency of the flashing light when in Flash/Strobe/Fade/Smooth mode.)
- 5 Flash/Strobe Mode Button**
- 6 Fade/Smooth Mode Button**

**Attention:** If the galaxy light is (1) used for the first time, or (2) last used was turned off by the sensor switch (at the bottom of the galaxy light), then you can only turn it on by touching and holding on the sensor switch about 8 seconds. Remote control and tap the galaxy light function should not be suitable for above.


## INSERTING BATTERIES

 - Unscrew to open battery cover, insert 2 X 1.5V AAA batteries.
- Replace battery cover.

**Attention:** remove batteries after you have finished using your product.



## BATTERY CHARGE INSTRUCTION

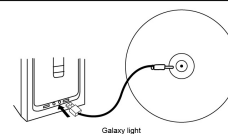

- Connect USB charging cable plug with galaxy light charging port.
  - Put the cable into the computer USB interface.
- Note: The built-in charging indicator light at the bottom of the galaxy light will light up when charging. The indicator light extinguishes after it has finished charging.

-2-

## TOUCH SENSOR SWITCH

- Touch and hold the sensor switch for about 8 seconds to turn on the galaxy light.
- Touch and hold the sensor switch for about 8 seconds to turn off the galaxy light. The galaxy light will flash white light twice before turning off.
- Touch the sensor switch for about 1 seconds to change the colours and modes. The galaxy light will change cyclically when you touch the sensor switch: 16 colours → flash mode → strobe mode → fade mode → smooth mode → sleep mode → wake up.
- Touch and hold the sensor switch for about 2 seconds to adjust the brightness. The brightness adjustment function is only applicable to 16 colour conversions.


**Attention:** If the galaxy light is (1) used for the first time, or (2) last used was turned off by the sensor switch (at the bottom of the galaxy light), then you can only turn it on by touching and holding on the sensor switch about 8 seconds. Remote control and tap the galaxy light function should not be suitable for above. The touch function of the sensor switch cannot be used while charging.

## TAP THE GALAXY LIGHT

Tap the galaxy light lightly to change the colours and modes. The galaxy light will change cyclically when it is tapped: 16 colours → flash mode → strobe mode → fade mode → smooth mode → sleep mode → wake up.

**Attention:** If the galaxy light is (1) used for the first time, or (2) last used was turned off by the sensor switch (at the bottom of the galaxy light), then you can only turn it on by touching and holding on the sensor switch about 8 seconds. Remote control and tap the galaxy light function should not be suitable for above.

## BASE ASSEMBLY INSTRUCTION

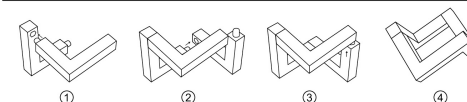

**WARNING:** BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

**WARNING:** FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

**CAUTION:** GALAXY LIGHT CONTAINS A BUILT-IN RECHARGEABLE BATTERY THAT IS NON-REPLACABLE. CHARGE GALAXY LIGHT BY SUPPLIED USB CHARGER ONLY.

**CAUTION:** THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

MADE IN CHINA

KEYCODE: 42991823

FOR AU / NZ: IMPORTED FOR KMART STORES IN AUSTRALIA AND NEW ZEALAND.

PRODUCT MAY VARY FROM IMAGE SHOWN. PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE. READ THE INSTRUCTIONS BEFORE OPERATING THE PRODUCT.

**WARNING:** THE TOY IS ONLY TO BE CONNECTED TO CLASS II EQUIPMENT BEARING THE SYMBOL.

**WARNING:** CHOKING HAZARD - SMALL PARTS. NOT SUITABLE FOR CHILDREN UNDER 3 YRS.

-3-