anko

Bluetooth® Multi Use Floor Tripod Instruction Manual Keycode: 43033041

*Please read all the information carefully before you use the product. Keep the manual for future reference.

Parts:



1.Mounting plate	Mount your devices to this plate, then mount this plate to the tripod.
2.Mounting plate locking lever	Secures the quick-release plate to the tripod.
3.Vertical tilt locking knob	Adjusts the vertical tilt up to 90 degrees.
4.Horizontal tilt lock handle	Adjusts the horizontal tilt.
5.Pan locking knob	Locks the tripod head so that it will not rotate horizontally.
6.Elevation locking knob	Locks the center column in place.
7.Flip-lever leg locks	Lift to adjust leg height, then close to lock.
8.Rubber feet	Provide a secure, non-slip footing for your tripod.

Bluetooth connection

If you have used Bluetooth connection before, as soon as you switch on the remote control, the system will start searching for the device last connected. When the device is found, it will re-connect automatically.

If you want to switch between devices, you have to turn off Bluetooth on the device last connected.

NOTE: Only one Bluetooth device can be connected to the remote control at one time

First Bluetooth connection

- 1. Insert the 2 x AAA batteries (not included) into the battery compartment inside the back of the remote control, ensure the polarity of the batteries match the polarity inside the battery compartment. The blue LED light starts flashing
- 2. Turn on Bluetooth on your smart phone. Refer to its user manual for instructions on pairing and connecting Bluetooth devices.
- 3. Select "KM43033041" from the device list.
- 4. The blue LED stop flashing and stay on when connected successfully.

If you lose connection, press any remote control button to reconnect.

Use for cell Phone

- 1. Turn on your smartphone, make sure the Bluetooth connection is established and open your camera app.
- 2. Mount the universal phone clip on the tripod stand with vertical or horizontal position.
- 3. Adjust the width/length and place your smart phone in the phone holder.
- 5. Unfold the tripod and place it on a flat surface.
- 6. Press either of shutter button to take a picture.
- 7. After use, push the ON/OFF switch of the remote control to position OFF.

Please note:

The remote control automatically switches to sleep mode in 1 min and can be reactivated by pressing any remote control button.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation