





 


 

 


Disney Junior
MINNIE

© Disney


1-3
years

Foot to Floor Minnie Mouse Ride On


Parts

 x 1	 x 1	 x 4	 x 4
 x 2	 x 2	 x 1	 x 1
 x 1	 x 1	 x 1	 x 4


Assembly Instructions

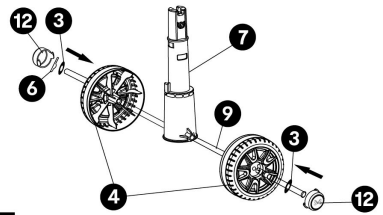


1 Assemble the accessories as shown, and lock it with accessory 6.




2 Push the steering column up through the hole in the main body. Ensure the steering lock fits into the slot in the body.

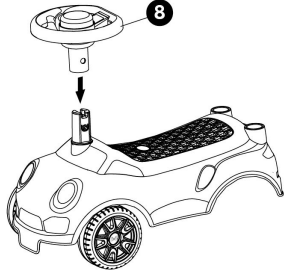


3 Push the steering wheel down onto the steering column ensuring holes on the steering wheel align with the clips on the steering column. Ensure this is a tight fit.

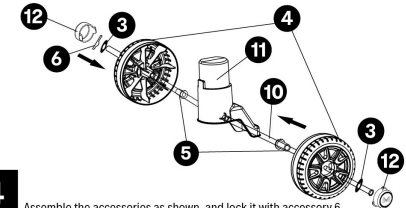

4 Assemble the accessories as shown, and lock it with accessory 6.

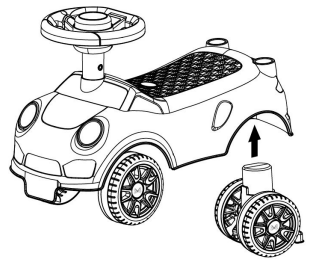

5 Push the stabilizer up through the hole in the main body. Ensure it locates securely in the underside of the body.

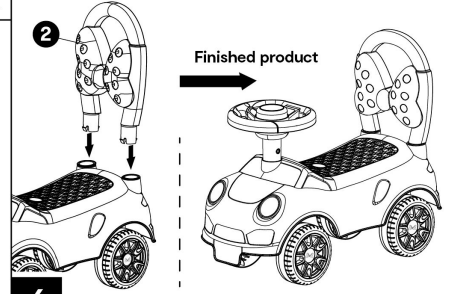

6 Finally, push the handle into the two slots at the rear of the body until it clicks into position.

Finished product

- DO NOT LET CHILDREN PLAY IN THE STREET.
- DO NOT USE THIS TOY RIDE ON, ON OR NEAR A SLOPE.
- DO NOT LET CHILDREN PLAY ON STAIRS, PORCHES OR ANYWHERE ELSE WHERE A CHILD MIGHT FALL.
- WHEN USING THIS PRODUCT, CHILDREN SHOULD BE UNDER ADULT SUPERVISION AT ALL TIMES.
- DO NOT USE TOY RIDE ON NEAR STOVES, HEATERS, IRONING BOARDS, POOLS OR NEAR ANY OTHER HOT OR DANGEROUS OBJECTS.
- DO NOT LEAVE TOY RIDE ON OUTSIDE. PLEASE PROTECT IT FROM THE WEATHER.
- USE OUTDOORS ONLY DURING DAYLIGHT HOURS.
- DO NOT BUMP INTO WALLS, POLES, ETC. IT COULD CAUSE POSSIBLE INJURY AND/OR DAMAGE TO THE RIDE ON.
- CAUTION AND CARE MUST BE TAKEN IN THE UNPACKING AND ASSEMBLY OF THIS PRODUCT. BECAUSE OF SMALL AND DANGEROUS PARTS AND PACKAGING MATERIAL, ADULT ASSEMBLY IS REQUIRED.
- MAXIMUM USER WEIGHT: 20KG.
- WARNING! NOT TO BE USED BY CHILDREN OVER 36 MONTHS BECAUSE OF ITS INSUFFICIENT STRENGTH.
- AN ADULT SHOULD CARRY OUT CHECKS AND MAINTENANCE OF THE MAIN PARTS AT REGULAR INTERVALS. IF THESE CHECKS ARE NOT CARRIED OUT, THE RIDE ON COULD OVERTURN OR CAUSE A FALL.

PLEASE READ BEFORE ASSEMBLING—TO BE ASSEMBLED BY AN ADULT



WARNING: ADULT SUPERVISION IS REQUIRED AT ALL TIMES. DO NOT STAND ON THE VEHICLE. DO NOT BUMP INTO WALLS, POLES ETC. ONLY USE THIS TOY ON FLAT SURFACES WITHOUT ANY OBSTACLES. NEVER USE THIS TOY IN ROADWAYS, NEAR MOTOR VEHICLES, ON OR NEAR STEEP INCLINES OR STEPS, SWIMMING POOLS OR OTHER BODIES OF WATER. MAKE SURE THE CHILD WEARS PROPERLY SECURED SHOES. NEVER ALLOW MORE THAN ONE CHILD TO USE THIS TOY AT ONE TIME. AN ADULT SHOULD CARRY OUT CHECKS AND MAINTENANCE OF THE PARTS AT REGULAR INTERVALS.

Keycode: 43073320

WARNING: MAXIMUM USER WEIGHT: 20KG. NOT SUITABLE FOR CHILDREN OVER 3 YEARS DUE TO INSUFFICIENT STRENGTH OF THE TOY.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THE TOY TO YOUR CHILD.

ADULT ASSEMBLY AND SUPERVISION REQUIRED. PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE. PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN.

WARNING: CHOKING HAZARD
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.