



Instruction Manual

Multi-Media Keyboard

Keycode: 43082353



Package Contents

- ① 2.4GHz wireless keyboard
- ② USB receiver (inside the battery compartment)
- ③ User manual

Safety Instructions:

Please read the instruction manual before using this device and follow all the safety instructions to avoid damage caused by improper usage.

- Keep the instruction manual for future reference. Should this device be given to a third party, then this instruction manual must also be handed over.
- Use this device solely for its intended purpose.
- Only use this appliance indoors.
- Keep the appliance away from all hot surfaces and naked flames.
- Always put the appliance on a level, stable, clean and dry surface. Protect the appliance from extreme heat and cold, dust, direct sunlight, humidity and drops or jets of water.
- Do not immerse the appliance in water or in other liquids.
- Do not open the housing under any circumstances.
- Do not introduce any objects into the interior of the housing.
- Should the device malfunction due to electrostatic discharge or a short power surge, disconnect it from your computer and then reconnect it again.

 
Specification

Connected by	2.4G Wireless (with dongle)
Operating distance	8 meters
Battery type	2*AAA (not included)
Power consumption	3.0V/10mA
Material	Galvanized(front) + ABS(back)
Dimensions	374.98*129.38*17.60mm

Supports:

Windows 7, Windows 8, Windows 10 and later, Android 5.0 or later, and Chrome OS

Indicator Light Description

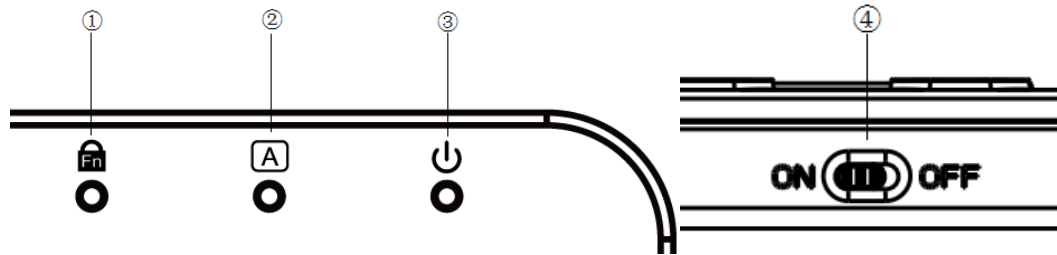

- ① Fn lock indicator (Blue)
- ② Caps lock indicator (Green)
- ③ Power indicator (Green)/Low battery indicator (Green)

Note: This indicator light will be on around 5 seconds, then go off, and will light up once the battery is low power.

- ④ Power Switch (ON/OFF)

Operation Instructions

Connection Steps

1. Assemble with 2pcs AAA batteries.

Caution! Danger of explosion if the batteries are incorrectly replaced.

2. Slide power switch to “ON” side, power indicator turns on for 5 seconds, then turns off.

3. Plug 2.4G receiver into PC USB port, connected successfully.

4. Replace the battery compartment cover again.

If fail to use, please press Fn + Esc, keyboard re-enters pairing mode, then plug receiver into PC USB port.















 
 
 
Notes on Batteries

- > It is recommended to only use Alkaline or Rechargeable batteries.
- > If the device is not to be used for an extended period of time, then the batteries should be removed.
- > Batteries do not belong in household waste! Expired batteries must be disposed of in an environmentally friendly way and according to the applicable legal regulations.
- > Please keep the batteries and the device components away from children at all times. If a battery is swallowed, seek medical attention immediately.
- > Batteries must not be recharged or activated with other means, dismantled, thrown into fire or short-circuited.
- > Remove the batteries prior to disposing of the device.

Language switching guide



1. Samsung Android: Shift + Space
2. Google Android: Ctrl + Space
3. Microsoft Windows: Win + Space



Key function

Multimedia Key	Function in Windows system	Multimedia Key	Function in Windows system
Fn+ 	Fn Lock		Favorite
	Mute		Active windows lists
	Volume down		No short Key function
	Volume up		Activate website
	Last track	Fn+ 	Touchpad On/Off
	Play/Pause	Fn+Home	Line head (in Word document)
	Next track	Fn+End	Line end (in Word document)
	Brightness -	Fn+PgUp	Page up
	Brightness +	Fn+PgDn	Page down
	Menu		Return function for Website
	Home page for Website		

Note:

 Fn Lock Key.





 




1. Press “Fn”+””, the  indication light is on, the function of “Fn” key is locked, separately press F1~F12 to achieve the original function;

2. Press “Fn”+””, the  indication light is off, separately press F1~F12 to achieve above shortcut key function.

3. Fn lock is not workable to , Home, End, PgUp, PgDn 5 functions.

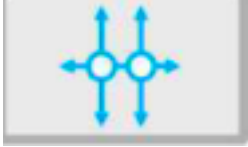Touchpad Function




Using in Windows system

Gesture illustration & description	Function
 one finger click	Mouse left button
 one finger slide	Move the cursor
 one finger hold click quickly and slide	Select and move
 two fingers click	Mouse right button
 two fingers move vertically	Roll vertically
 two fingers move horizontally	Roll horizontally
 two fingers move out from center	Zoom out
 two fingers move in from two sides	Zoom in
 three fingers slide downward simultaneously	Show desktop

Remarks:

The touchpad function may not work because of the different devices system or application compatibility.

Using in Android system

Gesture illustration&description	Gesture function
 One finger moves	Move mouse cursor
 One finger clicks once	Mouse left key clicks
 Two fingers click once	Mouse right key clicks

Power saving mode

If the keyboard is not used for 30 minutes, it switches to power saving mode. Just press any key and wait for 3-5 seconds to reactivate it.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.