

四折页后，最后要对折A6

147mm

2023.9.12 蓝欣

147mm

HAIR STYLING

- When the appliance is ready, you may start hair styling.
- Take a section no more than 3cm wide. Start curling from the mid-lengths to the end of the hair section.
- Hold the curler with **Curling Chamber** facing upward, then place the hair section to the top of the chamber. Hold the end of the hair section.
- Press and hold the **Release button** (either Left or Right). The barrel will start rotating and draw the hair section into the chamber.
- ALWAYS** ensure all the section of hair sits inside the curl chamber and there should be no stray hair.
- Beep sound will be heard when heat time has reached.
- Release the **Rotation button** and remove the curler slowly to reveal the curled hair.



- Allow the curl to cool before continuing styling.
- Repeat above steps on all desired sections until you have the curls you would like.
- Press and hold the **ON/OFF button** for 2 seconds to turn off the unit.
- If you forget to turn it off, the curler will shut off automatically after 15 minutes when left in idle.
- CAUTION:** Allow to cool before putting it down or storing away.

IMPORTANT! Do not leave the Auto Curler unattended when in use.
IMPORTANT! The appliance may provide different results depending on the hair type. Therefore, we recommend doing a trial on a hidden area of your hair before first use. This Auto Curler is not recommended for use on damaged or bleached hair.

CLEANING AND MAINTENANCE

- ATTENTION!** Turn off the appliance before cleaning.
- ATTENTION!** Do not use any alcohol, acetone, gasoline, abrasive cleaning agents, etc. to clean the plastic components. Do not use hard brushes or metal objects for cleaning.
- Risk of burning!** Do not attempt to clean the appliance while it is still hot.
- Wipe the appliance with a dry cloth.
- Never submerge the appliance in water or let water run over the heating plates or the appliance.
- The heating barrel can be cleaned with a slightly damp cloth and a little detergent if necessary. Dry thoroughly after cleaning.

STORAGE

- Store the appliance in a cool, dry location, away from children and pets.
- If the appliance is not used for an extended period, store it preferably in its original packaging.
- After use, do not wrap the cord around the appliance as in time this may cause the cord to fracture. Cut cord loosely by the side of the appliance in storage.

DISPOSAL

If the auto curler is to be disposed the batteries should be removed from the appliance before it is scrapped. The auto curler must be disconnected from the charger when removing the battery. The battery should be disposed safely. Used batteries should be taken to a recycling facility and not disposed with normal household waste.

IMPORTANT: Always fully discharge the batteries before removal and ensure the charger is disconnected from mains power.

TECHNICAL DATA

Model no.	BY-222
Working time	Up to 40 minutes
Charging time	Approx. 2-4hr
Input	5V d.c. 2A
Battery type	Rechargeable li-ion battery, 4000mAh, 3.65V x 1 cell

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability depending) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 190 Springvale Road, Melbourne Vic 3107 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kenald Street, Williams Landing, Vic. 3007 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

anko

Auto Curler

INSTRUCTION MANUAL



Model No.: BY-222

210mm

Please read this instruction manual before using your auto curler and keep it in a safe place for future reference. If you pass the appliance on anyone else, please include this manual.

INTRODUCTION

Use this appliance to curl human hair only. Do not use this appliance on artificial hair or animals.

IMPORTANT! The appliance may have different results depending on the hair type. Therefore, we recommend to do a trial at a hidden spot before first use. The auto curler is not recommended for damaged or bleached hair.

SAFETY PRECAUTIONS

- Carefully read all instructions before operation and retain for future reference.
 - Do not place near the edge of a bench or table during operation.
 - Ensure the surface is dry, level, clean and free of liquid and other substances.
 - Always place the appliance on a heat resistant, stable flat surface.
 - Do not leave the Auto Curler unattended when in use.** Always ensure the appliance is turned off by switching off and unplugging the appliance when not in use, if left unattended and before cleaning and storing.
 - Always keep the appliance clean.
 - To protect against electric shock, do not immerse the power cord, plug or appliance in water or any other liquid.
 - This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - Children should be supervised to ensure that they do not play with this appliance.
 - This product is intended for household use only, not designed for commercial industrial purposes. Do not use it outdoors.
 - NEVER grasp the appliance, charging cable or USB plug with wet hands.
 - Do not use or leave the USB charging cable in a position where it can become wet or there is a danger of it falling into a basin or other vessels containing water.
 - Please do not attempt to dismantle the appliance. This appliance has non-removable parts inside.
 - Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- RISK OF FIRE**
- Do not leave the appliance unattended when in use.
 - To avoid a build-up of heat, NEVER cover the appliance. Do not use the appliance under a blanket or in other poorly ventilated locations.
 - Avoid the addition of heat from other sources, e.g., from direct sunlight, heating appliances, other devices, etc.

ELECTRICAL REQUIREMENT


- Check that the voltage on the rating plate of your appliance corresponds with your supplier supply.
- Recharge this appliance with the USB charging cable supplied. If using other charging cable, please use one that can be charged with a charging current of 2A or more.

IMPORTANT!

- Never operate this appliance if it has been dropped or damaged, or if it is not working correctly.
- Always allow the appliance to cool down before storing away in a location where children cannot reach it.


- WARNING:** Do not recharge non-rechargeable batteries.
- WARNING:** Before charging the product, please make sure your hands are dry.
- Danger of suffocation!** Keep all packaging material away from children. Dispose of the packaging materials in an appropriate way. Contact your local authorities about collection points or waste separation.
- Burn Hazard!** The appliance gets very hot during use! Keep appliance out of reach from young children, particularly during use and cool-down. Only touch the handle and switch. Avoid all contact with ears, eyes, face and neck. Never touch the heating temp.
- WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

PARTS

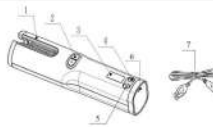

- (1) Curling chamber
- (2) Rotation button (Left & Right)
- (3) LCD display
- (4) ON/OFF & Mode button
- (5) Setting adjustment button
- (6) Charging port
- (7) 2Amp USB charging cable

LCD display

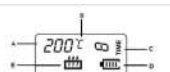

- A. Heat settings**
3 temperature available: 180°C, 180°C and 200°C
- B. Temperature unit**
Allow conversion from °C to °F
- C. Heat time settings**
5 time settings available: 5, 6, 8, 10, 12 and 14 seconds
- D. Battery level indicator**
4 level indication available. If display flashing in level 1, this means the curler has low battery and needs to be recharged.
- E. Heating symbol**
Symbol flashes when heating up; when desired temperature has been reached, the symbol will stop flashing and 2 beeps will sound.

BEFORE FIRST USE

- After unpacking the appliance, check for transport damage and that all the parts mentioned in this manual are present. In the event of damaged or missing parts, return the product back to Kmart.
- Do not discard the original box. It can be used for storage and dispatch to avoid transport damage.
- Clean the appliance as described in Cleaning and Maintenance. For your safety, make particular attention to the safety instructions supplied in the instructions manual when using the product.

CHARGING

- Fully charge the appliance before first use.
 - Please make sure the power is OFF before charging.
 - Battery level indicator flash when charging (Fig. 1); all 4 battery levels display when it is fully charged (Fig. 2).
-
-
- Charging time is approximately 4 hours.
 - When fully charged, auto curler works for approximately 40 minutes.
 - Auto curler 'beeps' when battery is low. Reconnect the unit to a 2Amp USB charger or charging port to recharge.
 - For best performance, always fully charge the curler before use.

Note: The auto curler will not function while charging.

OPERATION

- WARNING!** Power touch the hot curling barrel.
- WARNING!** Always use the handle to hold the curler.
- ATTENTION!** The curling barrel cool down slower than it heats up.
- Place the appliance on a stable, flat, dry, heat resistant surface.
- Press and hold the **ON/OFF button** for 2 seconds to turn on the curler. You will hear a beep sound and LCD display will turn on.
- User can choose their desired heating temperature and heat time.
- Press the **Mode button** until temperature display is flashing, then press the **Setting Adjustment button** to increase the heat time. (6, 8, 10, 12 or 14 seconds)
- Press the **Mode button** until time display is flashing, then press the **Setting Adjustment button** to increase the heat time. (180°C, 180°C and 200°C)
- Press the **Mode button** until time display is flashing, then press the **Setting Adjustment button** to increase the heat time. (5, 6, 8, 10, 12 or 14 seconds)
- The **Heating Symbol** will keep flashing while heating up. 2 beeps and a steady display will be shown when the curler has reached the temperature you have set.
- ATTENTION!** The barrel heats up very fast. It takes approx. 2 minutes to reach max. temperature.