

AGES 5+ YEARS

# REMOTE CONTROL DOG MANUAL



## PACKAGE CONTENTS

- Dog • Remote Control • User Manual

## IMPORTANT SAFETY PRECAUTIONS

### READ ALL INSTRUCTIONS BEFORE USING YOUR DOG.

1. Do not use your dog near water. Clean using a soft cloth or paper towel.
2. Do not place your dog on any wet surfaces.
3. Do not allow children under age five to play with your dog without adult supervision.
4. Do not expose your dog to excessive heat, flames or fire.
5. Always press all buttons or switches carefully.
6. Do not use in extremely dry environments, as this can lead to static discharge during usage.
7. Do not expose your dog to temperatures above 40°C. Keep out of direct sunlight.
8. Do not drop, puncture or expose your dog to excessive trauma.
9. Your dog is not intended for commercial use.

## DOG




## REMOTE CONTROL



## INSERTING BATTERIES


### Dog

1. Unscrew to open battery cover, place the string to the bottom of the battery holder as shown in the figure before installing the battery, then insert 4 X 1.5 V AA batteries.
  2. Replace battery cover.
- Attention: remove batteries after you have finished using your product. Pulling the string inside the battery holder can help you remove the battery more easily.

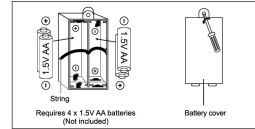

### Remote control

1. Unscrew to open battery cover, insert 2 X 1.5 V AA batteries.
  2. Replace battery cover.
- Attention: remove batteries after you have finished using your product.

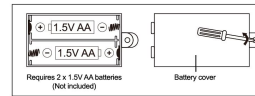

## POWERING ON YOUR DOG

Once you have inserted batteries into your dog and remote control, you can go ahead and power on your dog. To do so, slide the ON/OFF switch located underneath the dog to the ON position. When you do not operate the dog for about 3 minutes, it will make a sound and enter sleep mode. When your dog is in sleep mode, you can restart the ON/OFF switch at the bottom of the dog to resume use. When you have finished playing with your dog, slide the ON/OFF switch to the OFF position.

NOTE: When your dog is running low on power, some of the functions will not be available. Once the batteries are completely depleted, replace the batteries as soon as possible to continue use.


## MOVING YOUR DOG

You can use your remote control to move your dog around in different directions.

Press the forward/backward button to make the dog bark, then walk forward/backward for a distance.

Press the left/right button to make the dog bark, then turn left/right for a distance.

Press the action acceleration button, the dog will enter action acceleration mode, press the forward/backward button, the dog will accelerate forward/backward for a distance. Press the action acceleration button again to return normal mode.

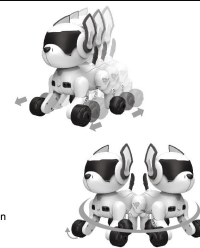

## PLAY

Press the play button, the dog will act playful, and will walk around and bark.

## GUARD

Press the guard button, the dog will act protectively and will make a "woof, woof, woof" sound.

## PATROL MODE


Press the patrol mode button, the dog will walk back and forth.

## PROGRAMMING YOUR DOG

Press the program button and your dog will enter program mode. Once in program mode, you can press any buttons on the controller (except motion sensing button / Infrared sensor button) to create a movement program. The dog can be programmed with up to 30 actions. Press the program button again to have your dog carry out the movement program that you created.

## MOTION SENSING

Press the motion sensing button and your dog will enter motion sensing mode. Once in motion sensing mode, you can full control of direction including forward, backward, left and right turning through your gestures.

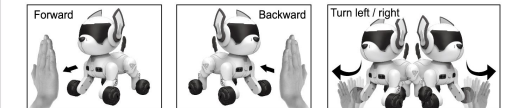

## INFRARED SENSOR FUNCTION

Press the infrared sensor button and your dog will enter infrared sensor mode. (The signal indicator on remote control will light up) Once in infrared sensor mode, aim the infrared signal light on the remote control at the infrared sensor on the dog, then the dog will move in the direction of the remote control.

PRODUCT MAY VARY SLIGHTLY FROM IMAGE SHOWN.  
READ THE INSTRUCTIONS BEFORE OPERATING THE PRODUCT.  
PLEASE KEEP THE PACKAGING AND INSTRUCTION MANUAL FOR FUTURE REFERENCE.

**WARNING:** BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR AN EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

KEYCODE: 43105953

**WARNING: CHOKING HAZARD**  
SMALL PARTS. NOT FOR CHILDREN UNDER 3 YRS.

**WARNING:** FOR SAFETY REASONS, REMOVE ALL BAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

**WARNING:** THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.