anko

Instruction Manual

Digital Travel Scales

Keycode: 43111497

To make sure to use this scale correctly and keep long life of scale, please read this manual carefully.

Features:

Max weight capacity: 50 kg Min weight capacity: 0.05 kg Division value: 0.01kg Units: lb, oz, kg, g Automatic switch off after 30 seconds.

Operation Instructions

Inserting the batteries

Remove the battery compartment cover and insert 2 x 1.5V AAA batteries (included).
Ensure batteries are inserted with correct polarity. Do not mix old and new batteries. Do not mix different types of batteries (alkaline, carbon zinc, rechargeable).
Replace the battery compartment cover again.

2. Replace the battery compartment cover again.



Weighing

1. Hold the scale level, press the **ON/TARE** button to switch on. The LCD screen will read "HELLO", then show 0g, and will be ready to weigh.

2. Hang the object to be measured using the strap. A live measurement will be shown. When the measurement is stable, an audible tone will sound & the reading will remain on the LCD display allowing the object to be put down to easily read the measurement.

Change measurement units

To change the units of measurement, press the **UNIT** button. The device will cycle between g/lb/oz/kg with each button press.

Setting target weight

1. Turn on the scale.

2. Press and hold UNIT Button and ON/TARE button simultaneously, after approx. 4 seconds

the LCD will indicate the max weight "50kg".

Note: target weight must be in kilograms.

- 3. Press **ON/TARE** button to reduce or press **Unit** button to add.
- 4. Once the weight is selected, it will flash six times.
- 5. The LCD will read "hello" and then show 0g, then you can weigh goods.
- 6. Set preferred units "g/lb/oz/kg".

7. Weigh your item, if the measurement exceeds your weight limit, the LED screen will turn red.

To switch off manually

Press and hold the **ON/TARE** button until the display clears off.

Overload indication

If you exceed the maximum weight (50kg) the scale can measure, the display will show "Err".

Low battery indication

When the battery power is low, the display will show "Lo".

To replace batteries

If the scale batteries need to be replaced, lift the compartment of the battery cover on the bottom of the scale and replace the old batteries with $2 \times 1.5V$ Alkaline (AAA) batteries.

WARNINGS:

Insert batteries with the correct polarity and always follow the manufacturer's instructions. Do not mix new and used batteries or alkaline, standard (carbon-zinc), or rechargeable (nickelcadmium) batteries.

Remove batteries if product will be stored for an extended period. Dispose of used batteries responsibly.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.