

**anko** LAYBACK UMBRELLA  
STROLLER



INSTRUCTION MANUAL



**IMPORTANT!  
KEEP FOR FUTURE REFERENCE - READ CAREFULLY**

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP THEM FOR FUTURE REFERENCE. THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.

**Images in the manual are for visual purposes only.  
Actual product may vary slightly. The manufacturer reserves the right to change any specification or feature without prior notice.**

Please read these instructions carefully and keep for future reference.  
Your child's safety may be affected if you do not follow these instructions.



## **WARNING: TO AVOID INJURY OR DEATH**

- FOLLOW THE MANUFACTURER'S INSTRUCTIONS AT ALL TIMES.
  - ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.
  - SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
  - PUT ON ALL THE BRAKES WHENEVER YOU PARK THE STROLLER.
  - DO NOT LEAVE CHILDREN UNATTENDED.
  - DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
  - MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER, OTHERWISE THEY MAY BE INJURED.
- 
- Please ensure that the safety harness is adjusted and used at all times.
  - A harness can form loops that may be a strangulation hazard. Never leave harness straps connected when not fitted to a child in the stroller.
  - Check the stroller is fully erected and all safety locks are engaged before placing a child in the stroller, otherwise they may be injured.
  - Do not attempt to carry the stroller with your child in it.
  - The weight of the children using this stroller should not exceed 15kg.
  - The stroller is not suitable for running or skating.
  - Check the storage latch is engaged before you lift and carry the stroller.
  - Do not allow children to stand on the product.
  - Do not use the stroller near an open fire, barbecue, or exposed flame.
  - Use only those accessories which are supplied by the manufacturer, and approved for use with the stroller.
  - Any goods carried in the basket are not to exceed 2kg.
  - Any goods carried in the pocket are not to exceed 2kg.
  - Avoid placing stroller on parquet, linoleum or carpet floors as wheels may cause stains.
  - The stroller is designed for use on flat and gently sloping surfaces and may be unstable on higher sloping and uneven surfaces. Extra care is needed on steep slopes to prevent the stroller tipping over.
  - Care shall be taken if the stroller is used on stairs or escalators.
  - Do not leave your child exposed to the sun. The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.
  - Take care when unpacking and during assembly.
  - Dispose of all packing materials carefully after assembly.
  - Any additional or replacement parts should only be obtained from the manufacturer or distributor.
  - Never substitute parts.

## **COMPONENTS**




## **TO OPEN THE STROLLER**



## **WARNING:**

- DUE CARE SHOULD BE EXERCISED WHEN FOLDING, UNFOLDING, OR ADJUSTING THE STROLLER TO PREVENT FINGER/BODY PART ENTRAPMENT OR PINCHING.
- KEEP CHILDREN AWAY FROM STROLLER WHEN FOLDING OR UNFOLDING.

1. Release the storage latch.  
**See Figure 1**

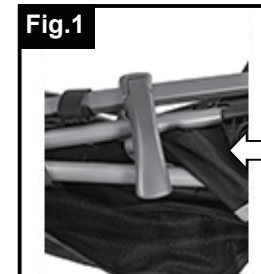


2. Lift the handle upwards away from the front legs. Continue this action until the frame is fully open.  
**See Figure 2**



### TO OPEN THE STROLLER (CONTINUED)

3. Press down the primary lock (a) firmly into the locked position. The secondary lock (b) will be automatically engaged. **See Figure 3**

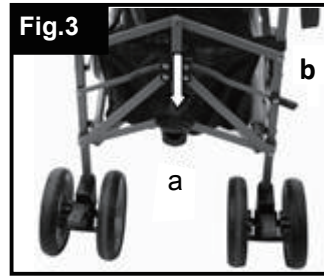

### FRONT WHEELS ASSEMBLY

4. Make sure the front wheels are in the correct direction for assembly.

**Fig. 4a - Correct direction.**

**Fig. 4b - Incorrect direction.**


Push the wheels upwards to the front legs until they click into position with the correct direction. **See Figure 4a**



### BRAKES

5. To apply the brakes, press down firmly on the brake pedals. Ensure that both brakes have fully engaged in each wheel. **See Figure 5A**

To release the brakes, lift the brake pedals until the brakes have fully disengaged from each wheel. **See Figure 5B**

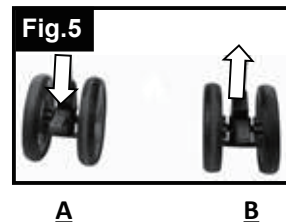

**⚠ WARNING:**  
**ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.**

### CANOPY


6. Attach both plastic clips of the canopy to the stroller frame at the location just below the side grip fastening tabs, then attach the grip fastening tabs together.

**See Figure 6a**




Open the canopy by flipping the canopy forward.

**See Figure 6b**

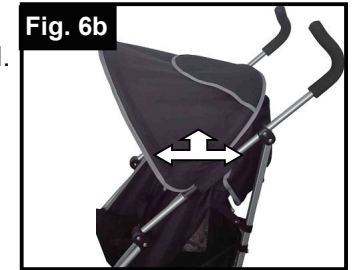

### TO ATTACH THE SEAT AND BASKET

7. Check and ensure the straps at the back of seat and basket are attached to the back frame of stroller by press studs. **See Figure 7**

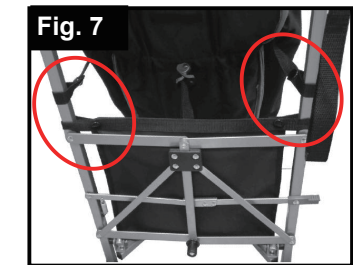

### TO ADJUST THE BACKREST

8. This stroller has an adjustable backrest.

- Release the string at the back of backrest to recline the seating position.

**See Figure 8**



- Tighten the string and lift the backrest to select a more upright seating position.



**CAUTION: Do not adjust the backrest while your child is in the stroller.**

## SAFETY HARNESS

9. To secure your child in the harness, push the shoulder strap buckle prongs into the waistband buckle housing. Push the buckle prongs (A)+(B) into the buckle housing until they snap into position. Adjust slider (C) to ensure a snug fit for your child. Repeat for the other side and also for the shoulder straps. After making adjustments to the seat, always readjust the harness. See Figure 9

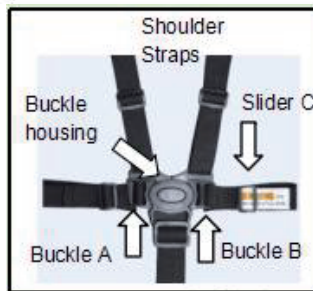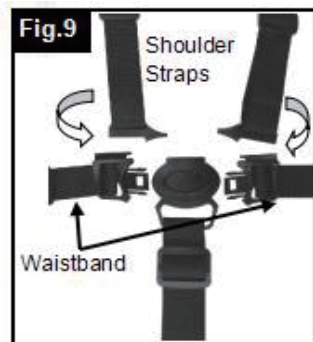

**CAUTION: Always adjust the harness when changing the seating position of the child.**

### **WARNING:**

- USE THIS HARNESS AT ALL TIMES.
- HARNESS CAN FORM LOOPS WHICH MAY POSE A STRANGULATION HAZARD. NEVER LEAVE THE HARNESS CONNECTED WHEN NOT FITTED TO A CHILD IN THE STROLLER.

## TETHER STRAP

10. A wrist tether strap is provided near the handle grip. Slide your hand through the tether strap loop whenever you use the stroller. Only remove your hand from the tether strap loop when the brakes have been applied to the stroller wheels. See Figure 10



### **WARNING:**

USE THE TETHER STRAP TO STOP THE STROLLER ROLLING AWAY.

## TO FOLD THE STROLLER

### NOTE - Check the following before folding the stroller



- The backrest is in its full upright position.
- The canopy is retracted.
- All brakes have been applied.
- All accessories have been removed.

11. Lift the primary lock (a) upwards and then press down the secondary lock (b). See Figure 11

Push the handle forward to fold the stroller. Continue this action until the lock is engaged.

### **WARNING:**

- DUE CARE SHOULD BE EXERCISED WHEN FOLDING, UNFOLDING, OR ADJUSTING THE STROLLER TO PREVENT FINGER/BODY PART ENTRAPMENT OR PINCHING.
- KEEP CHILDREN AWAY FROM STROLLER WHEN FOLDING OR UNFOLDING.

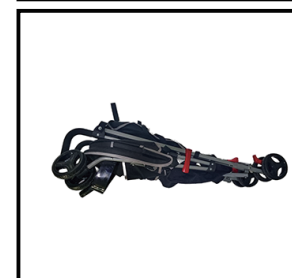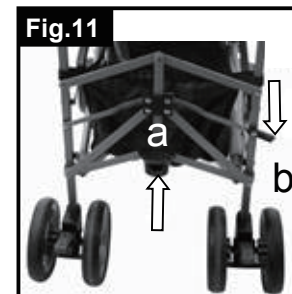

## **CARE AND MAINTENANCE**

- Inspect the product before assembly and periodically during use. Never use this product if there are any loose or missing fasteners, joints or broken parts.
- Plastic and metal parts: Wipe with a damp cloth.
- Removable and non-removable fabric: Wipe clean with a damp cloth. Do not bleach. Do not iron. Do not dry clean ☒.
- Do not use abrasive pads, bleach or strong household cleaners.
- Dry in shade thoroughly before use and avoid direct heat and sunlight.
- Dry thoroughly before storing.
- Always store in a clean and dry place.
- Occasionally clean and lubricate wheels and axles with light lubricating oil.

**KEYCODE: 43-139-781**

**MADE IN CHINA**

## **©KMART AUSTRALIA LIMITED**

FOR AU / NZ: IMPORTED FOR KMART STORES IN AUSTRALIA AND NEW ZEALAND.

KMART AUSTRALIA – 690 SPRINGVALE ROAD, MULGRAVE, VIC 3170 AUSTRALIA.

KMART NEW ZEALAND – REGIONAL OFFICE C/O KMART PAPATOETOE STORE,  
HUNTERS PLAZA, GREAT SOUTH ROAD, PAPATOETOE, AUCKLAND, NEW ZEALAND.