

FULL SEASON UPRIGHT STROLLER

INSTRUCTION MANUAL

6+
months



The photos and illustrations shown in this instruction manual are generic.
The manufacturer reserves the right to change any specification or feature without prior notice.

IMPORTANT: KEEP FOR FUTURE REFERENCE. READ CAREFULLY.

Please read these instructions carefully and keep for future reference. Your child's safety may be affected if you do not follow these instructions.



WARNING: TO AVOID INJURY OR DEATH

- FOLLOW THE MANUFACTURER'S INSTRUCTIONS AT ALL TIMES.
- ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.
- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- APPLY ALL THE BRAKES WHENEVER YOU PARK THE STROLLER.
- DO NOT LEAVE CHILDREN UNATTENDED.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
- **MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS
IF YOU ADJUST THE STROLLER, OTHERWISE THEY MAY BE INJURED.**
- NOT RECOMMENDED FOR A CHILD UNDER 6 MONTHS OLD.
- DO NOT ATTEMPT TO CARRY THE STROLLER WITH YOUR CHILD IN IT.
- CHECK THE STORAGE LATCH IS ENGAGED BEFORE YOU LIFT AND CARRY THE STROLLER.
- A harness can form loops that may be a strangulation hazard. Never leave harness straps connected when not fitted to a child in the stroller.
- Check the stroller is fully erected and all safety locks are engaged before placing a child in the stroller, otherwise they may be injured.
- Please ensure that the safety harness is adjusted and used at all times.
- The weight of the child using this stroller should not exceed 15kg.
- The stroller is not suitable for running or skating.
- Do not allow children to stand on the product.
- Do not use the stroller near an open fire, barbecue, or exposed flame.
- Use only those accessories which are supplied by the manufacturer, and approved for use with the stroller.
- Goods carried in the basket are not to exceed 2kg.
- Avoid placing stroller on parquet, linoleum or carpet floors as wheels may cause stains.
- The stroller is designed for use on flat and gently sloping surfaces and may be unstable on higher sloping and uneven surfaces. Extra care is needed on steep slopes to prevent the stroller tipping over.
- Care shall be taken if the stroller is used on stairs or escalators.
- Do not leave your child exposed to the sun. The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.
- Take care when unpacking and during assembly.
- Dispose of all packing materials carefully after assembly.
- Any additional or replacement parts should only be obtained from the manufacturer or distributor.
- Never substitute parts.

PARTS LIST



Stroller



Cup Holder



Canopy


UNFOLDING

Unpack all contents and check that all the parts are present. Refer to the parts list. Ensure that all packing materials have been removed from the product before assembly.


Remove all cardboard inserts and plastic ties used to protect the product during shipment.

WARNING:


- DUE CARE SHOULD BE EXERCISED WHEN FOLDING, UNFOLDING, OR ADJUSTING THE STROLLER TO PREVENT FINGER/BODY PART ENTRAPMENT OR PINCHING.
- KEEP CHILDREN AWAY FROM STROLLER WHEN FOLDING OR UNFOLDING.
- ENSURE THE FRAME LOCK IS FULLY ENGAGED BEFORE PLACING CHILD IN THE STROLLER.

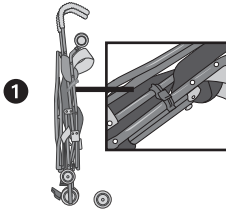

- 1** Release clip on side of stroller.

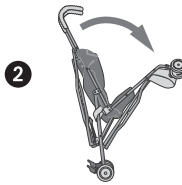


- 2** Push front of stroller downward.

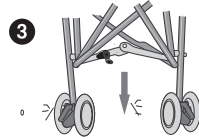

- 3** To lock stroller, press down folding bar located at the rear of stroller.

Cup Holder

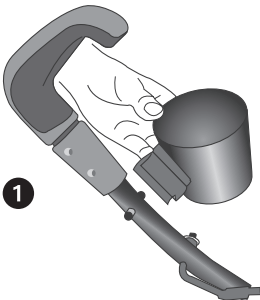

1

⚠ WARNING

To prevent the stroller from unbalancing or tipping, do not place more than a weight of 450g in this cup holder. Do not place hot liquids in this cup holder. Hot liquids can burn your child.


- 1** Attach cup holder to left handle by lining hole over pin and snap into place.

Canopy

WARNING

To avoid head entrapment, always fasten the canopy to the seat backrest using the snaps and grip fasteners.

1

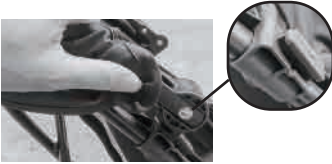

- 1 To attach canopy, slide canopy clips to the fixations above the screws on each side.

2



- 2 To attach rear hood of canopy, wrap canopy straps around stroller frame and snap to rear of backrest and secure using the grip fasteners.

3



- 3 To adjust canopy, push the canopy forward or backward to the desired position.

4




- 4 To maximize canopy coverage, gently fully extend the canopy tier to help block sun or wind.

5



- 5 When not in use, the fully extended canopy section tucks back under the main canopy.

Brakes


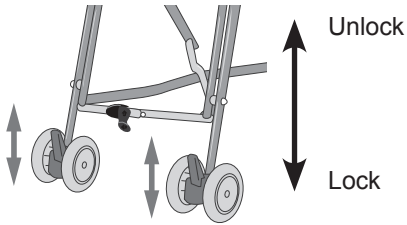


- 1 Push both levers down to lock.
- 2 Pull both levers up to unlock.

WARNING:

- ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.
- ENSURE THE BRAKES ARE ENGAGED DURING THE LOADING AND UNLOADING OF CHILD.

Harness

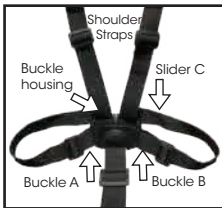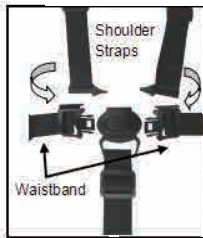

- 1 Apply brakes to keep stroller from rolling.
- 2 Slide the shoulder strap buckle prongs into the waistband buckle housing.
- 3 Push the buckle prongs (A)+(B) into the buckle housing until they engage securely into place.
- 4 Adjust slider (C) on each side of the harness to ensure a snug fit for your child.
- 5 The stroller has 2 shoulder height positions. In order to adjust the shoulder height, undo the harness and remove the shoulder pads. Remove the harness strap from the webbing holders. Redo the harness in the desired position. CAUTION: Always adjust the harness when changing the seating position of the child.



WARNING:

- USE THIS HARNESS AT ALL TIMES.
- HARNESS CAN FORM LOOPS WHICH MAY POSE A STRANGULATION HAZARD. NEVER LEAVE THE HARNESS CONNECTED WHEN NOT FITTED TO A CHILD IN THE STROLLER.

TETHER STRAP



A wrist tether strap is located near the handle grip. Slide your hand through the tether strap loop at all times. Only remove your hand from the tether strap loop when the brakes have been applied and the stroller is stationary.




WARNING:

USE THE TETHER STRAP TO STOP THE STROLLER ROLLING AWAY.

All-Weather Seat Pad


To keep child cool during hot weather, roll up seat pad exposing a mesh back for increased air flow, creating a head rest. During cold weather, roll down the seat pad for added warmth.

1

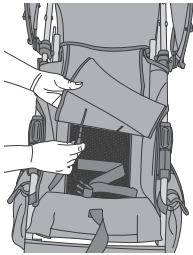

1 Unthread buckles from seat pad as shown.


2

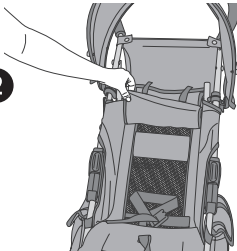

2 Roll up seat pad and fasten using the grip fasteners at top of seat.


Folding

1

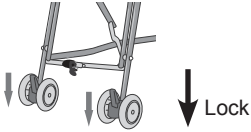

1 BEFORE FOLDING: Lock brakes.

 2



2 Close canopy.

3




3 Using your foot, push brake lever sideways and lift up hinge.

4



4 Push handles forward to fold the stroller.

5

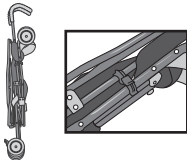

5 Engage the storage latch at side of stroller frame.

CARE AND MAINTENANCE

- Inspect the product before assembly and periodically during use. Never use this product if there are any loose or missing fasteners, joints or broken parts.
- Plastic and metal parts: Wipe with a damp cloth.
- Removable and non-removable fabric: Wipe clean with a damp cloth. Do not bleach. Do not iron. Do not dry clean ☒ .
- Do not use abrasive pads, bleach or strong household cleaners.
- Dry in shade thoroughly before re-use and storage.
Avoid direct heat and sunlight.
- Always store in a clean and dry place.
- Occasionally clean and lubricate wheels and axles with light lubricating oil.

KEYCODE: 43140831

**KMART CUSTOMER SERVICE
AU: 1800 124 125 NZ: 0800 945 995**

MADE IN CHINA

© KMART AUSTRALIA LIMITED

FOR AU / NZ: IMPORTED FOR KMART STORES IN AUSTRALIA AND NEW ZEALAND.

KMART AUSTRALIA - 690 SPRINGVALE ROAD, MULGRAVE, VIC 3170 AUSTRALIA.

KMART NEW ZEALAND - REGIONAL OFFICE C/O KMART PAPATOETOE STORE,
HUNTERS PLAZA, GREAT SOUTH ROAD, PAPATOETOE, AUCKLAND, NEW ZEALAND.