

4 IN 1 CANOPY TRIKE ASSEMBLY INSTRUCTIONS

Keycode:43144792



Screw, washer,
hex wrench



1. Install the front fender and insert the front fork to the main frame, silver button is backward



2. Install the front basket and handlebar



3. Insert the rear wheels, then tighten the screw under the rear frame



4. Pull the red ring down to fold and unfold the pedal



5. Install the rear basket



6. Use the hex wrench to assemble the seat with the screw and washer



7. Install the canopy by inserting the buckle, adjust the angle of canopy by pulling out both buckles



8. Install the push bar, then assemble the bottle cage, press the bottom button to disassembly the push bar

4 IN 1 MODE



FUNCTION INTRODUCTION



Vertical: Fixed
Horizontal: Folded



Push up to
fold handlebar



Folded



Adjust the
push bar



Rotate seat

WARNING

1. This trike is only suitable for children aged 12 months – 5 years old.
2. An adult must read these instructions carefully before use, otherwise it might compromise the child's safety.
3. Please retain this instruction sheet permanently for future reference.
4. This trike should not be used near fire, heat, or water.
5. Assembly should be done by an adult.
6. Only loading one child at a time.
7. It's prohibited to use the spare parts not provided by the manufacture.
8. Children are not allowed to climb out of the guardrail or stand on the seat.
9. Disposed the plastic bag to avoid suffocation after open the carton.
10. Adult supervision is required when using this trike.
11. Not to be used on the sloped driveways, inclines and public highways, uneven surfaces ground.
12. Maximum weight limit is 25kg.

MAINTENANCE

1. Inspect all fasteners prior to each use.
2. Do not ride the trike in any extreme weather conditions.
3. Always check your trike for loose screws, ageing parts, broken materials and stitching, replace and repair when needed.
4. Keep the trike clean, and it is strictly forbidden to place sharp objects or blades on the trike to avoid injury to children.
5. Use neutral detergent when washing the textile with the water of 10°C-40°C, to avoid the fabric damaged.
6. Clean the trike with dry towel.
7. Assemble or unassemble this trike should follow this instruction sheet strictly to avoid damage.

Made in China