

anko

**Mini Chopper
MC365K-SA
User Manual**



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**


IMPORTANT SAFETY INSTRUCTIONS

1. Read all instructions before using.
2. Do not open until blades have come to a complete stop.
3. The motor unit cannot be used for other than intended use.
4. Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
5. Do not let the cord hang over the edge of a table or counter or touch a hot surface.
6. Do not place on or near a hot gas or electric burner or in a heated oven.
7. Keep hands and utensils away from the cutting blade while chopping food to reduce the risk of severe injury to persons or damage to the food chopper. A scraper may be used but only when the food chopper is not running.
8. To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs, or motor unit in water or other liquids.
9. Close supervision is necessary when any appliance is used by or near children.
10. This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliances by a person responsible for their safety.
11. Children should be supervised to ensure that they do not play with the appliance.
12. For electrical safety, if the supply cord is damaged, it must be replaced by qualified electrical person in order to avoid a hazard or the product must be disposed.
13. The appliance is not a toy. Do not let the children play with it.
14. Avoid contacting moving parts.
15. The use of attachments not recommended or sold by manufacturer may cause fire, electric shock or injury.
16. Care must be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
17. Do not use the appliance for other than intended use.
18. Do not attempt to defeat the lid interlock mechanism.
19. Do not use outdoors.
20. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments,

- Farmhouses,
 - By clients in hotels, motels and other residential type environments,
 - Bed and breakfast type environments.
21. Switch OFF the appliance and disconnect from mains power before approaching parts that move in use.
 22. **IMPORTANT! Use the chopper for dry ingredients only. Do not use liquids in the chopper.**
 23. **IMPORTANT! Never put the Motor Unit in water or other liquid or let the power switch, cord or plug get wet, as you could get an electric shock.**
 24. **IMPORTANT! Never add ingredients to the chopper bowl while the appliance is operating.**
 25. Do not operate the chopper with wet hands. Always ensure your hands are dry before connecting the appliance to mains power.
 26. Always ensure that the chopper blade is thoroughly sterilized by washing it with hot water.
 27. Disconnect from mains power outlet when it is not in use, before moving the appliance or when adding food for chopping.
 28. Blades are sharp. Handle carefully.
 29. **WARNING: Risk of injuries if you don't use this appliance correctly.**
 30. **WARNING: Do not remove the motor unit until the blade has come to a complete stop.**
 31. Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.
 32. For operating time, please refer to Chopping Guide.
 33. For cleaning, please refer to "CLEANING AND MAINTENANCE" section.

**SAVE THESE INSTRUCTION
HOUSEHOLD USE ONLY**

KNOW YOUR MINI CHOPPER

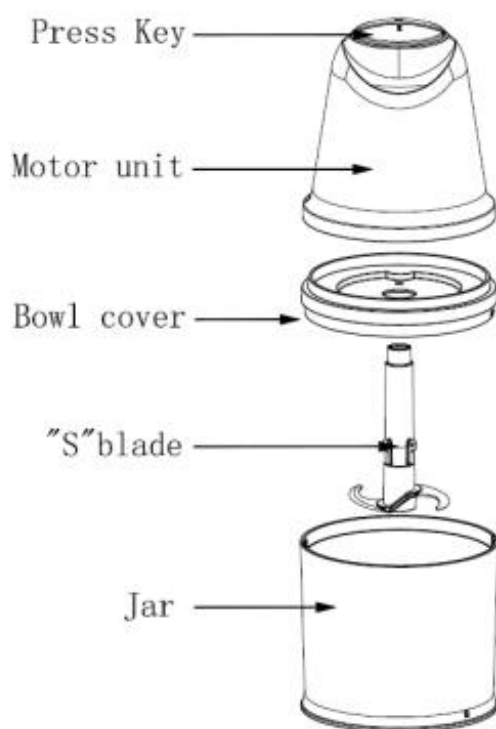


BEFORE THE FIRST USE

Before using this appliance for the first time, wash the bowl and blade assembly in soapy water and dry thoroughly. All parts are dishwasher safe excluding the motor unit. Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water.

HOW TO CHOP OR MINCE FOOD

1. Place the jar on a counter or other flat surface, then slide the blade down over the shaft in the jar. Be careful not to touch the blade as it is extremely sharp.
2. Place the food into the jar. Refer to the chopping guide below for desired food.
3. Place the bowl cover onto the jar, then position the motor unit onto the jar. The embossment on the bowl cover is linked up to the hole on the motor unit, then line up the motor unit locking tabs to the locking slots on the jar and ensure the motor unit locks in place.

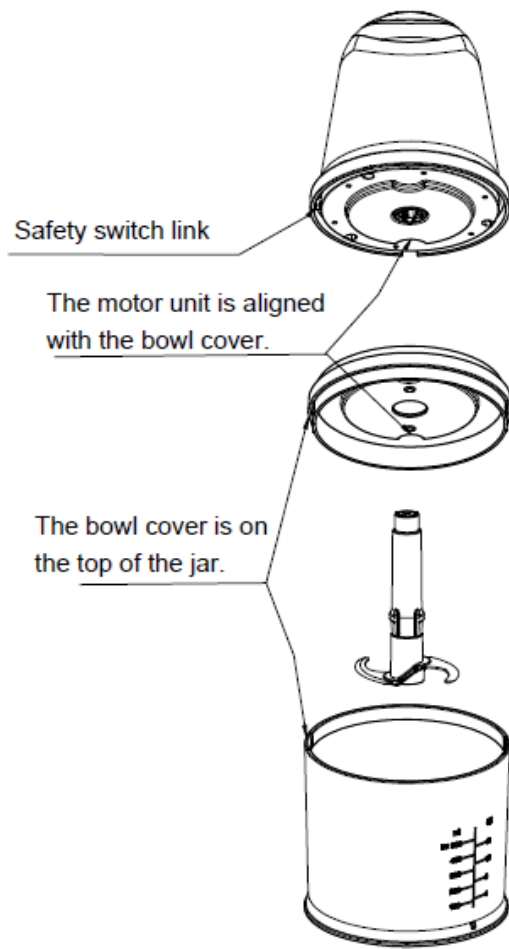

4. Press and hold the press key to turn on the appliance. Marking “I” is for the lower speed, “II” is for higher speed.
5. Be sure the blade stops rotating completely before removing the bowl cover. Unplug the unit. Remove the motor unit and grasp the plastic blade hub. Carefully pull the blade assembly out. Remove the jar and empty the processed food. Do not use the jar for storing food. Use a separate container for storing food.

IMPORTANT! To prevent damage to the electric motor, the maximum operating time is 10 seconds. Allow it to rest for at least 2 minutes before using it again. After 5 cycles of operation, allow the unit to cool down to room temperature for approx. 30 minutes before using it again.

CHOPPING GUIDE

IMPORTANT! Use the chopper for dry ingredients only. Do not use liquids in the chopper.

FOOD TYPE	PREPARATION HINTS
Bread	Cut a piece of bread into small pieces. It is recommended to use speed II to chop. Work for 10 seconds, rest for 2 minutes for one cycle, and perform several cycles of operation until satisfactory chopping is achieved
Fruits and Vegetables (canned, cooked)	Put up to 120g of food in the jar. It is recommended to use speed I to chop. Work for 10 seconds, rest for 2 minutes for one cycle, and perform several cycles of operation until a satisfactory thick slurry effect is achieved
Fresh celery and other leafy plants	Add 60g of thoroughly washed food and let dry, it is recommended to use speed II to chop. Work for 10 seconds, rest for 2 minutes for one cycle, and perform several cycles of operation until satisfactory chopping is achieved
Nuts	Put up to 120g of food in the jar. It is recommended to use speed II to chop. Work for 10 seconds, rest for 2 minutes for one cycle, and perform several cycles of operation until satisfactory chopping is achieved
Cookies	Put up to 120g of food in the jar. It is recommended to use speed II to chop. Work for 10 seconds, rest for 2 minutes for one cycle, and perform several cycles of operation until a satisfactory thick slurry effect is achieved
Fresh beef, 60mm*20mm*20mm size block	Put up to 270g of food in the jar. It is recommended to use speed II to chop. Work for 10 seconds, rest for 2 minutes for one cycle, and perform several cycles of operation until a satisfactory thick slurry effect is achieved

CLEANING AND MAINTENANCE

Always disconnect the appliance from the power outlet before cleaning.

Wash the jar and 'S' blade immediately after use with either with warm, soapy water or in the dishwasher. Wipe off the motor unit with a damp cloth. Do not immerse in water.

NOTE: Do not use chemical, steel, wooden or abrasive cleaners to clean the unit to prevent damage to the gloss surface.

TECHNICAL SPECIFICATION

Voltage: 220-240Va.c. 50-60Hz

Power: 250W

12 MONTH WARRANTY

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer

Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.