anko

12 month warranty

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or pedient.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at kmart, com, au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

WARNING Do not dispose of unit in fire or water. • Never attempt to disassemble and reassemble. • Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. • Check with your local authority for recycle advice. • Keep your device and all accessories out of the reach of children and animals. • Small parts may cause choking or serious injury if swallowed. • Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C).

• Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. • Do not allow your device to get wet—liquids can cause serious damage. • Do not handle your device with wet hands.

Vibrating Facial Massager





Product Specifications

Product Name: Vibrating Facial Massager Model: TB-2142 Material: Natural quartz Rated Voltage: DC 1.5V

Type of Battery: AA 1.5V x 1 (not included)

Instruction

Notes: In order to operate this product correctly, please read the following carefully before use.

- Battery Cap (Knob Switch)

 


①-1 Twist counterclockwise to open the battery cap;

 




1-2 Put in one AA battery;



1 -3 Twist clockwise to lock the cap;



①-4 Operate the device by twisting the cap to the right directions;

②Daily Skincare

This device can be used on a daily basis to massage the face and neck, and help improve the performance of skin care products.

- 2)-1 Apply Moisturising products after cleansing the face.
- ②-2 Turn on the roller, move the scroll wheel in an outward and slightly upward motion for the face and neck (refer to the pics as below).















- ②-3 If a less intense massage is required, turn off and use just as massager.
- ②-4Clean the roller with warm water after use.
- 3 Cleaning & Maintenance
- ③-1 Before cleaning, make sure this product is turned off.
- ③-2 Do not immerse the product in water for cleaning. Wash it with warm water and dry it immediately with a towel or tissue paper.
- ③-3 Do not use any lubricants, cleaners, polishes, solvent or air fresheners on this product.

名称	TB-W2142 说明书				
七只	297*210mm	TOUCHBeauty		审核	GRC
材质	80G书写纸	订单包材			
工艺		订单编号	GRC220030202	日期	2022/03/01
颜色	4C印刷		单位	设计	杨婷
其他	左右对折后上下对折2折148*52MM		毫米	料号	64.W2142.0001