








297x210mm



Studio Easel 161cm

Instruction Manual

Hardware list


A 	Bolts 4 pcs Dia0.6x6.5cm	E 	Wing nuts 3 pcs
B 	Bolts 2 pcs Dia0.5x6cm	F 	Washers 3 pcs Outer dia 1.4cm Inner dia 0.6cm
C 	Bolts 1 pc Dia0.5x7 cm	G 	Allen key 1 pc
D 	Cams 4 pcs		

Components

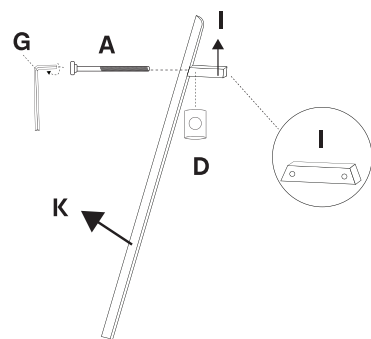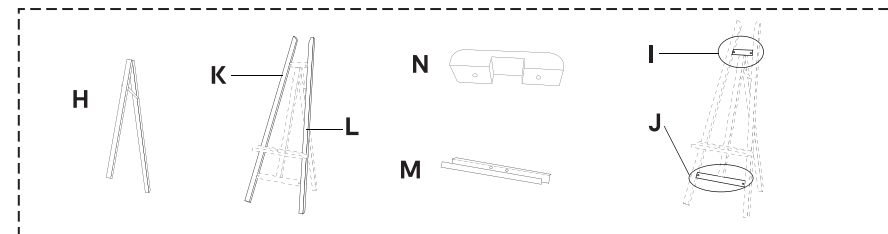


Step1

Assemble part K and I, using bolt A, washer and cam. Do not tighten the bolt at this moment.

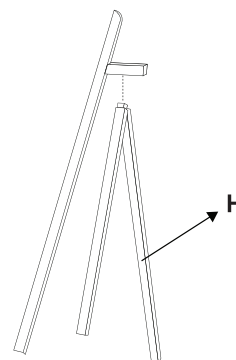


Step2

Fit part H into assembled unit as shown.

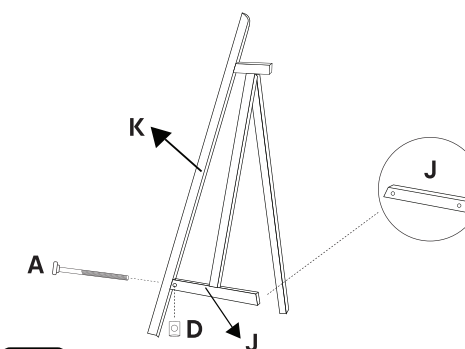


Step3

Fit part J into assembled unit as shown. Secure part K and J, using bolt A, washer and cam. Do not tighten bolt at this moment.

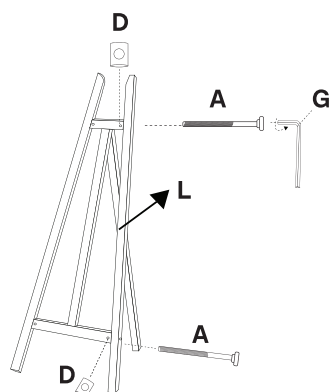


Step4

Fit part L into assembled unit as shown. Secure using bolts A, washers and cams. Now tighten all bolts using allen key.

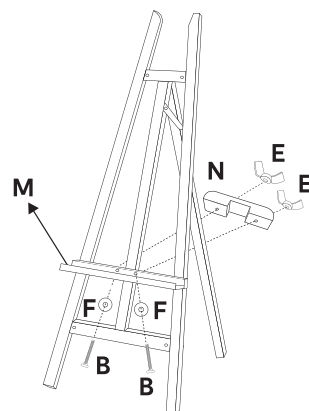


Step5

Attach the canvas support M and N to the assembled unit as shown. Secure using bolts B, washers and wing nuts, but do not over tighten the bolts.

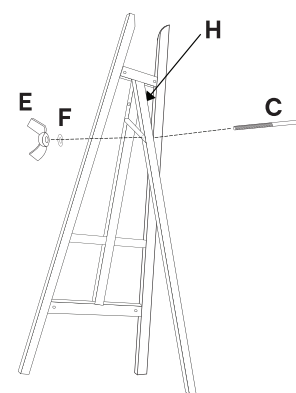

Step5

Secure support H, using bolt C, washer and wing nut, but do not over tighten the bolt. Assembly is now complete.

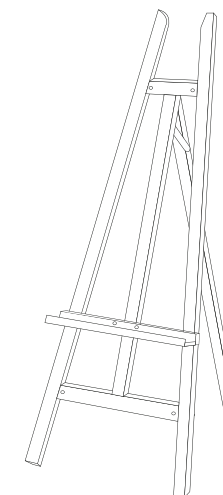

Studio Easel.