

LOW VOLTAGE LET'S PARTY NEON LIGHTS

These instructions are for your safety. Please read through them thoroughly before use and retain for future reference.

Before You Start

- Decide on an appropriate location for your product (see Installation instructions below).
- If you have any doubt about installing this product, consult a qualified electrician.

Installation instructions:

- 1) This light chain is suitable for **INDOOR USE ONLY**.
- 2) The AC adaptor **MUST** be installed **INDOORS** away from weather.
- 3) Do not position or place near heaters of any other direct sources of heat.
- 4) This product is suitable for positioning on surfaces which have normal flammability, e.g. wood, plasterboard, masonry. However this does not include highly flammable surfaces (e.g. polystyrene, textiles).
- 5) Always position cables and extension leads so that they will not be a hazard to the elderly, pets and children.
- 6) **DO NOT** position this light set where it may become covered by other items e.g. curtains, nets or bedding.
- 7) Ensure the unit is positioned so that you have enough cable to reach an indoor mains power socket.

Warning

- The light chain is suitable for **INDOOR USE ONLY**.
- This product is **NOT** designed for permanent or long term use.
- The AC adaptor **MUST** be installed **INDOORS** away from weather.
- The supplied adaptor is suitable for operation of LED Modules only.
- Only operate this light chain with the supplied adaptor, **Model No. JT-DC4.5V3.6W-E4**
- Do not connect this light chain electrically to another light chain.
- Do not connect this light chain to the power supply while it is in the packaging.
- **DO NOT** attempt to replace the non-replaceable bulbs in this light chain.
- Never allow any part of the set to come into contact with a source of heat or flame.
- Care must be taken to avoid damage the cable or fittings.
- If any part of light set or cable is damaged, the light set **MUST** be discarded.
- This product is for use as a decoration only. Not to be used by children as a toy. Keep out of reach of children.
- Do not position this light chain where it will be exposed to extreme wet weather or submerged in water.
- Always switch off this light set or unplug an adaptor if unattended.
- **DO NOT** overload power sockets or extension leads.
- **DO NOT** pierce the cable when securing in place, bend or stand on the light chain, as this will damage the bulbs or wiring.
- Please refer to the packing or product rating label for product class, specifications and rating.

LED Bulbs

This light set is constructed with non-replaceable bulbs. **DO NOT** attempt to replace any of the bulbs in the light set.

Keycode: 43180554

Adaptor Manual

1. Please use the equipments according to the rated voltage and current.

Model No.	Input Rated			Output Rated	
	Voltage	Frequency	Current	Voltage	Power
JT-DC4.5V3.6W-E4	220-240VAC	50-60Hz	0.10A Max	4.5V DC	3.6W

2. Do not open the cover of the equipments.
3. For use with LED lighting equipment.
4. The input and output voltage should be checked before use to ensure correct use.
5. This is the Class II product, only for indoor use.
6. The product is not a toy, keep it where children can not reach.
7. The lamp controlgear does not rely upon the luminaire enclosure for protection against accidental contact with live parts.
8. If applicable:an indication that the controlgear is suitable for operation with LED modules.
9. Do-not-cover classification



The power supply that can be used where normally flammable materials.including building insulation, are or may be present, but cannot be abutted against any material and cannot be covered in normal. Minimum clearance distance from the top and sides of the control gear to normally flammable building element is 75mm; as shown in below picture, A=B=C=Min.75mm.

