



#### ADJUSTABLE SPEED CONTROL

The device has 3 speeds & 3 modes.

#### OPERATION INSTRUCTIONS:

- Insert two AAA batteries according to the battery compartment instructions, make sure the polarity is correct and turn the battery cover clock-wisely back on (batteries are not included).
- Make sure your hands and the appliance are dry when replacing the batteries.

#### HOW TO USE

1. Run massager under warm water and apply your favorite facial cleanser to the silicone pads.
2. Rinse face with warm water.
3. Turn unit ON by pressing the power button . Begin by massaging your chin, and use gentle upward motions, as you slowly move massager along your jawline to your ears and out towards your cheeks. Repeat on other side of face and along forehead and nose.
4. To turn unit OFF, press power button 2 minutes .
5. Wash the brush and place upright to air dry.

#### SPECIFICATION:

- Rate Voltage / Power: 3.0V  $\approx$  3.0W
- Type of Battery: AAA 1.5V x 2 (not included)

#### SAFETY INSTRUCTIONS:

To ensure proper operation of this appliance, please read this instruction manual carefully before using the appliance and retain for future reference.



#### WARNING:

- Do not use this appliance under the following conditions:
  1. When pregnant
  2. Should you have skin allergies
  3. On areas where epilation or plastic surgery has been performed
  4. Immediately stop using if your skin becomes irritated or you become unwell and seek medical assistance
  5. Do not use if you are allergic to silicone
- Do not use the massager for more than 3 minutes at a time.
- Always clean device after use with water and mild soap and rinse clean. Pat dry with lint-free cloth/towel.
- Avoid leaving in direct sunlight. Do not expose to extreme heat or boiling water.
- Do not submerge in water.
- Do not use on eyelids.
- Discontinue use if discomfort or irritation occurs. If you have a skin condition, please consult with dermatologist before using.
- Always switch the appliance off after use.
- Do not use if you are allergic to silicone.
- This appliance is battery-operated. If you do not use the appliance for long time, remove the batteries.
- Do not place the appliance in a hot or humid environment for a prolonged period of time.
- Not suitable for Children.
- Children should be supervised to ensure that they do not play with the appliance.
  - This appliance is for household use only.
- The appliance should not be used by persons with reduced physical, sensory or mental abilities (including children), or persons having insufficient skills or knowledge, without supervision or instruction of a person responsible for their safety.

# anko

## 12 month warranty

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at [kmart.com.au](http://kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

**WARNING** Do not dispose of unit in fire or water. > Never attempt to disassemble and reassemble. > Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. > Check with your local authority for recycling advice. > Keep your device and all accessories out of the reach of children and animals. > Small parts may cause choking or serious injury if swallowed. > Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). > Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. > Do not allow your device to get wet—liquids can cause serious damage to your device. > Do not handle your device with wet hands.

## VIBRATING FACIAL CLEANSER



INSTRUCTION MANUAL