

Assembly Instructions

43228515 OAK LOOK STORAGE UNIT

 



 






 
 

WARNING: DO NOT STAND, SIT OR LEAN ON THIS UNIT. DO NOT USE THIS UNIT AS A STEP LADDER OR AS A CHOPPING SURFACE. ENSURE THIS UNIT IS USED ONLY ON A FLAT SURFACE. DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED. DO NOT PLACE HOT ITEMS SUCH AS COFFEE CUPS DIRECTLY ON THE SURFACE OF THIS FURNITURE ITEM.

CARE INSTRUCTIONS: TO BE ASSEMBLED ON A CLEAN, DRY AND SMOOTH SURFACE. WIPE CLEAN WITH A SOFT DAMP CLOTH. NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS. CHECK AND TIGHTEN ALL PARTS REGULARLY. KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR INDOOR USE ONLY.

 
 
 
 
 
 
 
 
 
 
MAXIMUM SAFE LOAD: 10KGS FOR TOP PANEL, 5KGS FOR EACH SHELF.

1

 
Hardware List

	A	M6x35mm	10pcs		H		1pc
	B	Ø15x9.5mm	10pcs		I		2pcs
	C	Ø6x30mm	16pcs		J		1pc
	D	M4x35mm	7pcs		K	M3x10mm	5pcs
	E		4pcs		L		2pcs
	F	M3.5x10mm	16pcs		M	M4x12mm	2pcs
	G	M2x16mm	12pcs		N	M4x35mm	2pcs



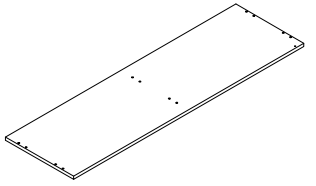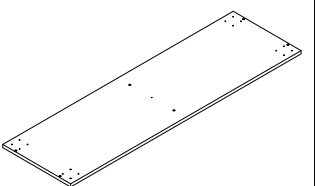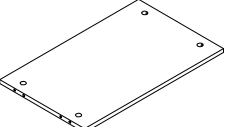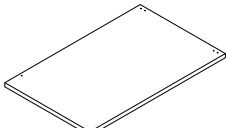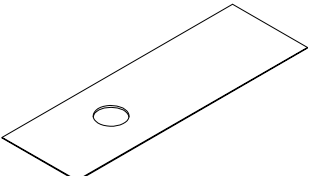

2

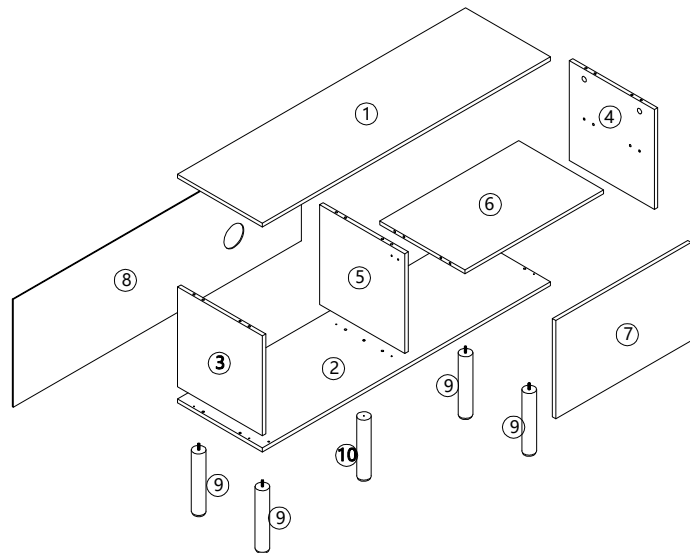 
	1PC		1PC		1PC
	1PC		1PC		1PC
	1PC		1PC		4PCS
	1PC				

3






Step 1:

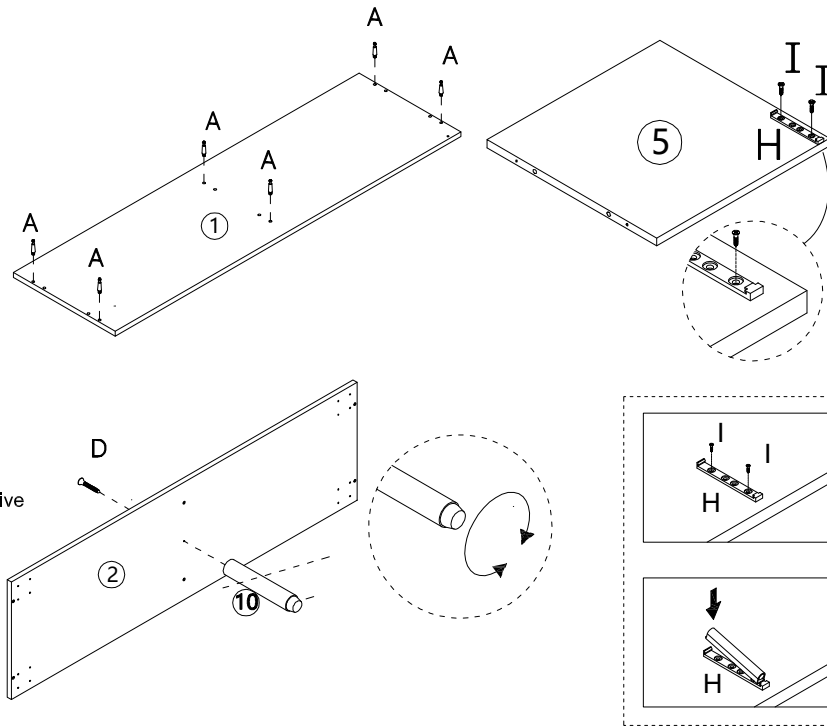 
	A x 6
	D x 1
	H x 1
	I x 2



Tool required
Philips Head Screw Drive
(Not Provided)




Step 3:

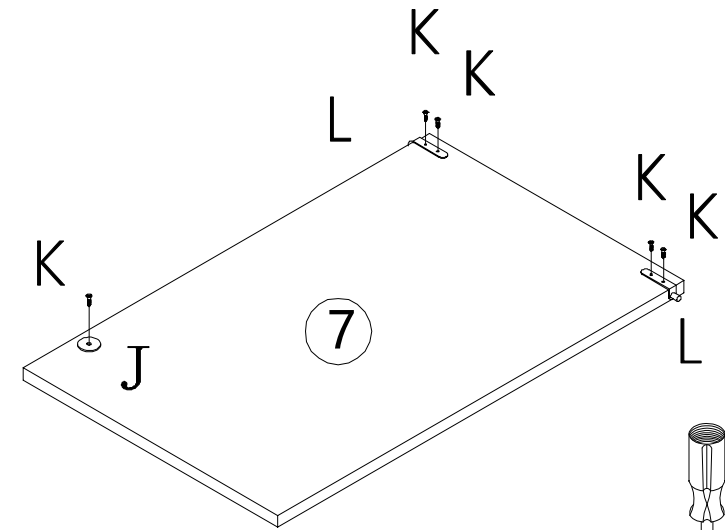 
	J x 1
	K x 5
	L x 2



Tool required
Philips Head Screw Driver
(Not Provided)




Step 2:

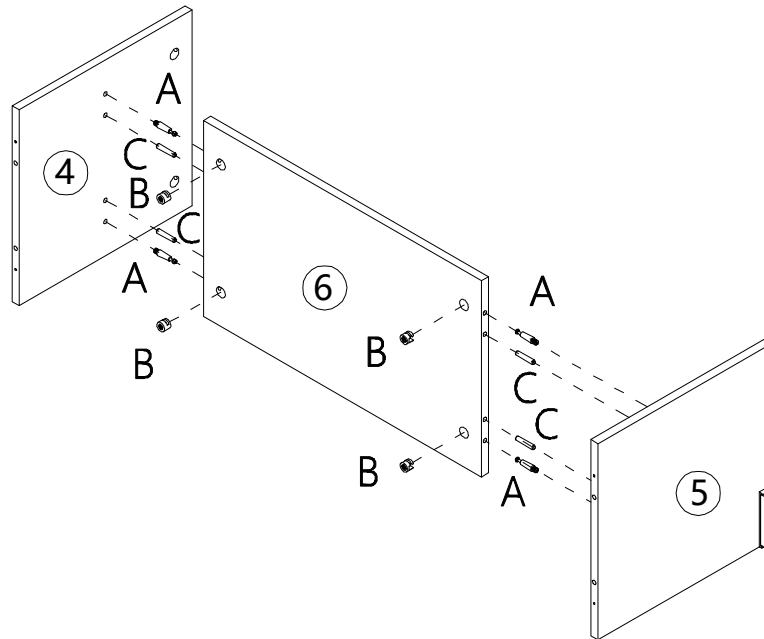 
	A x 4
	B x 4
	C x 4



Tool required
Philips Head Screw Driver
(Not Provided)




Step 4:

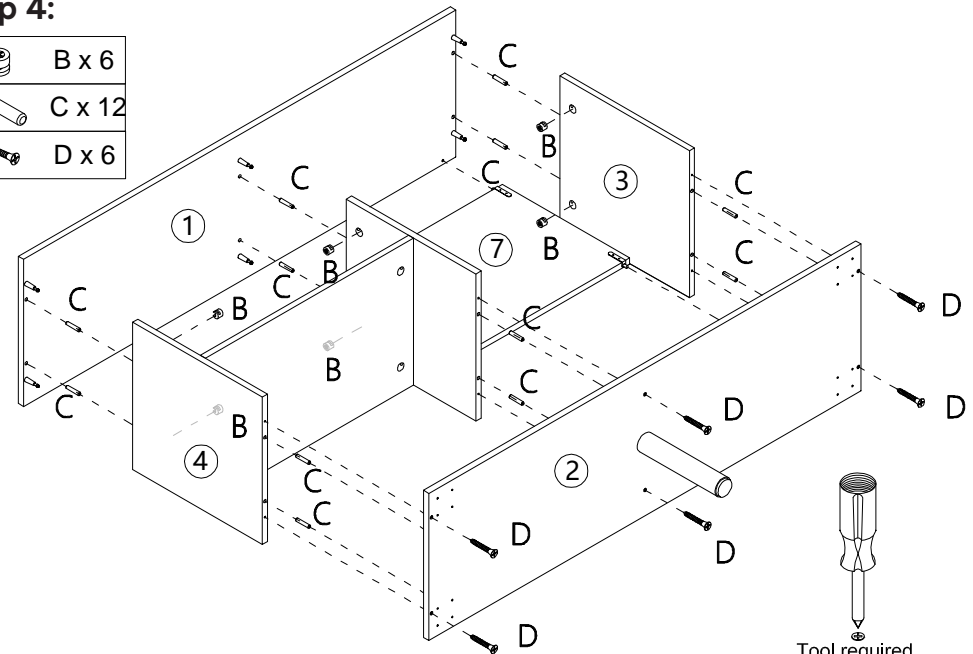 
	B x 6
	C x 12
	D x 6



Tool required
Philips Head Screw Driver
(Not Provided)

 
Step 5:

	E x 12
	F x 4
	G x 16

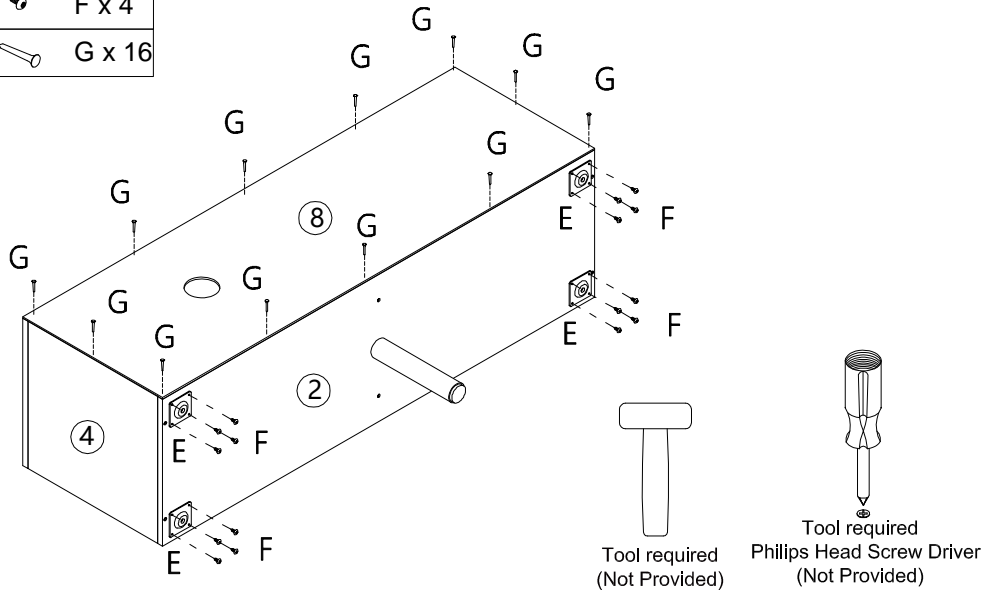

 
Step 7:

	N x 2
---	-------

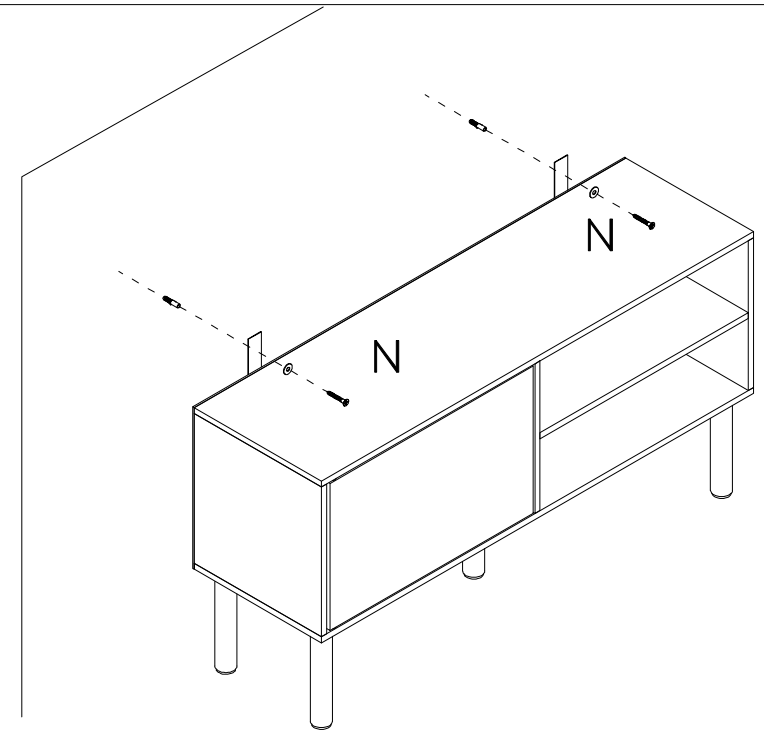

Step 6:

	M x 2
--	-------

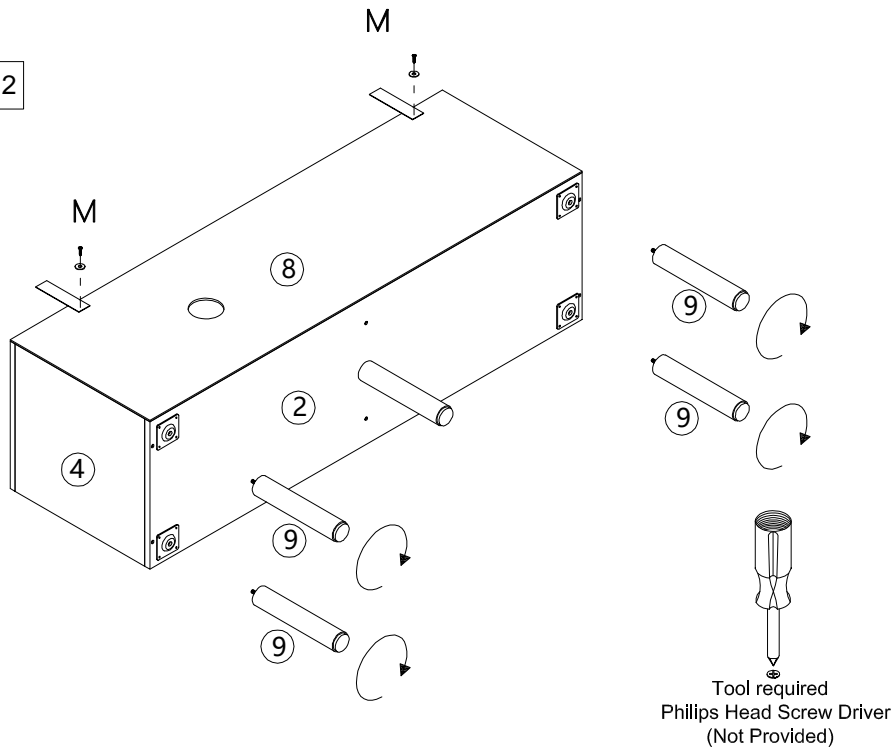

User instructions should include the wording:

- It is strongly recommended that this product is permanently fixed to the wall.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

CAUTION: for your safety when attaching the anchor fixings, please note the following:

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.

