

Assembly Instructions

43228805 FRASER RATTAN BOOKSHELF






 




WARNING: DO NOT STAND, SIT OR LEAN ON THIS UNIT. DO NOT USE THIS UNIT AS A STEP LADDER OR AS A CHOPPING SURFACE. KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. USE ONLY ON A FLAT SURFACE. DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.

CARE INSTRUCTIONS: TO BE ASSEMBLED ON A CLEAN, DRY AND SMOOTH SURFACE. WIPE CLEAN WITH A SOFT DAMP CLOTH. NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS. CHECK AND TIGHTEN ALL PARTS REGULARLY. KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR INDOOR AND DOMESTIC USE ONLY.







MAXIMUM SAFE LOAD: 10KGS FOR TOP PANEL, 5KGS FOR EACH SHELF.

①


Hardware List

	A	M6x60mm	8pcs		F		8pcs
	B	Ø10x9.5mm	8pcs		G		4pcs
	C	Ø6x30mm	24pcs		H	M4x12mm	2pcs
	D	M4x35mm	24pcs		I	M4x35mm	2pcs
	E	M2x16mm	34pcs		J		1pc

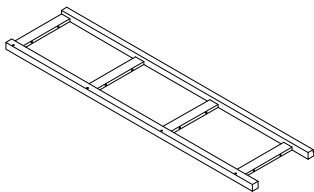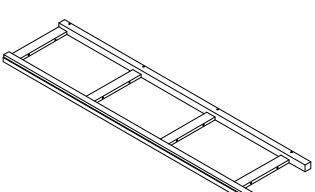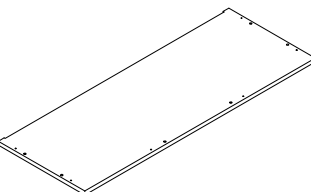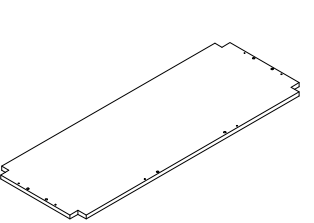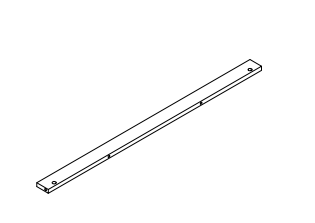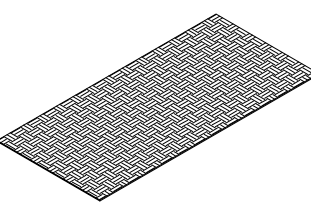      ②

		
① 1PC	② 1PC	③ 1PC
		
④ 3PCS	⑤ 4PCS	⑥ 3PCS

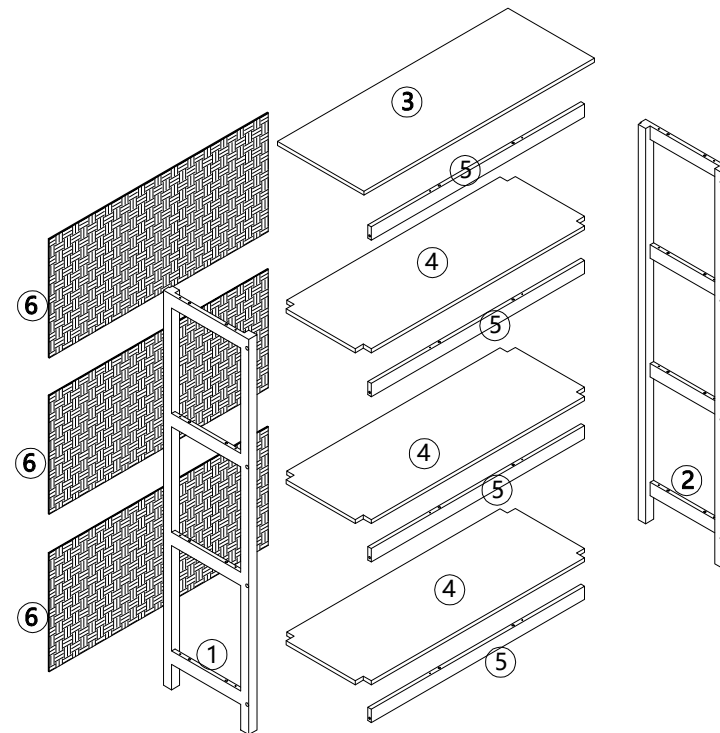 
③



Do not tighten the screws fully during assembly.
Fully tighten screws after the final assembly steps


STEP 1:

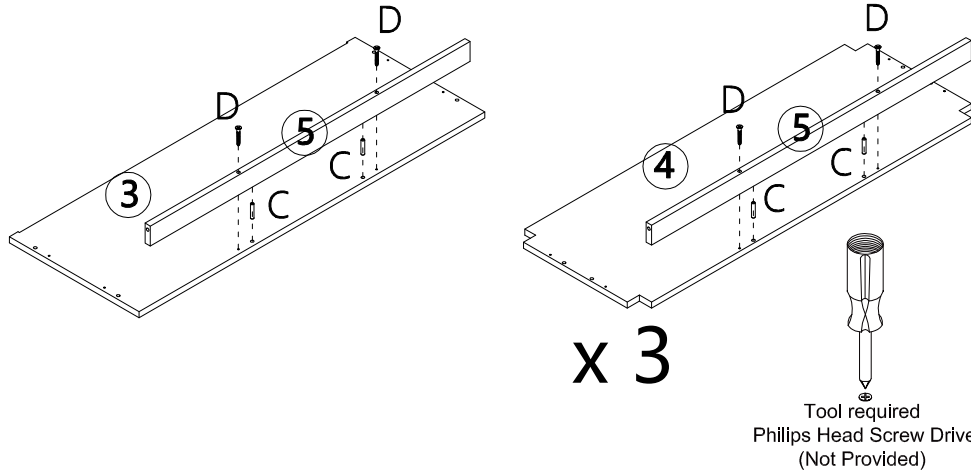 - C x8
- D x8




STEP 2:

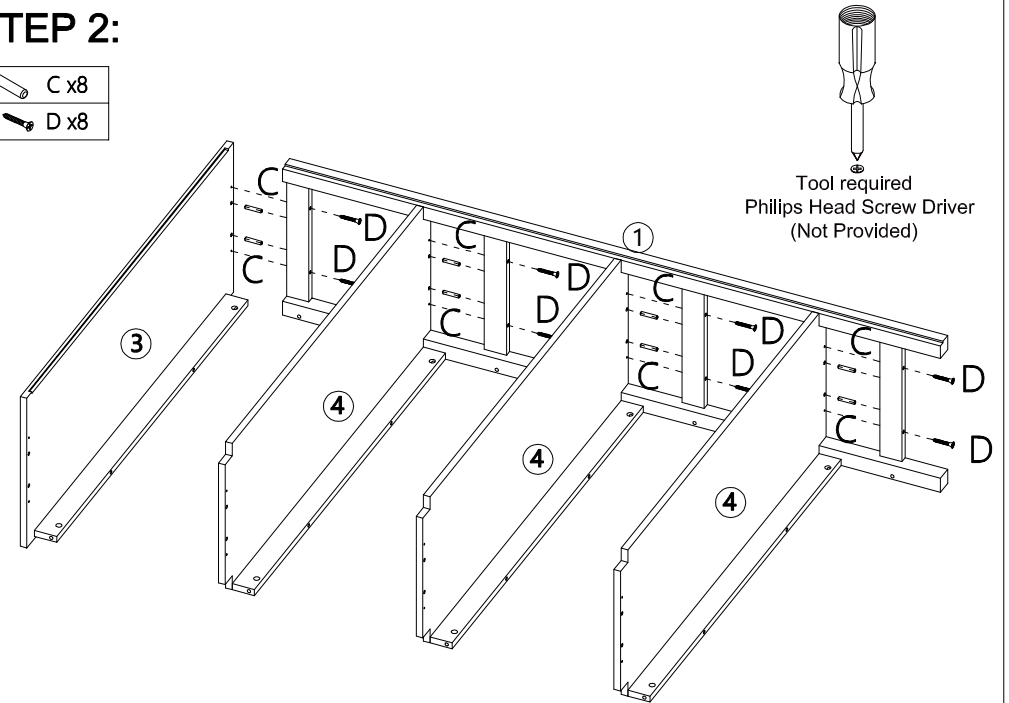 - C x8
- D x8




STEP 3:

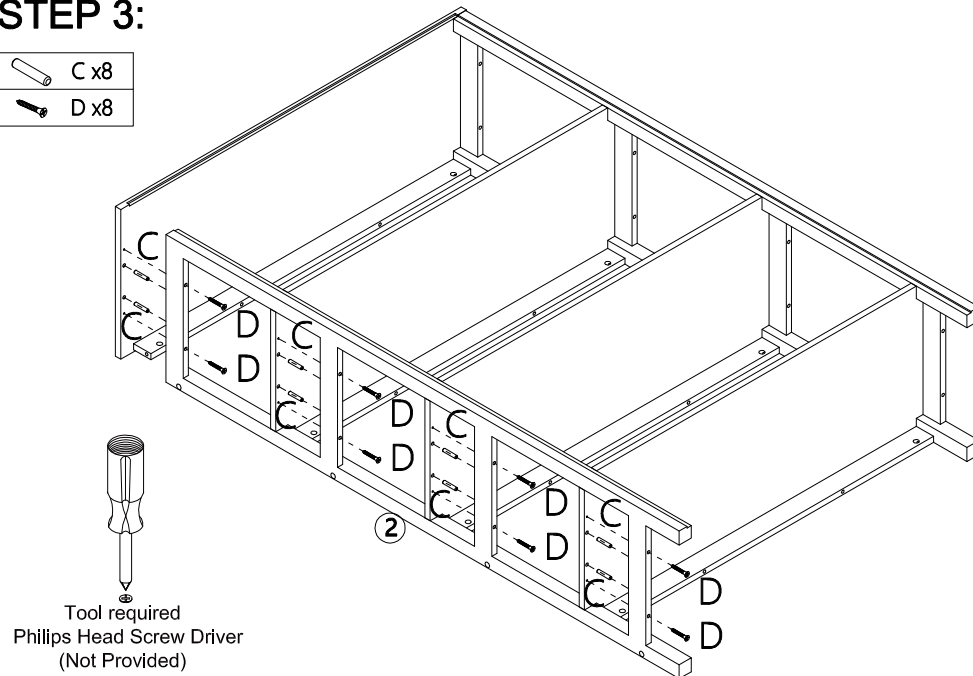 - C x8
- D x8





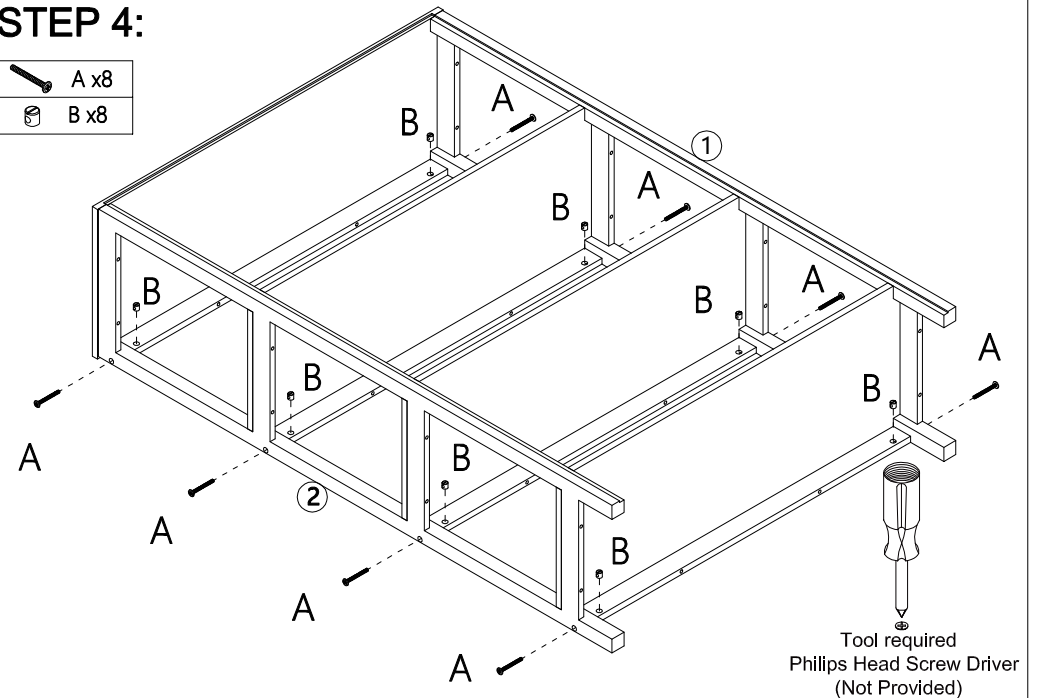 
STEP 4:

- A x8
- B x8





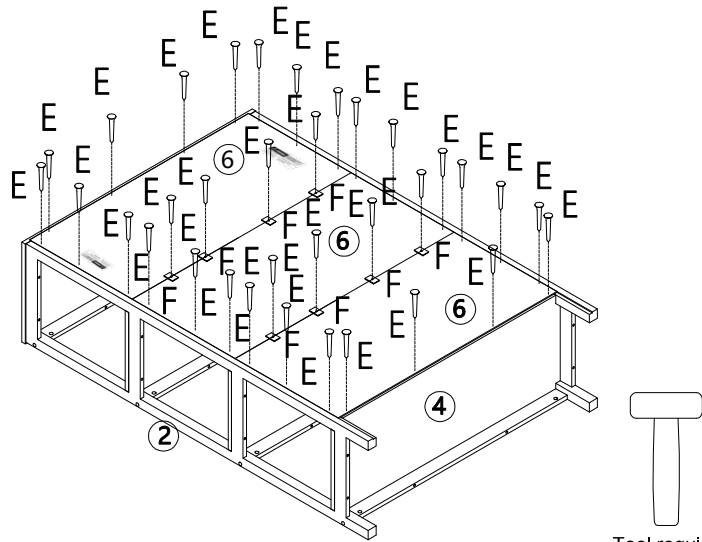 STEP 5:


-  E x34
-  F x8



Tool required
(Not Provided)

STEP 6:

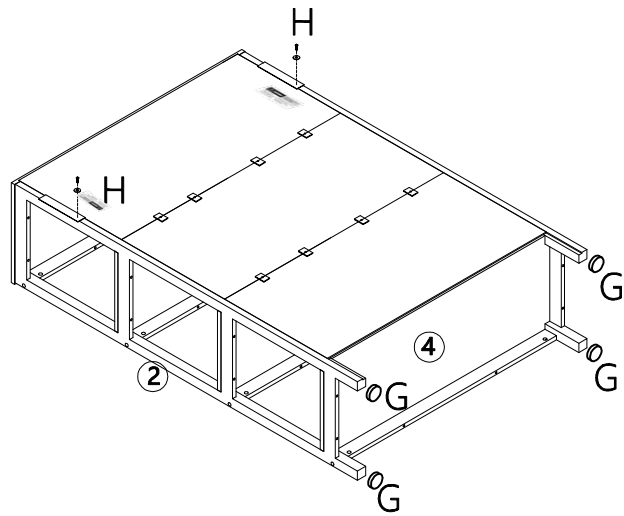 
-  G x4
-  H x2



Tool required
Phillips Head Screw Driver
(Not Provided)

STEP 6:

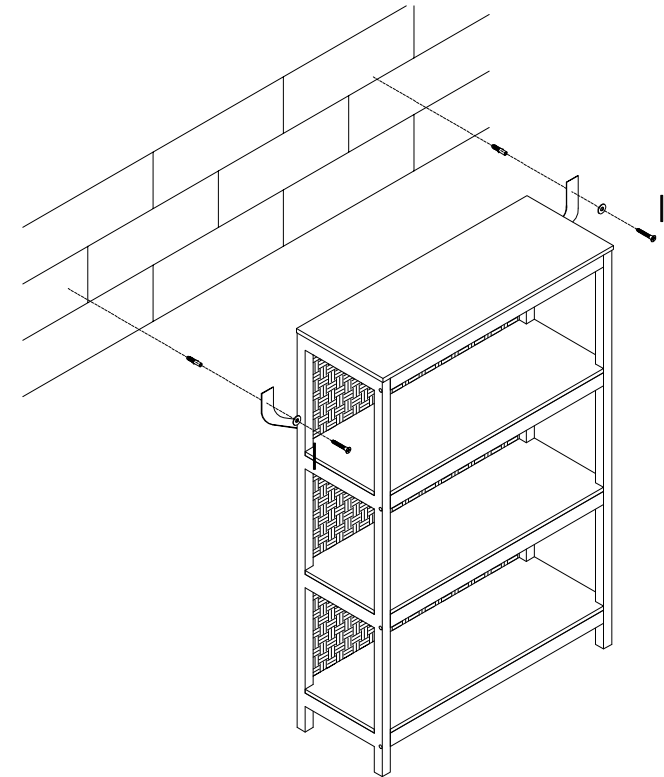 -  I x2



User instructions should include the wording:

- **It is strongly recommended that this product is permanently fixed to the wall.**
- **Please seek professional advice if you are in doubt of what fixing device to use.**
- **Regularly check that anchors are securely maintained.**
- **Stability of tall items may be affected by thick pile carpet or uneven floors .**
- **Do not place unanchored televisions on furniture .**

CAUTION: for your safety when attaching the anchor fixings, please note the following:

- **Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).**



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.



Tool required
Phillips Head Screw Driver
(Not Provided)