

# MARVEL SPIDER-MAN

© MARVEL

## RC SPIDER-MAN STUNT CAR

### INSTALLING BATTERIES IN THE TRANSMITTER:


- Unscrew the screw to open the battery cover.
- Insert 2 x 1.5V AA batteries with correct + and - polarities.
- Close the cover.




### INSTALLING THE VEHICLE BATTERY:

- Loosen the screw to open the battery cover.

2 - As shown in figure, remove the battery cover, connect the rechargeable battery pack with connector and close the battery cover.

 

**Fig 2:**

 

**Fig 3:**



**6+  
YEARS**

### HOW TO CHARGE:


**Attention:** Do not charge battery immediately after each play, let the battery cool down for a while.

- Loosen the screw to open the battery cover.
- Separate the rechargeable battery pack from connector.
- Connect the USB charging cable with rechargeable battery first. (The battery connector will only fit in one way, do not force the connectors together), then plug the USB charging cable into a USB port. The red LED light on the USB charging cable will light up and will be solid when charging.
- The green LED light will light up and will be solid after it has finished charging. Disconnect the USB charging cable from the USB port and then disconnect the rechargeable battery with USB charging cable.



### HOW TO USE SIMULTANEOUSLY:

- Turn on the vehicle first and then turn on the transmitter.
- Press the forward button of the transmitter to match the vehicle.
- Turn on the second vehicle, make sure they are matched.
- If you have more than two vehicles, please pair one by one. When the second vehicle is pairing, please always keep the first vehicle and transmitter on.
- Please turn off both the vehicle and transmitter and re-start all pairing processes if you are changing to play with another 2 AGHz transmitter.

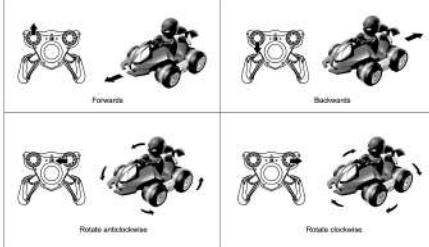

Hold the button as shown in diagram to make the wheel parallelised.



When in parallel state, press the right control stick to the left as shown in diagram. The vehicle will drift to the right.



When in standing state, press the right control stick to the left as shown in diagram. The vehicle will move to the left.



When in standing state, press the right control stick to the right as shown in diagram. The vehicle will move to the right.

**WARNING: THE TOP IS ONLY TO BE CONNECTED TO CLASS 9 EQUIPMENT (ARMED, TEL, ETC.)**

**WARNING: DISCHARGED BATTERIES ARE TO BE REMOVED FROM THE TOY.**

**WARNING: FOR THE PURPOSES OF RECHARGING THE BATTERY, ONLY USE THE DESIGNATED SUPPLY UNIT PROVIDED WITH THIS TOY.**

**WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER SEIZURES IN CERTAIN INDIVIDUALS. PLEASE KEEP PARENTS INFORMED.**

**WARNING: CHOOSE HAZARD-SMALL PARTS NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.**

**WARNING: THE BATTERY CHARGER USED WITH THIS ELECTRIC TOY SHALL BE REGULARLY EXAMINED FOR DAMAGE TO THE PLUG, CORD AND CONNECTOR OR OTHER PARTS, AND IN THE EVENT OF DAMAGE, IT SHALL NOT BE USED UNTIL THE DAMAGE HAS BEEN REPAIRED.**

**WARNING: BATTERIES ARE TO BE RECHARGED WITH THE CORRECT POLARITY (+ AND -) DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE TO BE RECHARGED IN A RECHARGEABLE BATTERY CHARGER. DO NOT OVERCHARGE. DO NOT SHORT CIRCUIT. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME DRAINED. DO NOT RECHARGE BY AN ADAPTER IF REQUIRED, USE THE BATTERIES PROVIDED OR DO NOT USE IF IN FIRE.**

**KEYCODE: 43231812**

**PERFORMANCE TIP: DO NOT DRIVE THE VEHICLE THROUGH WATER. DO NOT DRIVE THE VEHICLE ON SAND AND DIRT. DO NOT DRINK AND DRIVE THE MAKE SAFE.**

**WARNING: THIS TOY PRODUCES FLASHES THAT MAY TRIGGER SEIZURES IN CERTAIN INDIVIDUALS. PLEASE KEEP PARENTS INFORMED.**

**WARNING: CHOOSE HAZARD-SMALL PARTS NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.**

**WARNING: THE BATTERY CHARGER USED WITH THIS ELECTRIC TOY SHALL BE REGULARLY EXAMINED FOR DAMAGE TO THE PLUG, CORD AND CONNECTOR OR OTHER PARTS, AND IN THE EVENT OF DAMAGE, IT SHALL NOT BE USED UNTIL THE DAMAGE HAS BEEN REPAIRED.**

**WARNING: BATTERIES ARE TO BE RECHARGED WITH THE CORRECT POLARITY (+ AND -) DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE TO BE RECHARGED IN A RECHARGEABLE BATTERY CHARGER. DO NOT OVERCHARGE. DO NOT SHORT CIRCUIT. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME DRAINED. DO NOT RECHARGE BY AN ADAPTER IF REQUIRED, USE THE BATTERIES PROVIDED OR DO NOT USE IF IN FIRE.**

