

USER MANUAL

43233236

Alarm Clock with Wireless Charger_IM_V

Artwork Proof Date: 12.10.2022

PAPER:

80gsm Bright white uncoated paper
80gsm 书写纸

PRINT COLOURS:

| | |
|----------------------|---------------------|
| BLACK | GREY |
| C:0 M:0 Y:0 K:100 | C:0 M:0 Y:0 K:70 |

PRINT FINISH:

Double sided



 
105 mm

anko

Alarm Clock with Wireless Charger User Manual

What's Included:

- ▶ Alarm clock x 1
- ▶ Instruction Manual x 1
- ▶ USB-C cable x 1

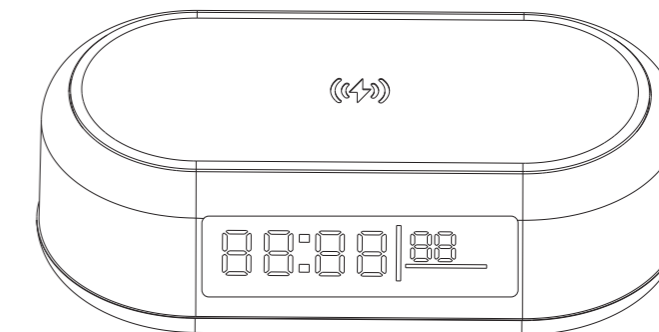


43-233-236

148.5 mm

Date setting:

 1. After entering date setting, the Year number flashes, press the / buttons to increase or decrease the value, or press and hold / buttons to skip through the values quickly.

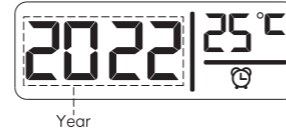


2. Press the button to enter the Month format, the Month begins to flash.



3. Press the / buttons to increase or decrease the value, or press and hold / buttons to skip through the values quickly.

 4. Press button to enter the Day format, the Day begins to flash.

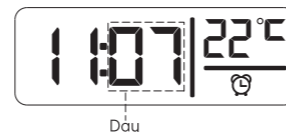

5. Press the / buttons to increase or decrease the value, or press and hold / buttons to skip through the values quickly.

Note: It will automatically exit and save if there is no operation within 10 seconds.

Alarm clock function:

- ▶ Press and hold button for more than 2 seconds to turn on and off the alarm clock function.
- ▶ Alarm sound rings (beep sound) for 25 seconds, stops for 10 seconds, then rings for 25 seconds; it will automatically turn off after a total of 2 rounds.
- ▶ When the alarm clock rings, the alarm indicator light also flashes at the same time, press any buttons to turn off the rings.

Light function:

- ▶ Press button to turn on the ambient light and adjust the brightness, 3 levels brightness control: 100%-75%-25%.

Note: The default brightness is 100%.

Specification

- ▶ **Input:** 5V,2A/9V,2A/12V,2A
- ▶ **Wireless Charger Output:** 5W/7.5W/10W
- ▶ **Battery:** 2 x AAA batteries (not included)
- ▶ **Wireless Charging Transmission Distance:** ≤5mm

12 month warranty

Thank you for your purchase from Kmart. Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect. Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at **kmart.com.au** for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

 
WARNING ▶ Do not dispose of unit in fire or water. ▶ Never attempt to disassemble and reassemble. Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. Check with your local authority for recycle advice. ▶ Keep your device and all accessories out of reach of children and animals. Small parts may cause choking or serious injury if swallowed. ▶ Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 40°C). ▶ Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. ▶ Do not allow your device to get wet, liquids can cause serious damage. Do not handle your device with wet hands.



Warning

- ▶ This product shall not be connected to power supply source exceeding PS2 (5V d.c.2A, 9V d.c.2A,12V d.c.2A).
- ▶ Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- ▶ Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- ▶ Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
- ▶ Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- ▶ Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- ▶ A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- ▶ The marking located on the bottom of the apparatus.
- ▶ Do not expose the device to direct sunlight, heat, or flame.
- ▶ Device may become warm while charging.
- ▶ Make sure the product has plenty of ventilation.
- ▶ Do not press the buttons too hard as it could damage the product.
- ▶ Do not use chemicals on this product.
- ▶ Never try to repair this product yourself, take it to a certified technician. Trying to remove panels or repairing the unit yourself could lead to electric shock. When the unit is not in use, make sure it is correctly turned off and stored in a cool dry place.
- ▶ Do not insert foreign objects into the product.
- ▶ Avoid dropping the product, as harsh impacts could damage the product.
- ▶ Cut off the power before cleaning the clock with a soft cloth.
- ▶ Damage, shock, and/or injury can occur if these warnings are not heeded.

Function Overview

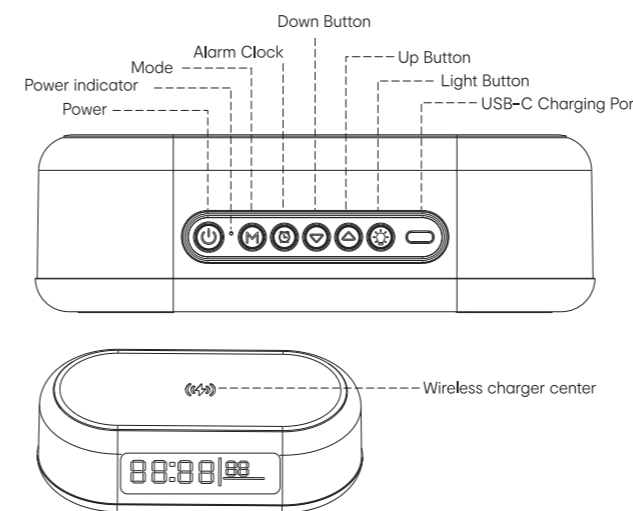


Power Supply:

- ▶ Please use provided USB-C table, insert the USB end of the charging cable into the power adapter, the USB-C port into the product, and the red power indicator lights up.
- ▶ The product enters the normal working state and enters the standby state after the display lights on, the time default is 00:00.
- ▶ The temperature detection starts to work, and the temperature value is displayed, only display degrees Celsius (°C).
- ▶ Insert 2x AAA batteries(not included) only for clock memory when power off. Battery is not for using to power the unit.

Wireless Charging:

 - ▶ Place your smart phone with wireless charging function on the top of the unit. The wireless charging indicator on the display will light up green colour.
- ▶ Indicator light display mode:
 - When using wireless charging: the green light is always on.
 - Foreign object detection: the green light flashes.
- ▶ This unit support 5W/7.5W/10W wireless charging.

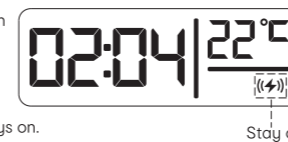

How To Set This Product

 
Power on/off function:

- ▶ Press and hold the button for more than 2 seconds to turn on/off.

12/24h switch:

- ▶ Press / buttons to switch 12H/24H.

Note: If you set the 12H mode, the screen will display PM in the afternoon.

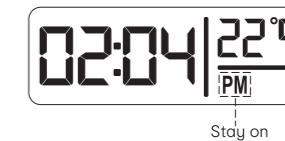


Time/Alarm clock/Date setting:


- ▶ Press and hold button to enter the time/alarm/date setting, looping, and automatically exit and save if there is no operation within 10 seconds.

Time setting:

 1. Press and hold button to enter setting, the hour begins to flash, enter the hour format.
2. Press the / buttons to set the hours, or press and hold / buttons to skip through the values quickly.

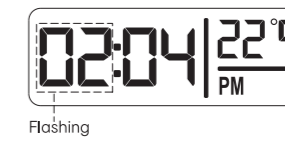

 3. Press button to enter the minutes format, the minutes begin to flash.

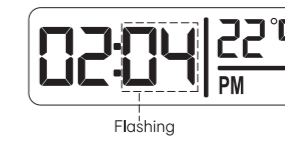

4. Press the / buttons to set the minutes, or press and hold / buttons to skip through the values quickly.

After time setting, continue to press the to enter alarm clock setting.

Alarm clock setting:

1. After Enter the Alarm clock setting, the hour begins to flash, enter the hour format.
2. Press the / buttons to set the hours, or press and hold / buttons to skip through the values quickly.



3. Press the button to enter the minutes format, the minutes begin to flash.



4. Press the / buttons to set the minutes, or press and hold / buttons to skip through the values quickly.
- After alarm clock setting, continue to press the to enter date setting: