

INSTRUCTION MANUAL

[KMT081]

43233557, 43243853_MAN_Wired Headphones Kids On-Ear_v2


Artwork Proof Date: 18.10.2022

Number of artboards:1

PAPER:

80gsm
Bright white uncoated paper

PRINT COLOURS:

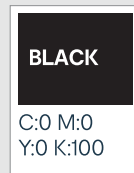

PRINT FINISH:

Back to Back

CHANGE LOG CREST INTERNAL USE ONLY

v2: changed warning label to standard

ARTWORK SHOULD NOT BE AMENDED WITHOUT PRIOR AGREEMENT FROM CREST. ALL ARTWORK **MUST** BE APPROVED BY CREST PRIOR TO MASS PRODUCTION.

IF THERE ARE QUERIES ABOUT THIS ARTWORK PLEASE CONTACT:
EMAIL: design@crest.com.au

THANK-YOU.

12 month warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave VIC 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

anko

On-Ear Wired Headphones Kids

Operating Instructions

Includes:

- › headphone
- › instruction manual



WARNING: HIGH VOLUME CAN CAUSE HEARING LOSS. YOUR EARS ARE IMPORTANT. LISTENING AT HIGH VOLUME FOR A PROLONGED PERIOD MAY DAMAGE YOUR HEARING. DO NOT LISTEN TO HEADPHONES AT HIGH VOLUME.


43233557 / 43243853

Thank you for choosing our Anko headphone/earphone. We hope you enjoy using it.

This headphone has an in-line microphone and music control function along with a call answering function that will work on most IOS and Android devices.

Overview:

1. Microphone
2. Call answer and music control button

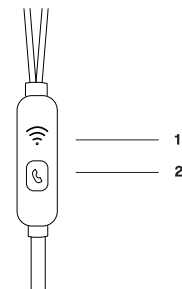

*The position of the call answer button and microphone position are for illustration purpose only; the exact positions in different models may vary slightly.

How to use the In-line control functions:

Answer call with the headphone connected to your device via the 3.5mm headphone socket.

Note: If you wish to make a call using the in-line microphone function the microphone will automatically activate whilst the headphone/earphone is connected to your device via the 3.5mm socket.

A. Call Answer

- | | |
|--------------------|--|
| Answer Call | Press the call answer/music control button to answer calls on your device. |
| Hang Up / End Call | Hang up during the call, press the call answer/music control button to mute/unmute the microphone, press and hold the button for approx. 1 second to end the phone call. |
| Reject Call | To decline an incoming call, press and hold call answer/music control button for about two seconds |

B. Music Control

- | | |
|---------------|---|
| Pause Music | Press the call answer/music control button once to pause/resume music. |
| Next Song | Press the call answer/music control button twice in quick succession to skip track forward. |
| Previous Song | Press the call answer/music control button 3 times in quick succession to skip track backwards. |

C. Voice Assistant

- | | |
|----------------|---|
| Siri or Google | Press and hold the call answer/music control button for 2 seconds to active Siri or google assistant. |
|----------------|---|

110