

USER MANUAL

43243624

Bluetooth Over-Ear Headphone_IM_V

Artwork Proof Date: 30.8.2022

PAPER:


80gsm Bright white uncoated paper
80gsm 书写纸

PRINT COLOURS:

BLACK	GREY
C:0 M:0 Y:0 K:100	C:0 M:0 Y:0 K:70

PRINT FINISH:

Double sided

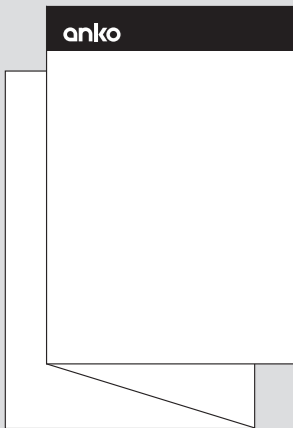

105 mm

anko

Bluetooth® Over-Ear Headphone User Manual

- What's Included:**
- › Bluetooth headphone x 1
 - › USB-C charging cable x 1
 - › 3.5mm audio cable x 1
 - › User Manual x 1



148.5 mm

43-243-624

Specification

- › **Bluetooth Version:** 5.3
- › **Support Profiles:** A2DP1.3/ HFP1.6/ AVRCP1.6
- › **Working Distance:** 10m
- › **Speaker:** 40mm
- › **Music Time:** up to 45 hours
- › **Charging Voltage:** DC 5V
- › **Charging Time:** 3-4 hours
- › **Pairing Window Time:** 5 mins

12 month warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect. Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

WARNING › Do not dispose of unit in fire or water. › Never attempt to disassemble and reassemble. Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. Check with your local authority for recycle advice. › Keep your device and all accessories out of reach of children and animals. Small parts may cause choking or serious injury if swallowed. › Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 40°C). › Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. › Do not allow your device to get wet, liquids can cause serious damage. Do not handle your device with wet hands.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.

iPhone, iPad and Mac is a trademark of Apple Inc., registered in the U.S. and other countries.



Warning

- › This product shall not be connected to power supply source exceeding PS1 (5V d.c. 1A).
- › Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- › Replacement of a battery with an incorrect type can result in an explosion or the leakage of flammable liquid or gas.
- › Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery can result in an explosion.
- › Leaving a battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid or gas.
- › A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.




WARNING: HIGH VOLUME CAN CAUSE HEARING LOSS. YOUR EARS ARE IMPORTANT. LISTENING AT HIGH VOLUME FOR A PROLONGED PERIOD MAY DAMAGE YOUR HEARING. DO NOT LISTEN TO HEADPHONES AT HIGH VOLUME.

CAUTION:

- › The batteries in this product are not replaceable.
- › Do not expose the device to direct sunlight, heat or flame.
- › Only use dry cloth to keep product clean from dust.
- › Never try to repair this product by yourself, take it to a certified technician.
- › Trying to remove panels or repairing the unit yourself could lead to electric shock.
- › When the unit is not in use, make sure it is correctly turned off and stored in a dry place.

Instruction

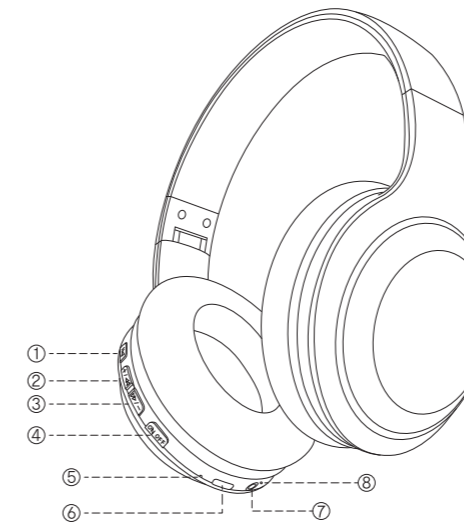

- ① Play/Pause/Answer/Hang Up/Reject/Redial Call
- ② Volume Up/Next Track
- ③ Volume Down/Previous Track
- ④ Power ON/OFF
- ⑤ LED Indicator
- ⑥ USB-C Port
- ⑦ 3.5mm AUX IN
- ⑧ Microphone

How to Use the Headphone

- Power On:** Slide the **ON/OFF** Button to turn on.
- Power OFF:** Slide **ON/OFF** Button to turn off.
- Play:** Press **▶||** button
- Pause:** Press **▶||** button
- Answer call:** Press **▶||** button
- End call:** Press **▶||** button
- Re-dial last call:** Press **▶||** button twice
- Reject call:** Press and hold **▶||** button for 2 seconds
- Volume Up:** Press **▶▶+** button
- Volume Down:** Press **◀◀-** button
- Next Track:** Press and hold **▶▶+** button
- Previous track:** Press and hold **◀◀-** button

Pairing the Headset with Bluetooth Devices

- › Once the headphone is powered on, the indicator will flash blue and red, the headphone will connect to the last paired device.
- › If not previously paired, search on your electronic devices Bluetooth menu and select the pairing name KM43243624
- › Pair window: 5 mins
- › Once connected, the indicator will flash blue slowly.

AUX Mode

Insert the Aux Cable into the headphone, and the 3.5mm Jack end into your mobile device or computer. Bluetooth mode will automatically switch off.

Battery Charging

- › Please use the provided USB-C cable to charge the battery.
- › Insert the USB-C cable end into the headphone charging port.
- › Insert USB-A into an appropriate 5V 1A USB port.
- › The LED will turn red when charging and turn off when the headphone is fully charged.
- › Turn off the headphone before charging.
- › Do not charge the headphone during use.