

## How to use

- 1. Open the battery box cover, insert 2x1.5V AAA batteries.
- 2. After install 2x1.5V AAA batteries, remote control is ready to pair with your mobile phone.
- 3. Bluetooth pairing: open the Bluetooth on the phone,use the mobile phone to search for "KM43255153"to pair.
- 4. Take a photo: When the Bluetooth remote control is connected to the mobile phone. press the camera button to take photo.
- 5. If you do not use the remote control, it will automatically enter to shutdown state after a few minutes. Press the camera button to using it again.


# **Battery Installation:**

- This item requires 2x1.5V AAA batteries (Not included).
- · Battery installation by adult is required. **BATTERY WARNING:**
- · Batteries are to be inserted with correct polarity.
- Do not mix different types of batteries or new and used batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervison.

  Rechargeable batteries are to be removed
- from the product before being charged.
- The supply terminals are not to be short-circuited. Remove batteries from the product when not in use for extended time or when batteries
- hecome exhausted Dispose of batteries responsibly.
- $\boldsymbol{\cdot}$  Do not dispose of in fire.


## 360° rotary clip

Free to flip take pictures from multiple angles, take photos more

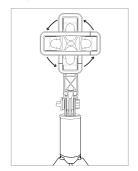


正面

 **How to open a tripod**Open it in the position of the handle and it will become tripod mode. Place on flat surface and do not use during strong wind condition





# Tripod mode

When changing the selfle stick to tripod mode, pull out the last section of the stick and adjust until the tripod

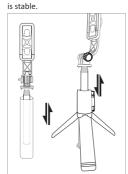

### How to replace GoPro on the stick

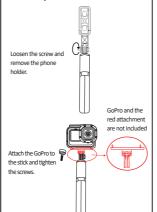

 

### Specifications

.Material Stanless Steel .Total Length:950mm .Collapsed Length:190mm .Battery:2 x 1.5 VAAA (not included)



Selfie stick compatible with Android 4.2.2 and iPhone ios 5.0 and above (Android devices: If you change your "Volume key function", be sure to change it into default, or "take a picture"to let the selfie stick normal work).

Thank you for your support.

