

anko

Grooming Kits
Model no.: RFC-568
Instruction Manual



PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE

SAFETY GUIDE - PLEASE READ CAREFULLY BEFORE USING THIS APPLIANCE

Please follow all the precautions listed below for safety and to reduce the risk of injury or electric shock.



WARNING: READ ALL INSTRUCTIONS; FAILURE TO FOLLOW ALL INSTRUCTIONS LISTED BELOW MAY RESULT IN ELECTRIC SHOCK, OR SERIOUS PERSONAL INJURY.

SAVE THIS INSTRUCTION

1. Only use the appliance as described in this manual.
2. This appliance contains batteries that are non-replaceable.
3. Do not immerse the appliance in water or any other liquid.

Warning: Keep the appliance dry.

4. Do not allow the appliance to be exposed to rain or moisture during use or storage.
5. Always check the appliance for damage prior to use. If any damage is observed, DO NOT use the appliance.
6. The appliance is intended for indoor use only.
7. Always switch the appliance off after use.
8. This appliance has no user serviceable parts. Do not attempt to access the appliance covers.
9. This appliance is for personal use only, not designed for commercial use.
10. Do not use it outdoors.
11. Do not use the appliance if it is not working properly, if it has been dropped or if it has been immersed in any liquid.
12. Before using the appliance, ensure that the clipper head/ trimmer head are securely fitted.
13. Do not use the appliance on children.
14. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
15. Children being supervised to ensure that they do not play with the appliance.
16. Do not operate the charger if it has a damaged cord or plug, if it is not working properly, if it has been dropped or immersed in any liquid.
17. Use only the original charger supplied with the appliance.
18. Check that your supply voltage is the same as that stated on the charger.
19. When charging the appliance, the power switch must be OFF.
20. It is normal for the charger to become warm to touch when charging.
21. Use only attachments provided.
22. This product contains sharp blades, please take the utmost care in handling and use.
23. Do not stretch, twist and curl the cable around the appliance.
24. Keep the cable away from hot surfaces.
25. Do not replace the batteries with non-rechargeable batteries.

IMPORTANT! To avoid personal injury, do not use the groomer if it has a damaged blade or trimming head.

26. Detach the attachment heads for cleaning. Only the attachments can be washed under tap water.
27. DO NOT submerge the appliance, nor make it flow under water-tap.
28. DO NOT use salt water or boiling water for cleaning. Also, do not use cleaning products that are designed for toilets, bathrooms or kitchen appliances.
29. The groomer must be used only with the battery charger provided with the product

SW-050100AUL.



WARNING: Do not recharge non-rechargeable batteries.



WARNING: Before charging the product, please make sure your hands are dry.



 
WARNING: Please use the charger we supplied with the appliance. Other chargers may cause electrical failure and/or fire.



This product is not suitable to use in a bath or shower


**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

PARTS

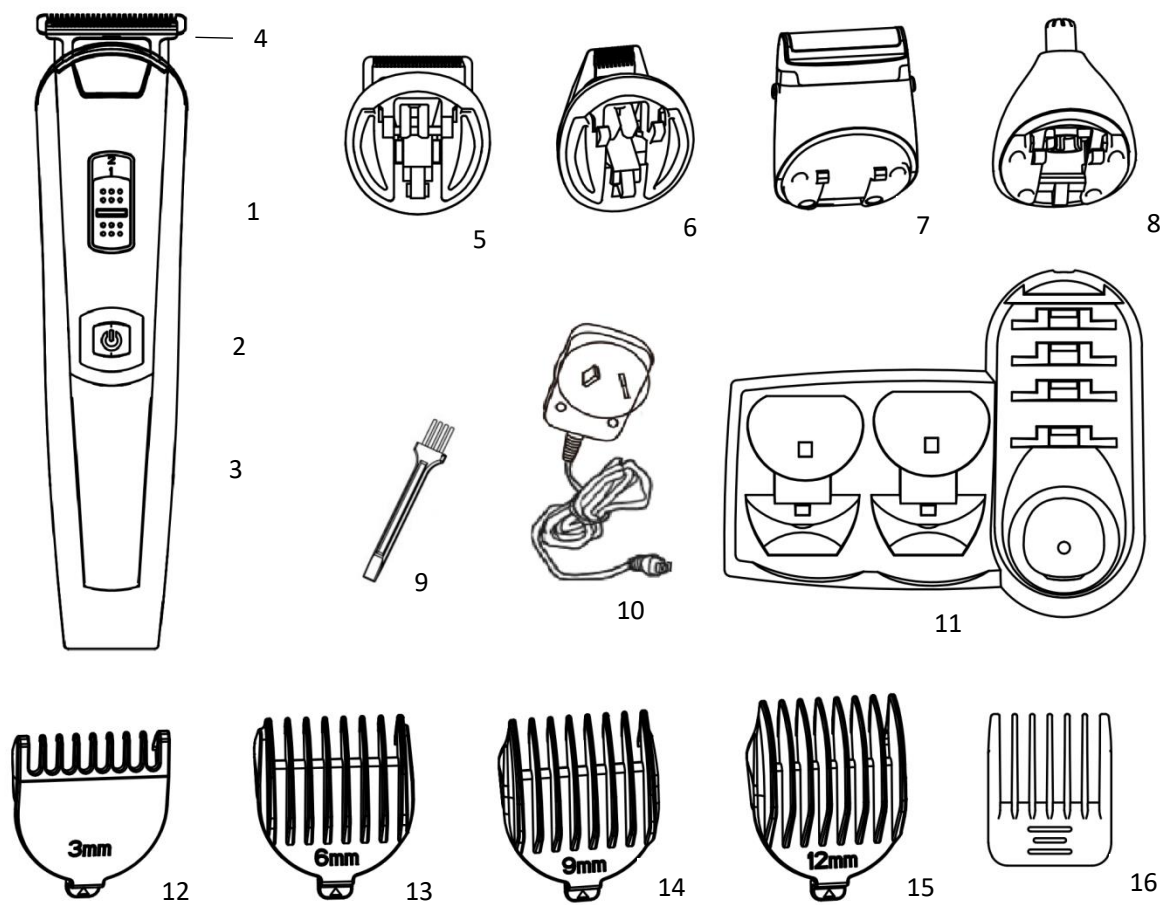

- 1 Blade height adjusting switch
- 2 On/Off switch
- 3 Digital display
- 4 Hair Trimmer
- 5 Beard Trimmer
- 6 Precision Trimmer
- 7 Shaver
- 8 Nose and Ear Trimmer
- 9 Cleaning brush
- 10 Charger
- 11 Storage base
- 12 Hair trimmer attachment: 3mm length
- 13 Hair trimmer attachment: 6mm length
- 14 Hair trimmer attachment: 9mm length
- 15 Hair trimmer attachment: 12mm length
- 16 Beard trimmer attachment: 3-6mm length
- 17 Pouch

 DISPLAY

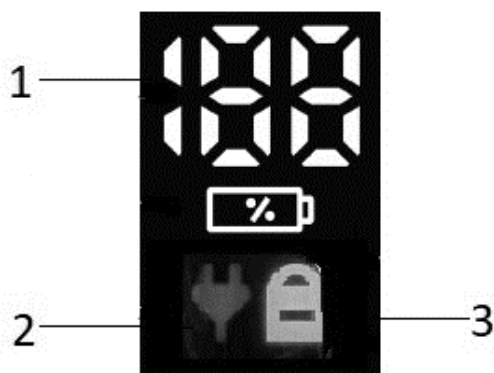

1. Battery level
The number display 00..10..20....100 shows the percentage of battery capacity.
2. Plug icon
The plug icon illuminates when the groomer is charging OR when battery level has dropped to 5% or lower.
3. Lock icon
When Travel lock is ON.

BEFORE FIRST USE

Charge the appliance for approx. 1.5 hours before first use. **Plug Icon** will illuminate to indicate the product is charging.

Please make sure the power is OFF before charging.

IMPORTANT! Use only the charger provided with the product SW-050100AUL.

CHARGING

1. Connect the DC plug of charger to the DC jack on the groomer.
2. Connect the charger to mains power (AC) outlet.
3. The Plug Icon will illuminate in RED.
4. It will take approx. 1.5 hours to fully charge the batteries in the groomer.

IMPORTANT! Never charge the Groomer for more than 1.5 hours.

BATTERY CARE

To ensure maximum life of the rechargeable batteries in your grooming kit, follow these guidelines:

- Do not recharge the unit between sessions. Wait until the batteries are exhausted before recharging.
- Discharge the batteries completely twice a year (switch ON and run until the groomer stops).
- **IMPORTANT!** Do not use the groomer while charging.
- Do not charge the unit when the temperature is below 0°C or above 40°C
- Avoid recharging the unit in direct sunlight or near a radiating heat source.

OPERATING INSTRUCTIONS

Hair Trimmer



WARNING:
Switch off the device before replacing or changing the attachments



NOTES:
The hair to be dressed must be dry.




NOTES:
The cutting length may deviate depending on the cutting angle. Please start with a comb attachment with a longer cutting length and then, in the course of cutting process, use shorter cutting lengths step by step.

1. Select the desired hair trimming attachment.
2. Attach the hair trimmer to the main unit. Push on the attachment by inserting the bottom bracket of the attachment into the slot of the main body then press the upper part of the attachment onto the device until it audibly and firmly locks into place.
3. Insert comb attachments, press carefully over the hair trimmer head to the bottom end of the comb attachment until it locks into place.




4. Turn on the hair clipper.
5. Start by cutting hair in neck or on the sides and cut towards the centre of the head. Then, cut the front section of the hair towards the centre of the head.
6. Hold the device so the the comb attachment rests flat on the head. Move the device evenly through the hair.
7. If possible, cut against direction of hair growth.
8. In order to catch all the hair, move the device several times through the same section of the hair.
9. Comb the hair repeatedly and well.
10. To withdraw the blade, hold the groomer with both hands and press the blades out with your thumb and support the blades at back to avoid falling.

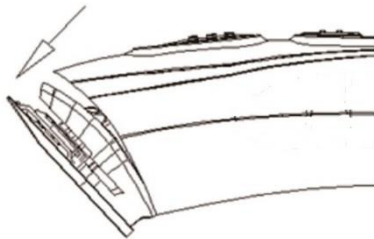

Beard Trimmer

1. Slide the beard comb into the guiding grooves on both sides of the handle.

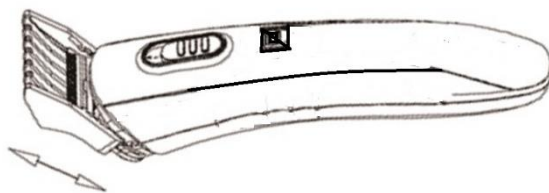

2. Slide the comb to the desired setting. The beard comb cuts hair to a length of 3-6mm.
3. Comb the beard in the direction of growth.
4. Cut the beard from the ear to chin downward.
5. Use the beard trimmer attachment without the comb attachment will cut the beard very short or to cut the moustache and hairline.

Precision trimmer attachment

1. Use the precision trimmer attachment to shorten and shape your moustache, whiskers, sideburns or eye brows.
2. Position the edge of the attachment at the desired height of the hair line and move the hair

trimmer.

Foil Shaver

1. Before using the shaver, always check it for wear and damage. If the shaver shows signs of wear or damage, do not use or it may cause injury.
2. Pre-trim the contours desired with the hair trimmer or precision trimmer.
3. Gently press the shaver onto the skin and shave along contoured edges to remove any stubbles. Do not press too hard.
4. Any areas that are harder to shave, such as chin, stretch the skin for a better result.

Nose/Ear Trimmer

1. Slowly insert the metal tip into one of your nostrils or ears.
2. Move the device in circles to cut the hair.


TRAVEL LOCK

- The Groomer has a switch lock function to prevent the unit from turning on accidentally.
- To set the lock, press and hold the On/Off switch for 3 seconds, the Lock Icon flashes then goes off, the groomer is now locked.
- To exit lock mode, press and hold the On/Off switch for 3 seconds until digits shows up on display and the groomer starts to function.
- When charging in travel lock mode, the unit will exit lock mode automatically.

CLEANING AND MAINTENANCE


Trimmer Head

- Always switch OFF the groomer before cleaning.
- Remove the accessory and the used blade. Clean it with the cleaning brush supplied with the product.
- The cutting blades should be lightly oiled once every few haircuts.

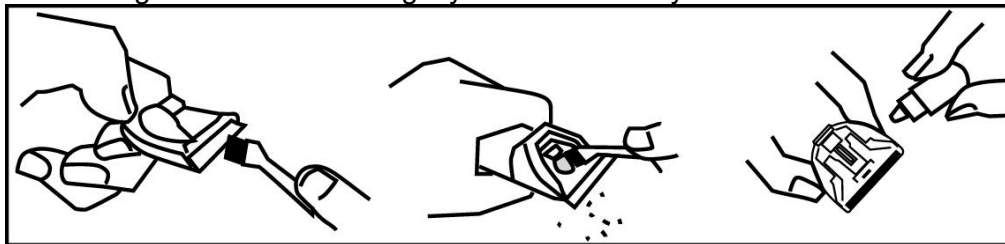

Shaver Head

- Separate the foil from cutting blade by pressing both side buttons.
- Carefully clean using the cleaning brush provided.
- The cutting blades should be lightly oiled once every few months.

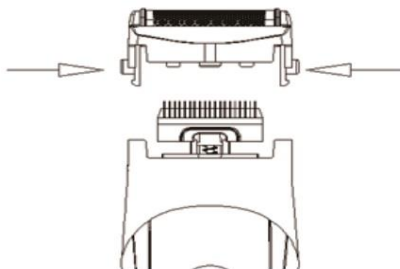

Grooming Unit

- Use a damp cloth to clean the main unit then dry it thoroughly.
- Storage the groomer and attachments in the pouch to prevent damage.

BATTERY DISPOSAL

The groomer must be disconnected from the mains power when removing the battery. The battery is to be disposed safely. Used batteries should be taken to a recycling station and not disposed of with household waste.

IMPORTANT: Always fully discharge the batteries before removal and ensure the charger is disconnected from mains power.

TECHNICAL SPECIFICATIONS

Model no.	RFC-568
Working time	Up to 1.5 hour
Charging time	Approximately 1.5 hour
Battery Charger	SW-050100AUL
Input voltage	100-240V~ 50/60Hz
Output voltage	5V DC, 1000mA
Battery type	Li-ion, 700mAh, 3.7V (x1 cell)

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.