

# Assembly Instructions




 

 







 

43266838 4D FRASER RATTAN CHEST OO


**CARE INSTRUCTIONS:** WIPE CLEAN WITH A SOFT CLOTH. NEVER USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS. KEEP AWAY FROM MOISTURE AND DIRECT SUNLIGHT. STORE IN A DRY PLACE FOR INDOOR USE ONLY.

**WARNING:** DO NOT STAND, SIT OR LEAN ON THE UNIT. DO NOT USE THIS UNIT AS A STEP LADDER. ENSURE THIS UNIT IS USED ONLY ON A FLAT SURFACE. DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED. DO NOT PLACE HOT OBJECTS SUCH AS COFFEE CUPS DIRECTLY ON THE SURFACE OF THIS FURNITURE ITEM. THIS ITEM IS FOR STORAGE PURPOSE ONLY. CONTAINS SMALL PARTS. IT IS TO BE ASSEMBLED BY AN ADULT. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.
















**MAXIMUM SAFE LOAD: TOP 20KGS, DRAWER 7.5 KGS.**
 
## 1 Hardware List

	A	M6x35mm	42pcs		I	M3x12mm	56pcs
	B	Ø15x9.5mm	42pcs		CL		4pcs
	C	Ø6x30mm	34pcs		CR		4pcs
	D	M4x35mm	24pcs		DL		4pcs
	E		4pcs		DR		4pcs
	F	M3.5x12mm	8pcs		N	M4x12mm	2pcs
	G		12pcs		O	M4x35mm	2pcs
	H	M3x16mm	12pcs				

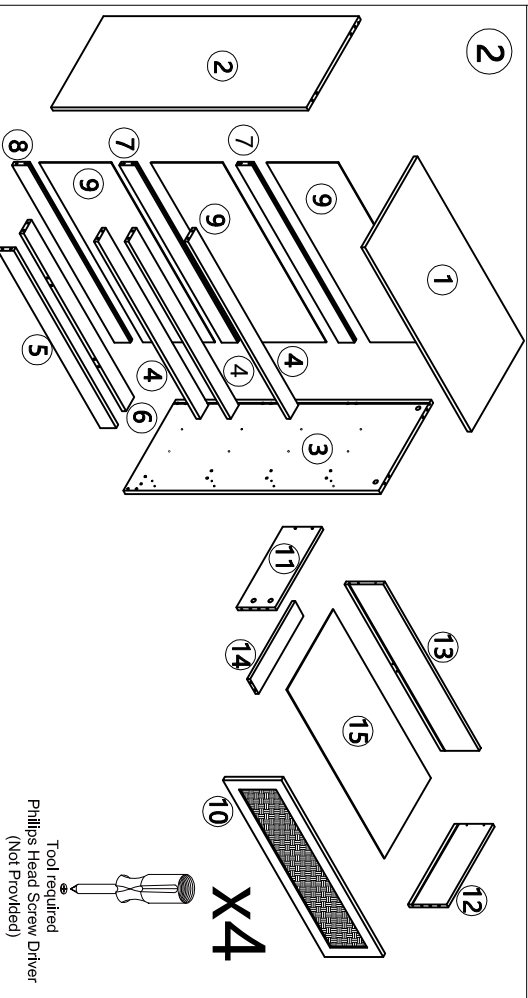


## 3

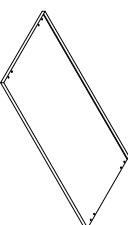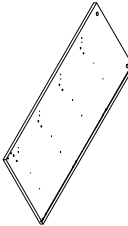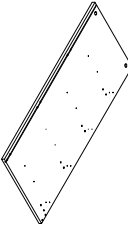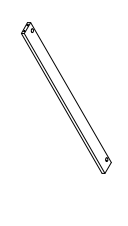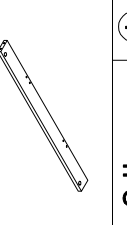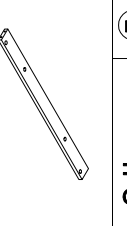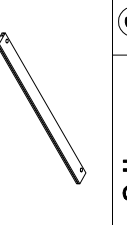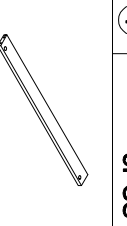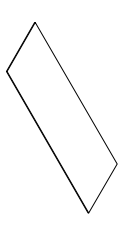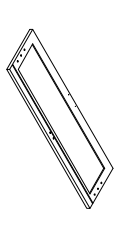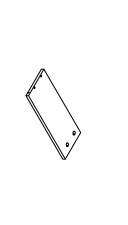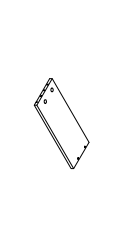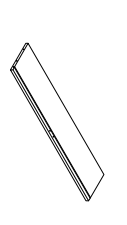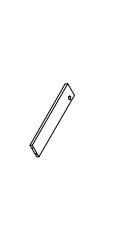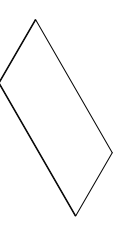               	1PC		1PC		1PC		3PCS
	1PC		1PC		2PCS		1PC
	3PCS		4PCS		4PCS		4PCS
	4PCS		4PCS				


Tool required  
Phillips Head Screw Driver  
(Not Provided)

**STEP 1:**

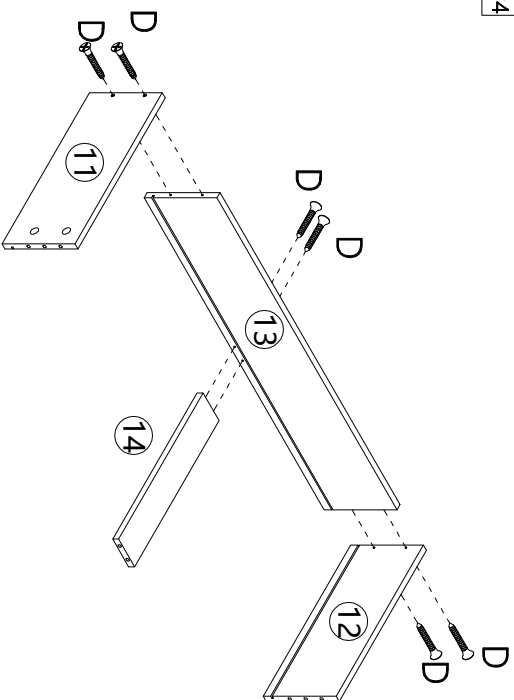 


X4

**STEP 2:**

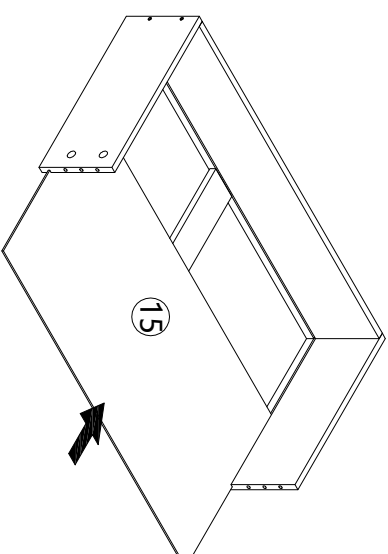 



X4

**STEP 3:**

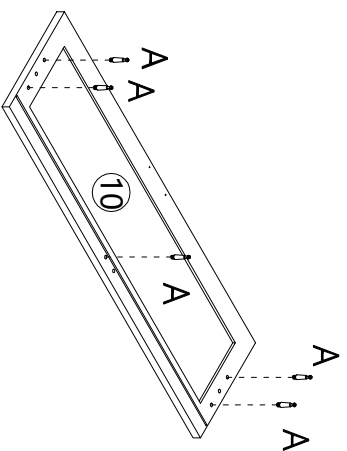 




X4

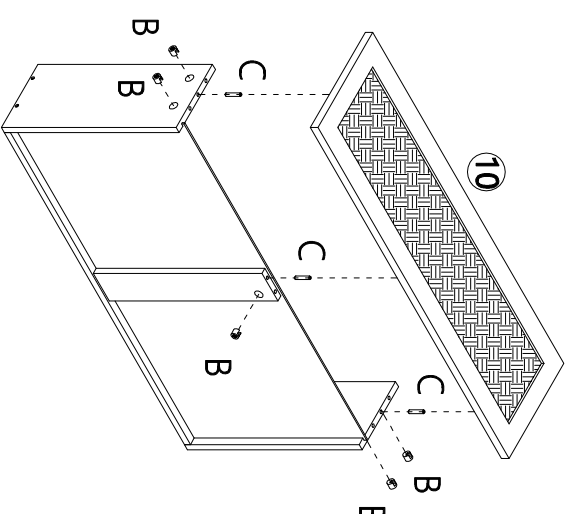  
**STEP 4:**



X4



### STEP 5:

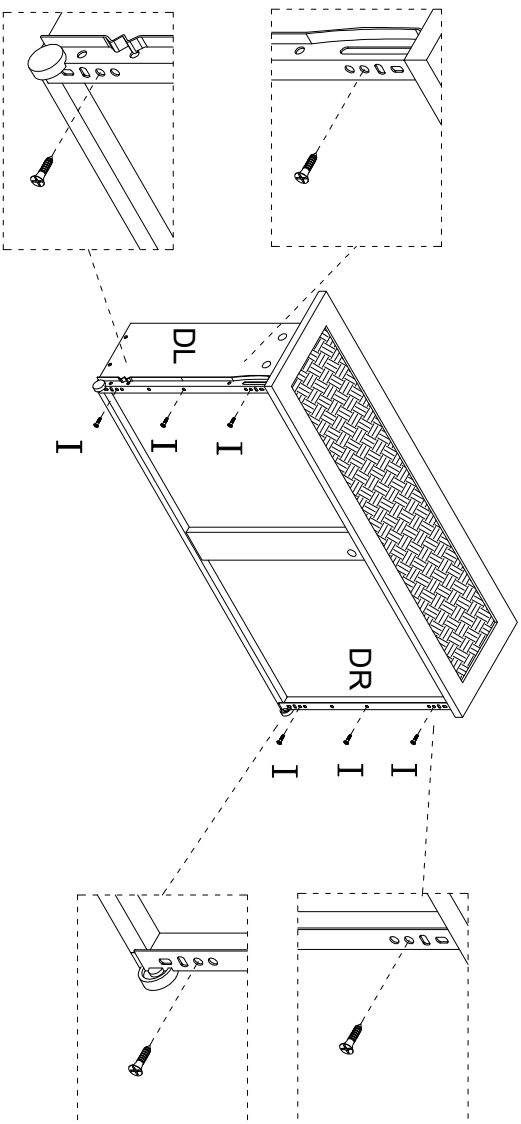 
	1 x 24
	DL x 4
	DR x 4




X4

### STEP 6:

	EX 4
	FX 8

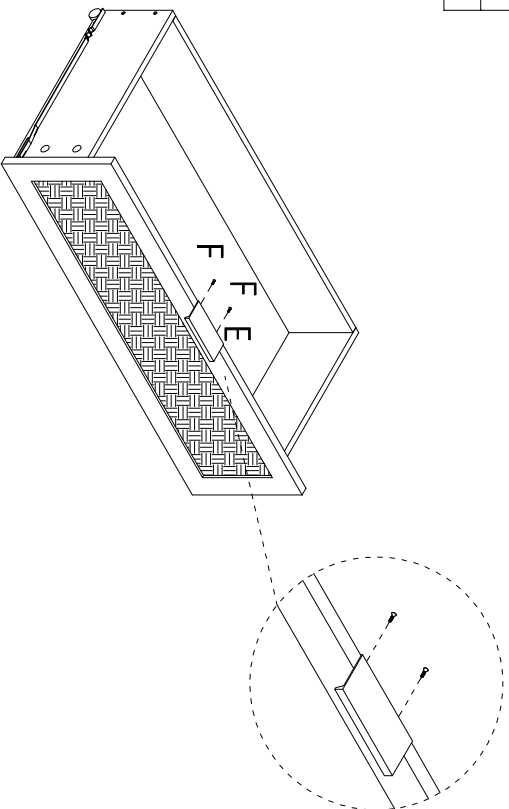 



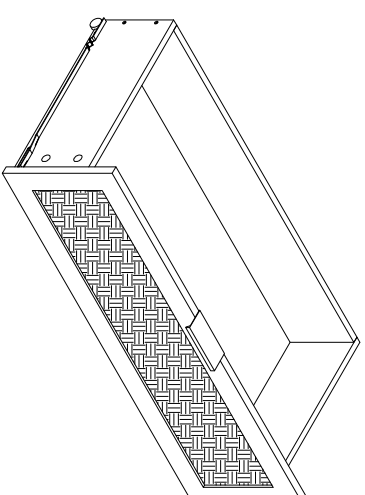 


X4



X4


### STEP 7:

 	A x 16
	I x 32
	J x 4
	K x 4

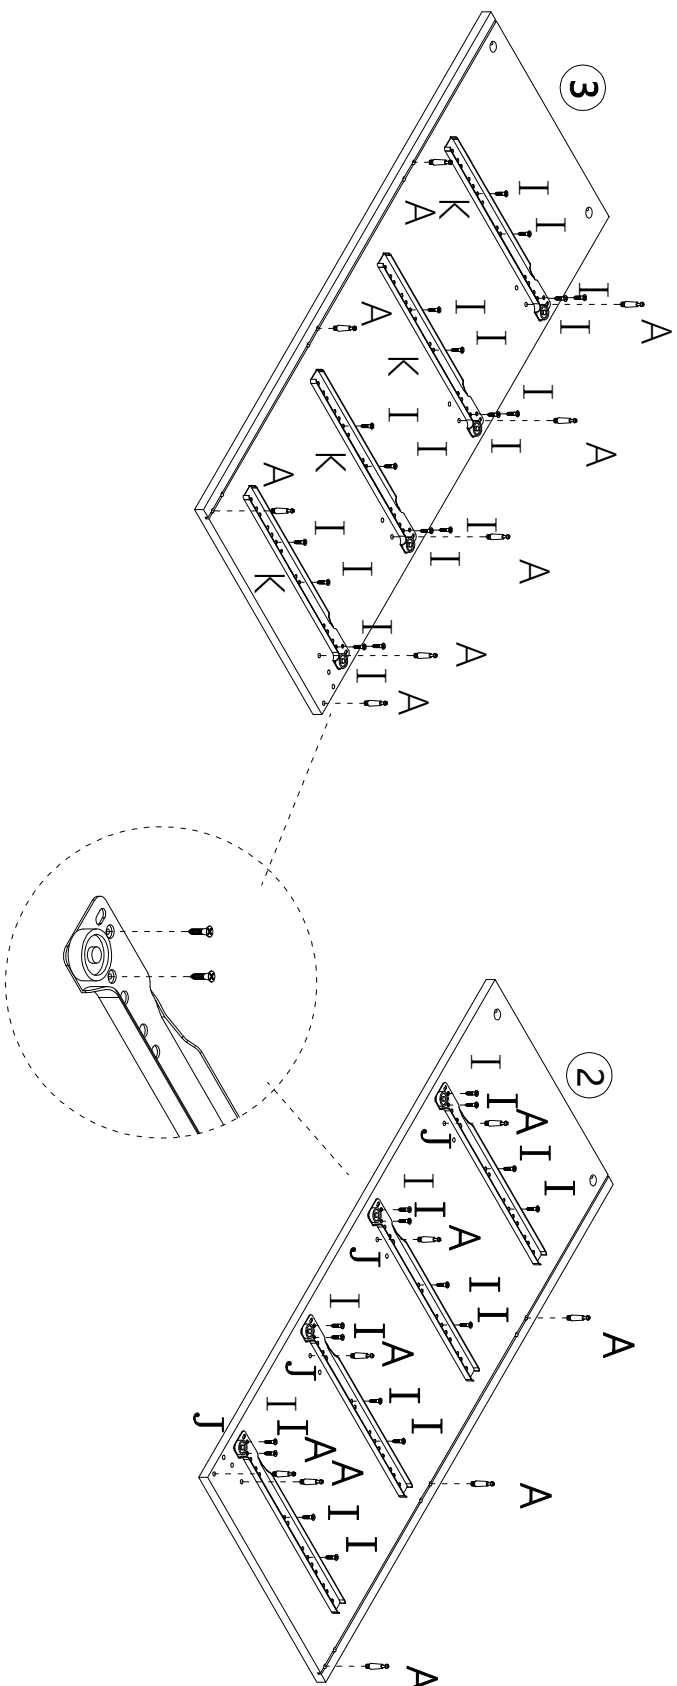




### STEP 8:

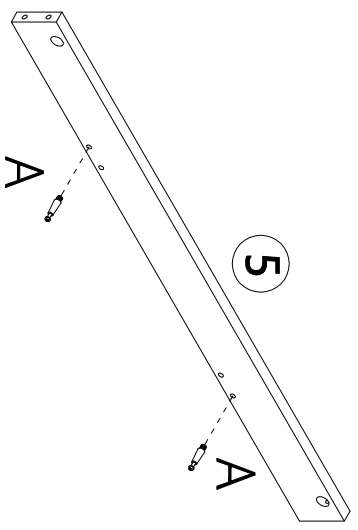 	A x 2
--	-------






### STEP 9:

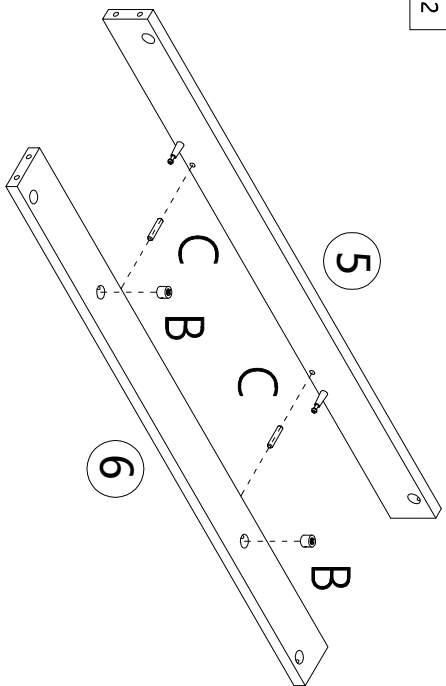 	B x 2
	C x 2




**STEP 10:**

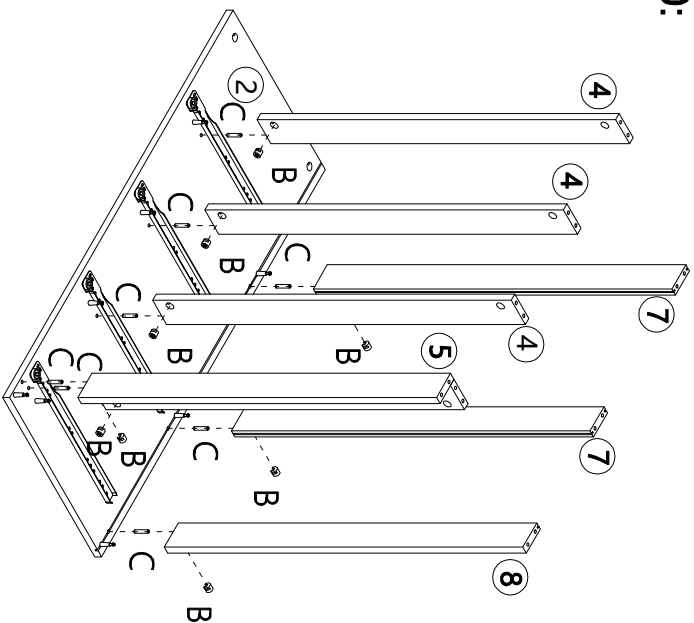 

	B x 8
	C x 8

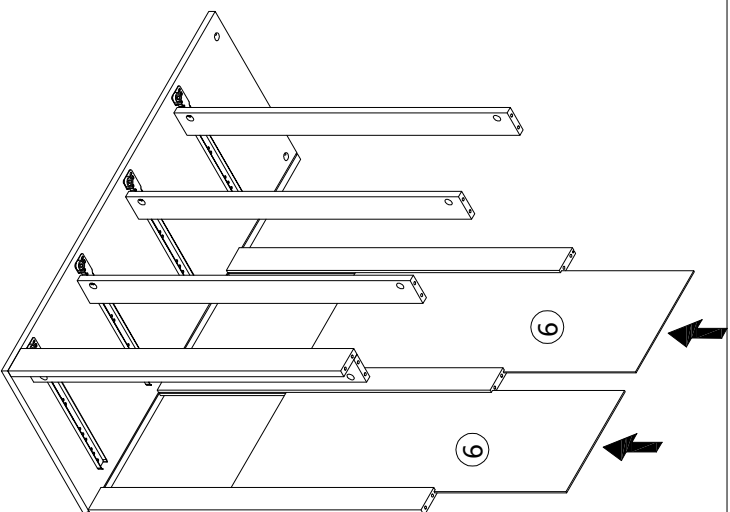 


**STEP 11:**




**STEP 12:**


 
	B x 8
	C x 8

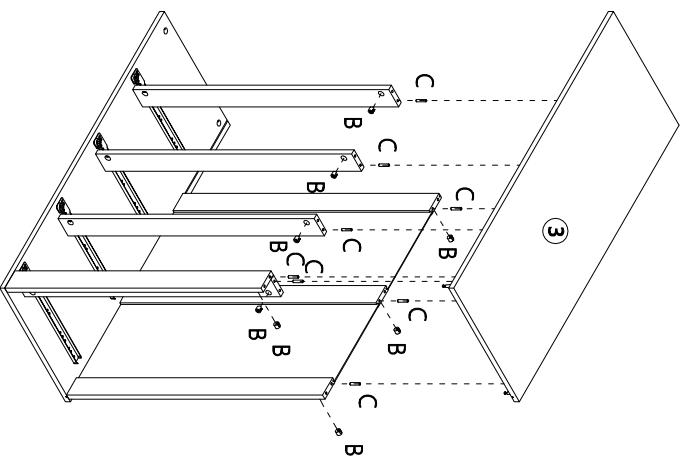



**STEP 13:**

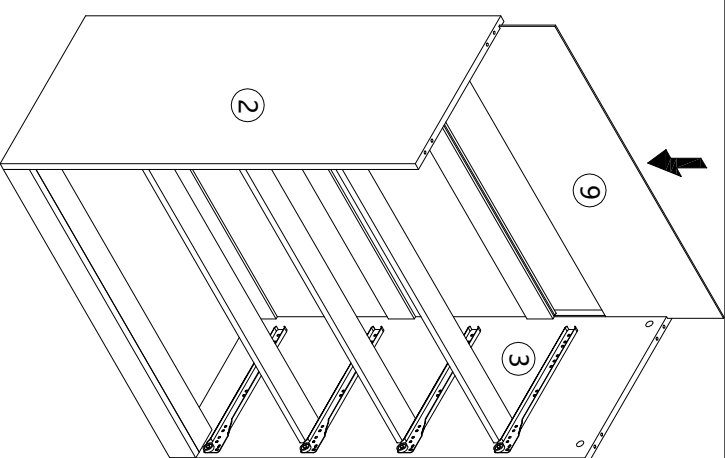 




### STEP 14:

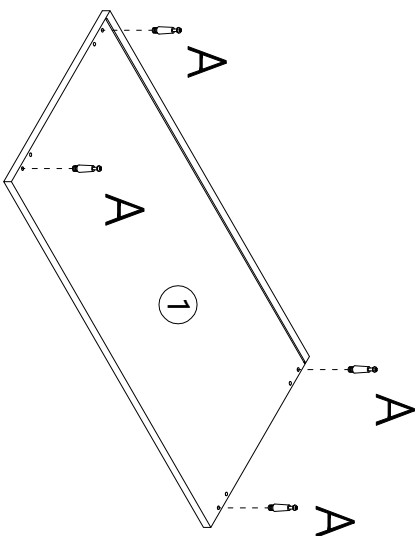  


### STEP 15:

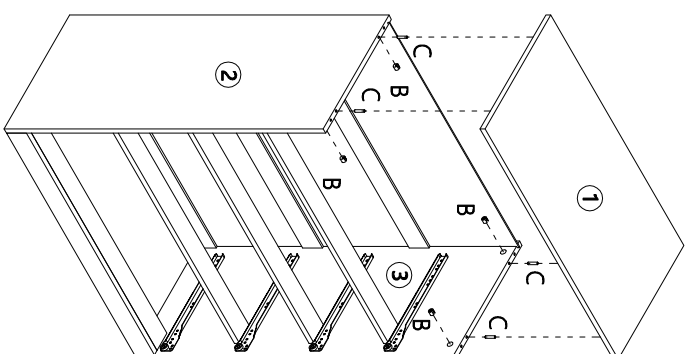  

### STEP 16:

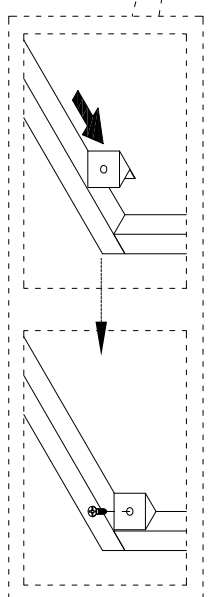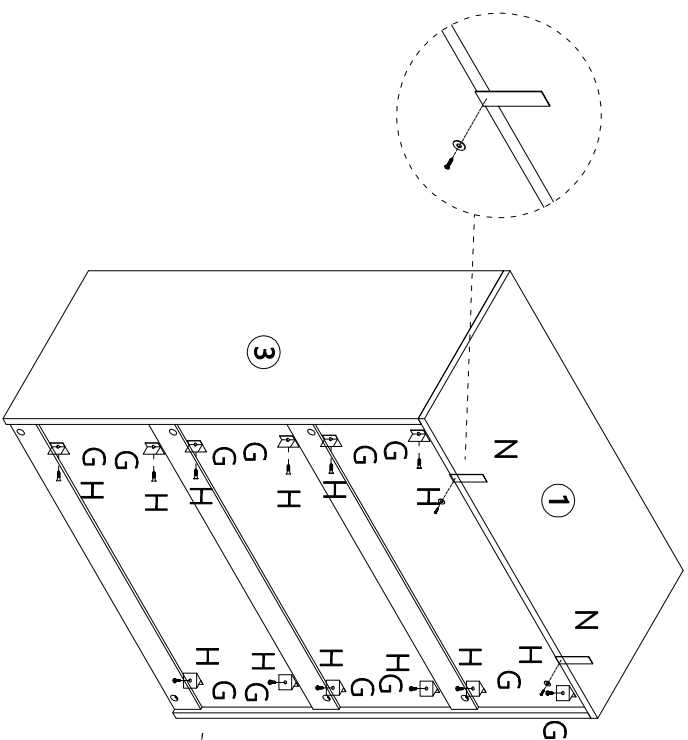   

## STEP 17:

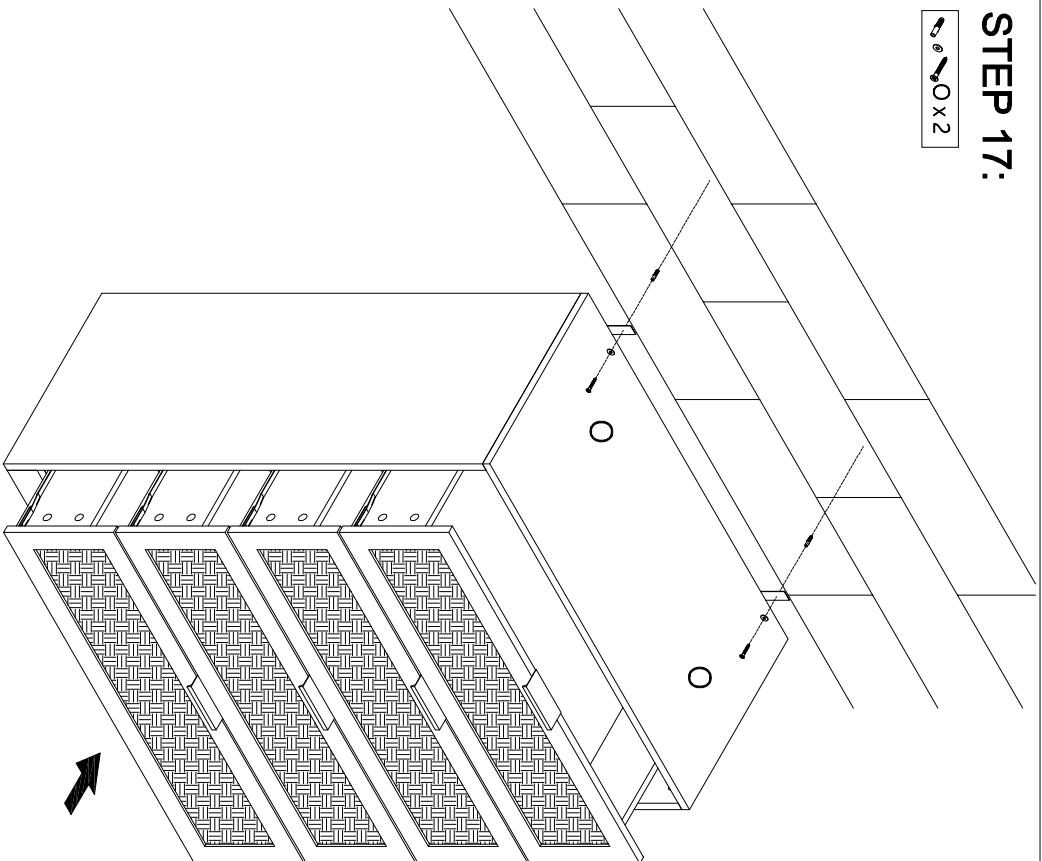 


User instructions should include the wording:

- **It is strongly recommended that this product is permanently fixed to the wall.**
- **Please seek professional advice if you are in doubt of what fixing device to use.**
- **Regularly check that anchors are securely maintained.**
- **Stability of tall items may be affected by thick pile carpet or uneven floors .**
- **Do not place unanchored televisions on furniture .**

**CAUTION :** for your safety when attaching the anchor fixings, please note the following:

 - **Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).**

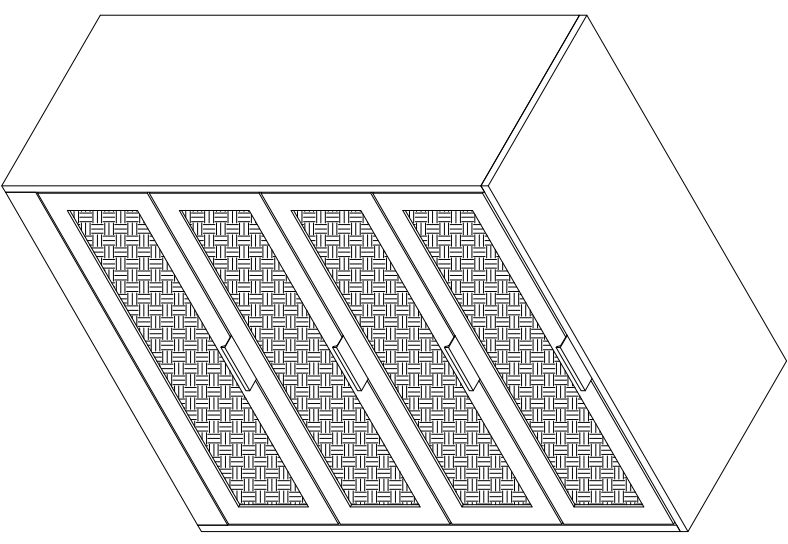

**WARNING:** PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.

