







Instruction Manual

 
4 Person Dome Tent (Keycode:43269358)

Product Image-	Parts list-			
	No.	Part name	Quantity	Image
	1	Inner tent body	X1	
	2	Flysheet body	X1	
	3	Fiberglass pole A(4.42m)	X2	
	4	Fiberglass pole B(1.26m)	X1	
	5	Pegs	X7	
<p>Please read all instructions carefully and sure you have all parts before starting to assemble.</p>				

Assembly steps-


Step 1,

Take out the fiberglass pole from plastic bag. Assemble the poles by each sections joined together with ferrule.





Step 2,

Spread out the inner tent body. Insert the poles through the pole sleeve on the tent body.

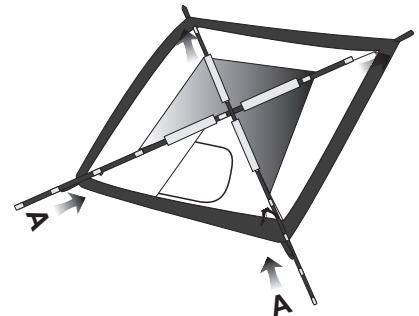



Step 3,

Erect the tent with pole arch and put both pole ends in the webbing pockets on each tent corner. Attach the hooks to each pole.

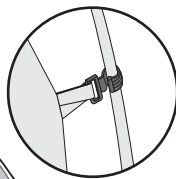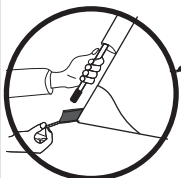

Step 4,

Insert the pole B through the pole sleeve on flysheet. Cover the flysheet on inner tent then insert the pole ends into the metal grommets. Fix the flysheet on inner tent with hooks. Secure the guy ropes to ensure that tent is stable

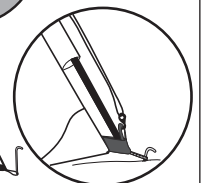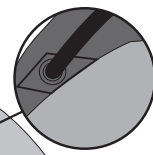

Warning -

- KEEP ALL FLAME AND HEAT SOURCE AWAY FROM THIS TENT FABRIC.
- DO NOT USE CANDLE, MATCHES OR OPEN FLAME OF ANY KIND IN OR NEAR THE TENT.
- DO NOT COOK INSIDE THE TENT.
- DO NOT SMOKE IN THE TENT.
- DO NOT STORE FLAMMABLE LIQUIDS INSIDE THE TENT.
- EXTINGUISH OR TURN OFF ALL LANTERNS BEFORE GOING TO SLEEP.
- CHOOSE A LEVEL SITE TO ERECT TENT THAT IS CLEAR FROM OVERHANGING BRANCHES AND NOT IN LOW LYING AREAS THAT COULD BE SUBJECT TO FLOODING.

Care instruction-

- WIPE CLEAN WITH A DAMP CLOTH.
- DO NOT USE ABRASIVE MATERIALS AND SOLVENTS.
- ENSURE TENT IS CLEAN & DRY BEFORE PACKING OR STORING TO PREVENT DAMAGE FROM MOULD & MILDEW.

Made In China