

Clear party Signs




Contents:

A. 8pcs	B. 8pcs	C. 2pcs
clear plate	wooden base	pen

Instructions


Step 1.

Remove the clear plate film.

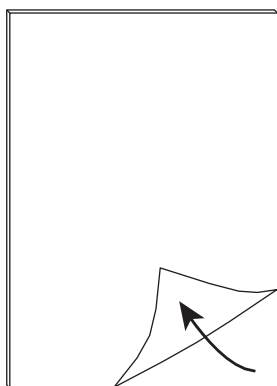

Step 2.

Use pen to write words on clear plate.
For best results please allow 90 seconds for writing to show.

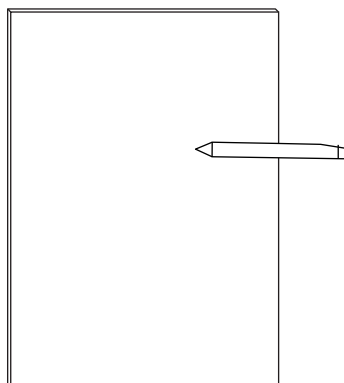

Step 3.

Put the clear plate into wooden base gap.

