INSTRUCTION MANUAL

43277438/21 [KMT088]

43277438/21 MAN True Wireless Buds with ENC Blue/Teal v4

Artwork Proof Date: 19.05,2023

PAPER:

80gsm


Bright white uncoated paper

PRINT COLOURS:



PRINT FINISH:

Double sided Z Fold

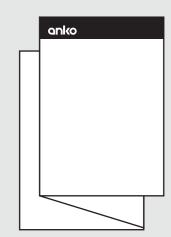

CHANGE LOG CREST INTERNAL USE ONLY

V4: 32 ohm - 16 removed the word specification on power and pairing

ARTWORK SHOULD NOT BE AMENDED WITHOUT PRIOR AGREEMENT FROM CREST ALL ARTWORK MUST BE APPROVED BY CREST PRIOR TO MASS PRODUCTION.

IF THERE ARE QUERIES ABOUT THIS ARTWORK PLEASE CONTACT EMAIL: design@crest.com.au

THANK-YOU.



Bluetooth Version 5.3 Driver Size: 6mm Impedance: 16Ω
Sensitivity: 99dB ± 3dB at 1kHz
Transmission Distance: 10m
Charging Voltage: DC 5.0V/1A
Charge Time (Earbuds): 1.5 hours
Charge Time (Charging Case): 1.5 hours

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Austra6) or 0800 945 995 (New Zedand) or alternatively, via Customer Help at Kmartcom.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre of 600

Customer Service Centre at 690 Springvale Rd, Mulgrave VIC 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Low. You are entitled to a replacement or refund for a major failure and compensation for any other proposable in forecastly large and reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

Note: Please remove insulation film from the charging terminals and charge the earbuds and



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence

iPhone, iPad and Mac is a trademark of Apple Inc., registere in the U.S. and other countries.

anko True Wireless Buds





USB-C charging cable

50mm

CAUTION

 
The batteries in this product are not replaceable. > During use, storage or should not be subjected to extremely low temperatures, or low air pressure at high

> If the battery is exposed to extremely high temperatures it could result in an explosion or the leaking of flammable liquid

or gas.

> Please take care when disposing of the unit; disposal in a fire, oven, mechanicallu crushing or cutting machine could cause explosion.

Product overview



Pause: Press either O button Play: Press either O button Next Track: Press and hold the right O

Previous Track: Press and hold the left Volume Up: Press the right O button twice in quick succession

Volume Down: Press the left O button



they will automatically sync and enter to pairing mode with LED indicators flashing blue and red. Search the Bluetooth list for pairing

name KM43277421/

name KM43277421/ KM43277438. Select to pair with your Bluetooth device. LED indicators will automatically turn off until the earbuds are successfully connected.

Answer Call: Press either O button Reject Call: Press and hold either O button for 2 seconds End Call: Press either O button twice in

quick succession
Activating Phone Assistant: Press

either O button three times in a quick

Power ON/OFF and Pairing

Take both earbuds out from the

charging case to turn on the earbuds.

Once the earbuds are powered on

Put the earbuds into the charging case to turn them off.
Manually Power ON/OFF earphone without charging case by pressing the earbuds button for 5 seconds.

Charging the Case

Connect the USB-C charging cable into the charging case. Make sure you connect the USB-A into a standard USB SV/IA output 1028 FV/IA outp

Charging the earbuds
Place both earbuds into the
charging case, ensuring charging
pins fully connected.
LED indicator will stay red while
earbuds are charging. When they
are fully charged, LED indicator will
turn off after 10 seconds of blue
liaht.

fety instructions
We recommend you fully charge
the earbuds before first use.
To ensure the battery life, the
earbuds and charging case
should be fully charged once a

month.

If the earbuds fail to connect to Bluetooth® device, put the earbuds into the charging case to turn them off. Make sure both earbuds are fully connected with the charging pin, turn off Bluetooth® on your device. Try to turn on the earbuds and then

repeat the pairing process.
The earbuds can be used with the provided charging case only.