 


Accordion-fold
back to back print

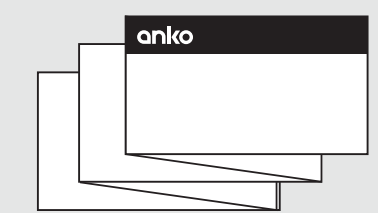

CHANGE LOG CREST INTERNAL USE ONLY
v1 -

 
ARTWORK SHOULD NOT BE AMENDED WITHOUT PRIOR AGREEMENT FROM CREST.
ALL ARTWORK MUST BE APPROVED BY CREST PRIOR TO MASS PRODUCTION.
IF THERE ARE QUERIES ABOUT THIS ARTWORK PLEASE CONTACT:
EMAIL: design@crest.com.au
THANK-YOU

140mm

100mm


2.2.2 D-Input Mode

Press and hold + button and - button to switch to D-Input mode. LED 2 and LED 3 will flash after switching to D-Input mode successfully.

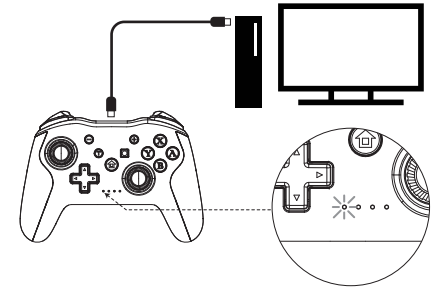

2.3 PS3/Smart TV/TV Box Wired Connection

 
Plug in the provided USB-C cable to connect controller and PS3/TV/TV Box, the LED 1 light will flash after connecting successfully.

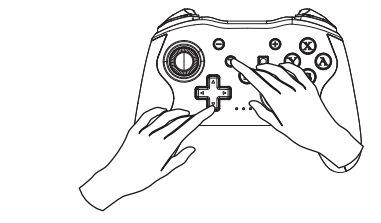

3. Turbo Function and Turbo Speed Setting


3.1 Turbo Setting

 The Turbo Function Keys (also called Action Keys) including A/B/X/Y/L/ZL/R/ZR buttons. Press and hold TURBO and one of the Action Keys A/B/X/Y/L/ZL/R/ZR to enable the TURBO function. Press and hold Down button and - button, the controller will vibrate indicating Action Keys settings cleared and TURBO function disabled.

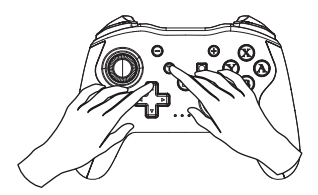

3.2 Turbo Speed Setting

 Turbo speed includes Fast TURBO speed, Middle TURBO speed and Slow TURBO speed. Middle TURBO speed by default (After factory resetting). Press and hold UP button and T button, the controller will vibrate indicating that controller adjusted to higher level speed; Press and hold DOWN button and T button, the controller will vibrate indicating that controller adjusted to lower level speed.

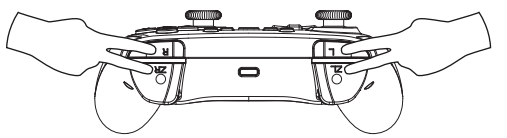

4. Motor Vibration Intensity Setting

The controller includes three level of vibration intensity. Press and hold ZL + L + ZR + R buttons to change between Strong/Middle/Weak motor vibration.

Charging Function

Please use provided USB-C cable for charging. Plug the USB-C cable end to the unit and other USB-A end to a wall charger or other 5V charging devices. LED light flashes when charging and light will be off when the device is fully charged.

Specifications

Model No.: 43277674
Input Voltage: 5V/500mA
Working Current: 20mA
Battery Capacity: 450mAh
Product Size: 152 X 109 X 51MM

Trademarks are property of their respective owners

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.

Nintendo Switch is a registered trademark of the Nintendo of America Inc.

PS3 is a registered trademark of Sony Interactive Entertainment, Inc.

12 month warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave VIC 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.



WARNING do not dispose of unit in fire or water. > Never attempt to disassemble and reassemble. > Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. > Check with your local authority for recycle advice. > Keep your device and all accessories out of reach of children and animals. > Small parts may cause choking or serious injury if swallowed. > Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). > Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. > Do not allow your device to get wet-liquids can cause serious damage. > Do not handle your device with wet hands.



Wireless Controller
Operating instructions



Includes:

 
- > gaming controller
- > USB A to C charging cable
- > user manual




43-277-674

Please read all the safety instructions to avoid damage caused by improper use.

Function Overview

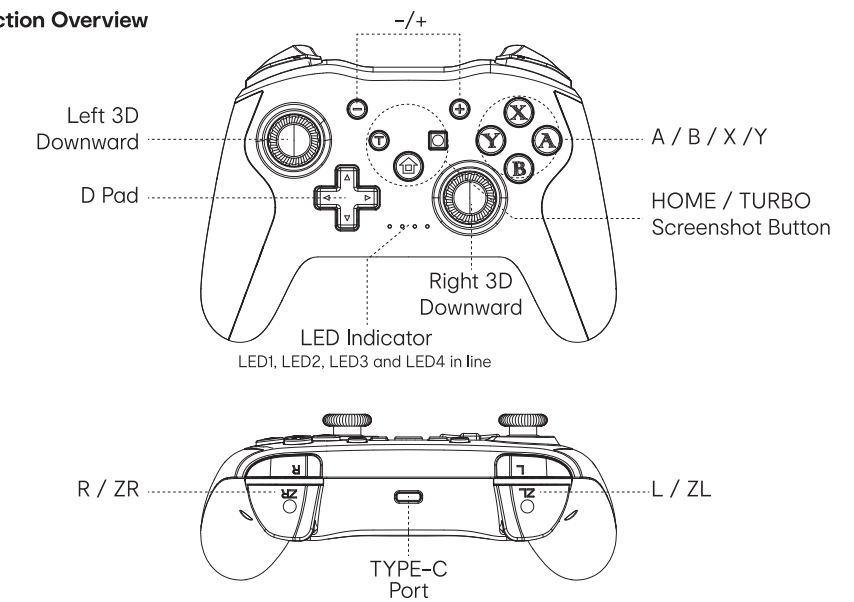

 
Press HOME button to wake-up controller. Press and hold HOME button to turn off controller.



How to use
1. Wireless Connection

1.1 Nintendo Switch Host Connection

 Turn on your Nintendo Switch before connecting with controller, select "Controllers" - "Controllers and Sensors" - "Change Grip/Order" on the Nintendo Switch main menu interface to enter pairing mode.

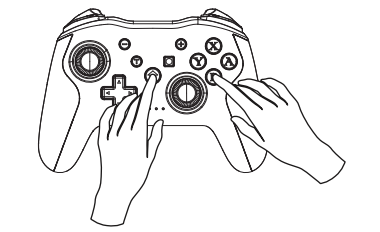


Press and hold controller's HOME and B button to enter pairing mode, LED flashes quickly, controller is automatically paired and connected to the Nintendo Switch host. Corresponding LED light will remain lit when connected successfully.



Press HOME button and light flashes slowly to wake up the host and reconnect.


1.2 Android Gamepad Connection

 Press and hold controller's HOME button and X button to enter pairing mode, LED 2 and LED 3 will flash quickly, in the Bluetooth menu of device, search for "Gamepad" and connect. LED 2 and LED 3 light will remain lit when connected successfully. You can play games under the Android standard agreement or enter the respective platform to download games.

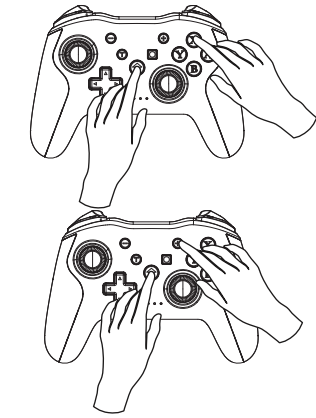

1.3 Android 6.0+ / iOS13.0+ Connection

 Press and hold controller's HOME button and + button to enter pairing mode, LED 3 and LED 4 will flash quickly. In the Bluetooth menu of device, search for "Qmarco" and connect. LED 3 and LED 4 light remain lit when connected successfully.

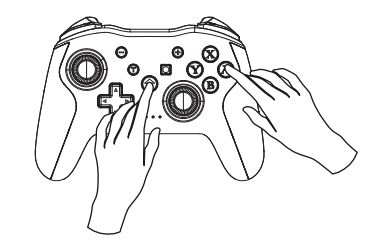


1.4 Laptop Bluetooth Connection

Press and hold controller's HOME button and A button to enter pairing mode, LED 2 and LED 3 will flash quickly, in the Bluetooth & other devices menu of laptop setting, search for "Gamepad" and connect. LED 2 and LED 3 will remain lit when connected successfully.

Note: It is recommended to play gaming on the STEAM platform, and pay attention to the support option on the: "Steam - Settings - Controller - Common Controller Setting".

 2. Wired Connection

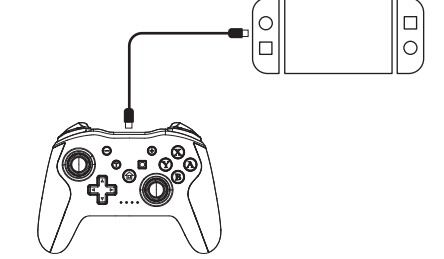


2.1 Nintendo Switch Wired Connection

Press and hold Power button to turn on Switch gaming console. Plug in the USB-C to USB-C cable (not included) to connect the controller and Nintendo Switch. After connecting successfully, the LED 1 will flash.



 If the LED light is still off after going through above steps, find Pro Controller Wired Communication in System Setting as shown left.

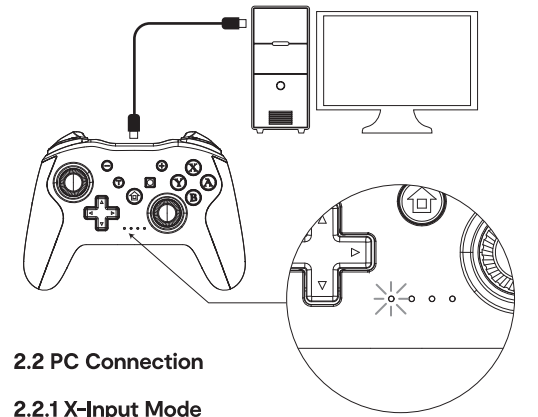

2.2 PC Connection

2.2.1 X-Input Mode

Plug in the provided USB-C cable to connect controller and PC. After connecting successfully, LED 1 will flash, and the mode is X-Input mode.