BEADED TABLE LAMP

KEY CODE - 43283668

IMPORTANT SAFETY INSTRUCTIONS:

The following safety precautions should always be followed, to reduce the risk of electric shock, personal injury or fire. It is important to read all of these instructions carefully before using the product, and to save them for future reference or new users.

- 1. This product must only be used as intended in accordance with the enclosed operating instructions.
- 2. Do not carry the appliance by the mains cable or pull the cable to remove the plug from the socket.
- 3. If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.
- 4. If the appliance stops unexpectedly or appears to malfunction, switch off the power supply, unplug from the mains and stop using immediately. Seek professional advice to rectify the fault or make repairs.
- 5. Switch off the power supply or unplug from the mains socket when not in use, before cleaning or changing accessories.
- 6. Avoid positioning the appliance where the power cable might be accidentally trapped or damaged.
- 7. Keep the appliance and cable away from sources of heat, sharp objects or anything that may cause damage.
- 8. Ensure the appliance is switched OFF before connecting the mains power supply.
- 9. Be aware that some surfaces may become hot. Do not touch hot surfaces and supervise others accordingly.
- 10. This product has not been designed for use by children.
- 11. Children should be closely supervised at all times when they are near any electrical appliance.
- 12. To protect against electric shock, never allow the appliance, the mains cable or plug to come into contact with water or any other liquid.
- 13. Never reach for any appliance that has fallen into water. Switch off the power supply at the mains immediately and unplug. Do not re-use until the product has been inspected and approved by a qualified electrician.
- 14. Always ensure that hands are dry before operating or adjusting any switch on the product or touching the plug and mains supply connections.
- 15. To disconnect, first ensure that all controls are in the OFF position, then remove the plug from the electricity supply.
- 16. Where relevant keep all ventilation slots, filters, etc. uncovered and clear of debris. Never drop or insert objects into the openings.
- 17. Do not use outdoors. This appliance has been designed for domestic indoor use only.

ADDITIONAL SAFETY PRECAUTIONS FOR LIGHTING:

 
- 1. Carefully read all instructions for the assembly and use of this item before connecting to an electricity supply.
- 2. Use only the recommended bulb rating, as detailed on the lamp holder and /or label.
- 3. Never use a bulb that is rated more than the recommended capacity.
- 4. Light bulbs become very hot in seconds. Do not attempt to touch the bulb while the lamp is lit and supervise others accordingly.

5. Before cleaning or replacing a defective bulb, switch off the lamp and unplug from the mains socket. Allow the bulb to cool for at least 10 minutes, before touching it and making the change.

- 6. Ensure the new bulb is secure in the holder before reconnecting to the power supply.
- 7. If in doubt, consult a qualified electrician.

Product specification

- Rated voltage: 220-240V ~ 50Hz
- This lamp requires: 1x Max 40W E27 Edison Screw Lampholder bulb (Notincluded)
 TOWLED



INSTRUCTIONS FOR INSTALLATION:

- 1. Caution: Assemble the lamp completely before connecting to the electricity supply.
- 2. Remove shade wrapping before use. Install the lamp shade to the base.
- 3. Install the bulb Max 40W E27 Edison Screw lampholder (bulb not included)
- 4. Check to ensure that all the components have been assembled correctly.
- 5. Connect to the mains supply.

