



Anko  
Styleguide  
Artwork

NON PRINTING



DIELINE



GRID  
UNITS

UV COATING: NOT OK  
UV上光: 不行  
FOIL STAMP: NOT OK  
烫金: 不行  
FILM LAMINATION: NOT OK  
覆膜: 不行  
WATER-BASE GLOSS VARNISH: OK  
水性亮油: 行

ALL COLOURS PRINT CMYK 全部以四色印刷



CMYK



Black

C:0 M:0

Y:0 K:100

DATE:  
03.APR.2023  
PRODUCT CODE:  
43-288-946 (Alvin)  
FILE NAME:  
PRINCESS LIGHT UP TENT  
LOCATION & OPERATOR:  
HK/KENNETH SO

21cm

Disney  
PRINCESS ©Disney  
www.disney.com

# Princess Light Up Tent Instruction Manual

3+  
years

## Parts List:

Tent pole x 4pc (when fully assembled)  
Tent x 1pc  
String light x 1pc (3 x AA Battery not included)  
Carry bag x 1pc  
Net bag x 4pc


## Assembly Instructions:

Step 1. Connect each of the short poles together to form four long poles. Slide net into the pole from the red side and tie a knot.  
Step 2. Unfold the tent to form a round shape.  
Step 3. Insert the red end of the poles into the pockets located at the tip of the tent and insert the other black end of the poles into the pockets located at the bottom of tent. Tie the straps and the string light together with the poles. Put battery box into the bag at the roof of tent, slide light string into net bag along the arrow indicated path, then tie a knot with the loop on the end.



## Folding Instructions for Tent:

Remove the string light and all the poles first, and fold the tent to form a round shape (Fig.1), then fold it from C, D point (Fig.2) Attach A point on the floor and fix it with foot (Fig.3), twist B point clockwise and let D point to move inside to form two smaller loops (Fig.4), overlap C point on B point, you can see a round folded shape (Fig.5). Wrap the folded tent with elastic belt to keep it compressed (Fig.6). Now it is easy to put it into the carry bag.

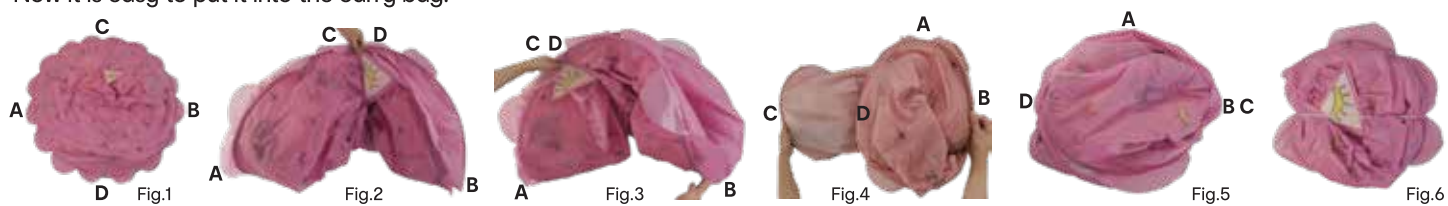

## WARNING!


1. Read instructions carefully before assembly.
2. Adult assembly required. Bags are packages, not toys. Remove bags before giving the toy to your child.
3. The string light has ON/FLASH/OFF functions.
4. This toy produces flashes that may trigger epilepsy in sensitized individuals.
5. Keep away from fire. Never allow a naked flame near this product, the fabric will burn if left in continuous contact with flame and heat sources.
6. This product has an internal spring frame that will pop open with some force when opened. Never let small children unfold or fold this product. Caution must be used in the handling of this product.
7. For indoor use only.
8. Take out the batteries from battery box when not in use an extended time. Exhausted batteries are to be removed from the toy.
9. Please keep this instruction for future reference.

## Care Instructions:

1. Wipe clean with damp cloth, do not use abrasive material or solvents.
2. Ensure the tent is clean and dry thoroughly before storage.

## Battery Replacement

The string light uses 3 x AA batteries. If the light is becoming weak, it's suggested to change the batteries. Use screw driver to unscrew the bolt on the lid of battery box and replace the batteries as the image shows, then put the lid back on the box and screw the bolt into the hole firmly. Please note: Batteries are to be inserted with the correct polarity (+ and -). Different types of batteries or new and used batteries are not to be mixed. Non-rechargeable batteries are not to be recharged. The supply terminals are not to be short-circuited. Rechargeable batteries should be charged under adult supervision.

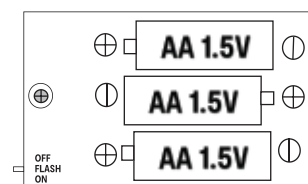

MADE IN CHINA

FOR AU / NZ: IMPORTED FOR KMART  
STORES IN AUSTRALIA AND NEW ZEALAND.

KMART CUSTOMER SERVICE  
AU: 1800 124 125 NZ: 0800 945 995

KEYCODE: 43-288-946

29.7cm