

AGES 5+ YEARS

REMOTE CONTROL SPACE ROBOT

MANUAL



PACKAGE CONTENTS

• Robot • Remote Control • User Manual

IMPORTANT SAFETY PRECAUTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR ROBOT.

1. Do not use your robot near water. Clean using a soft cloth or paper towel.
2. Do not place your robot on any wet surfaces.
3. Do not allow children under the age of five to play with robot.
4. Do not expose your robot to excessive heat, flames or fire.
5. Always press all buttons or switches carefully.
6. Do not use in extremely dry environments, as this can lead to static discharge during usage.
7. Do not expose your robot to temperatures above 40°C. Keep out of direct sunlight.
8. Do not step, puncture or expose your robot to excessive trauma.
9. Your robot is not intended for commercial use.

ROBOT



REMOTE CONTROL



 
Power / Play
(Press the power button, the robot will enter awake mode and when the function will you press the play button again to resume activity.)

-1-

INSERTING BATTERIES


Robot

1. Unscrew to open battery cover, insert 3 X 1.5V AA batteries.
 2. Replace battery cover.
- Attention: remove batteries after you have finished using your product.



Remote control

 1. Unscrew to open battery cover, insert 2 X 1.5V AAA batteries.
 2. Replace battery cover.
- Attention: remove batteries after you have finished using your product.



POWERING ON YOUR ROBOT

Once you have inserted batteries into your robot and remote control, you can go ahead and power on your robot. To do so, switch the ON / OFF button to turn on the robot. (The LED light of the eyes will be on.) When you do not operate the robot for about 3 minutes, it will make a sound and enter sleep mode, you can react by switching the ON / OFF button to resume use. When you have finished playing with your robot, switch the ON / OFF button to turn off the robot.

NOTE: When your robot is running low on power, it will emit an audible tone and power down. Once the batteries are completely depleted, replace the batteries as soon as possible to continue use.

MOVING YOUR ROBOT

You can use your remote control to move your robot around in different directions.

By pressing the forward button, the robot will walk forwards for a distance.



By pressing the turn button, the robot will turn counterclockwise.



-2-

PROGRAMMING YOUR ROBOT

Press the program button and your robot will enter program mode. Once in program mode, you can press the forward / turn / dance / light control button a series of times to create a movement program. The robot can be programmed with up to 15 actions. Press the program play button to have your robot carry out the movement program that you created.

PRODUCT MAY ONLY BE USED AS SHOWN. READ THE INSTRUCTIONS BEFORE USING THE PRODUCT. PLEASE KEEP THE INSTRUCTIONS AND THIS MANUAL IN A SAFE PLACE FOR REFERENCE.

WARNING: BATTERIES ARE TO BE RECHARGED WITH THE CORRECT RECHARGER. DO NOT MIX DIFFERENT TYPES OF BATTERIES OR RECHARGE BATTERIES WITH A RECHARGER NOT DESIGNED FOR THEM. ALWAYS RECHARGE BATTERIES IN A SAFE PLACE. ALWAYS RECHARGE BATTERIES IN A SAFE PLACE. ALWAYS RECHARGE BATTERIES IN A SAFE PLACE. ALWAYS RECHARGE BATTERIES IN A SAFE PLACE.

WARNING: CHOKING HAZARD - SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

WARNING: TO PREVENT ACCIDENTS, PLEASE READ ALL INSTRUCTIONS CAREFULLY. ALWAYS RECHARGE BATTERIES IN A SAFE PLACE.

WARNING: THE TOP PROCESSOR PLAYS THAT MAY TRIGGER EXPLOSION IN SENSITIVE AREAS.

KEYCODE: 4329184

WARNING: CHOKING HAZARD - SMALL PARTS. NOT FOR CHILDREN UNDER 3 YEARS.

-3-