


anko

BLUETOOTH LED

KARAOKE PARTY SPEAKER WITH 2MICS

43303366 User Manual

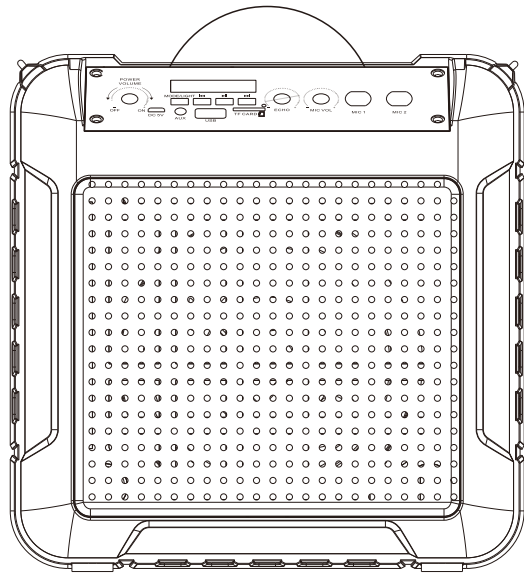

Please read all instructions carefully and keep for future reference.

Warning:

1. Keep the unit away from liquids and moisture.
2. Allow a minimum distance of 100 cm around the apparatus for sufficient ventilation.
3. The ventilation should not be impeded by covering the ventilation opening with items.
4. Keep away from naked flames and other heat sources.
5. The apparatus is only suitable for mounting at height < 2m.
6. The speaker can be charged under off mode only, can't playing and charging at the same time.

Rechargeable Battery Safety Information:

1. Dispose of this product in accordance with local regulations.
2. Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
3. Do not attempt to remove or replace the internal battery.
4. Exposure of the battery to fire, extreme heat, cutting or crushing may result in fire or explosion.
5. A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.


Product Specification

Charging input rating: 5V 500mA
Charging time: 4.5 Hours
Playback time at 50% volume: 3 Hours
Power: 3 W
Speaker: 6.5Inch
FM Radio: 87.5-108MHz
AUX In: 3.5mm

Product feature:

- Multi-lighting effects
- Bluetooth version 5.0
- Built-in rechargeable lithium battery

Button and interface:

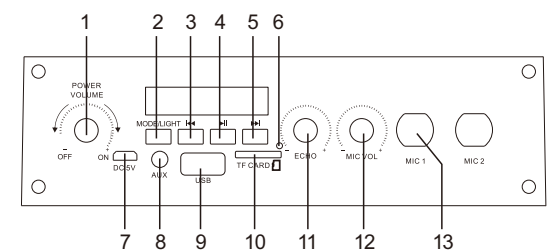

1. POWER/VOLUME Knob : Power ON/OFF Knob or Volume Up/Down Knob.
2. MODE/LIGHT Key : Short press to change the modes, long press to change the light effects.
3. PREVIOUS Key : Press for previous track in BT/USB/TF card and TWS modes or to goto the previous station in FM mode.
4. PLAY/PAUSE Key : Short press for pause or play the track in BT/USB/TF card and TWS modes *Long press to turn on TWS pairing function in BT mode. *Long press to search the FM radio stations in FM mode.
5. NEXT Key : Press for next track in BT/USB/TF card and TWS modes or to goto the next station in FM mode.
6. BATTERY INDICATOR
7. DC INPUT
8. AUX Input: Insert the 3.5 mm cable.
9. USB Input : Insert the USB driver to play the tracks.
10. TF Card Input : Insert the TF Card to play the tracks.
11. Echo Volume : Echo volume adjustment knob.
12. Mic Volume : Microphone volume adjustment knob.
13. Mic Input : Insert the wired microphone.

Connecting to Wired Microphone



Insert 6.35mm wired microphone, and use control knob to adjust the sound level.



When playing with the wired microphone, please use MIC Volume knob and Echo volume knob to adjust the volume and echo effect of microphone.

Powering ON/OFF

1. Make sure that the speaker has been charged.
2. Turn the [POWER/VOLUME] knob clockwise until it clicks to power ON. The speaker will enter Bluetooth pairing mode.
3. The speaker may automatically re-pair to any nearby, previously paired device.
4. Turn the [POWER/VOLUME] knob counterclockwise until it clicks to power OFF.

Charging the Speaker

The speaker comes with a built-in rechargeable battery, follow the below steps to charge it:

1. Plug the end of USB charging cable (included) with USB charger (not included) to the DC 5V input slot, another end plug into a wall outlet to start charge.
2. The battery indicator will show RED on the top and turn off when fully charged.
3. When the battery is low, the speaker would prompt 'DIDIDI' tone to advise user to charge the speaker.

Changing Function Modes

1. Press the [MODE/LIGHT] button to switch function modes.
2. The LED screen of the speaker will indicate the mode.

Note: You must have a micro TF card or USB device inserted or AUX cable connected to switch to these modes.

Adjusting Volume & Playback

1. Adjust volume with the [POWER/VOLUME] knob or the controls on a connected device.
2. Press the [<<] and [>>] buttons of the speaker to switch the tracks in Bluetooth/USB mode or stations in FM mode .
3. Press the [PAUSE] button to pause and resume playback in Bluetooth/USB mode.

Switching the Speaker Light Effects

1. The LED light effect will automatically turn on when the speaker is powered on.
2. Long press the [MODE/LIGHT] button on the top of the speaker to switch LED light effects and turn the lights off.

USB and TF Card Playing

This speaker has the input slot of USB and TF card for play back MP3 music.

1. Insert your TF card into the input slot and speaker will start playing automatically.

Using the FM Radio

- (FM Antenna cable on the back of the speaker)
1. Power on the speaker and switch to FM mode. The LED screen will display the current FM frequency.
 2. Extend the FM cable from the back of speaker to get a better radio effect.
 3. Long press the [PAUSE] button to start scanning and saving available stations. The LED screen will show scanning progress.
 4. Press the [>>] and [<<] buttons to the switch to the saved stations.

Connecting to an AUX Device

Insert one connector of 3.5mm AUX cable (included) into the 3.5mm AUX input jack on the back of the speaker. Insert the other connector into the headphone jack or audio output jack of your media playing device. The LED screen will display the word "AUH".

In AUX mode, only >>| can be controlled.

Connecting with Bluetooth

1. Power on the speaker. The LED screen will display the word "blue."
2. Open the bluetooth on your mobile device and search Bluetooth name 43303366 to pair.
3. In Bluetooth mode, playback and volume can be controlled by your paired device or the controls on the top of the speaker.

TWS Connecting

*This speaker supports TWS pairing function, please buy two same speaker to enjoy this function.

1. Long press [PAUSE] button on two speakers to turn on the TWS pairing function, there is a DI sound from the speaker and " 1-1 " will short display on the screen.
2. The TWS will pair automatically once both speakers turn on the TWS function.
3. Turn the volume knob on the top panel of any speaker increase or decrease the music volume.

*Please adjust two speakers volume level at the same level to avoid the intermittent sound or display jump during the playing.

4. If not using the TWS function, please long press [PAUSE] to disconnected TWS.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.