

anko

Compact Foil Shaver S-627 User Manual



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFETYGUARDS

To ensure proper operation of this appliance, please read this instruction manual completely and carefully before using the appliance and keep it for future reference.

WARNING!

 
1. Only use the appliance as described in this manual.
2. Do not immerse the appliance in water or any other liquid.
3. Do not allow the appliance to be exposed to rain or moisture during use or storage.
4. Always check the appliance for damage prior to use. If any damage is observed, do not use the appliance.
5. The appliance is intended for indoor use only. Do not use outdoors.
6. Always switch the appliance OFF after use.
7. This appliance has no user serviceable parts. Do not attempt to access the appliance covers.
8. This appliance is for personal use only, not designed for commercial use.
9. **Do not use** the appliance if it is not working properly, if it has been dropped or if it has been immersed in any liquid.
10. Before using the appliance, ensure that the foil head is securely fitted and not damaged.
11. Do not use the appliance on children.
12. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
13. Children should be supervised to ensure that they do not play with the appliance.
14. Use only the attachments provided with the product.
15. Please put the protective cap on the shaver every time to prevent damage on the shaving foil. **To avoid personal injury, do not use the shaver if it has a damaged shaving foil or inner cutter.**
16. **IMPORTANT! Only the shaver head should be washed under tap water.**
17. **CAUTION! The blades are extremely sharp! DO NOT touch the blades.**
18. Do not use salt water or boiling water. Also, do not use cleaning products that are designed for toilets, bathrooms or kitchen appliances.
19. Cleaning and user maintenance shall not be made by children without supervision.
20. **WARNING: Keep the appliance dry.**
21. Non-rechargeable batteries are not to be recharged.
22. Batteries are to be inserted with the correct polarity.
23. Exhausted batteries are to be removed from the appliance and safely disposed of.
24. If the appliance is to be stored unused for a long period, the batteries should be removed.
25. The supply terminals are not to be short-circuited.
26. Type of Battery: 1.5V AA

27. Open the cover, insert the battery with correct polarity, then closed the cover correctly.

PERSONAL SAFETY

- Never use the appliance on any part of the body other than shaving the face and beard.
- **IMPORTANT! Do not use the appliance if the foil is split or broken.**
- Never leave the appliance unattended while switched ON.
- Do not touch the blades as they are very sharp.
- Always ensure that the hands are dry before operating or when switching it ON or OFF.

KNOW YOUR TRAVEL FOIL SHAVER

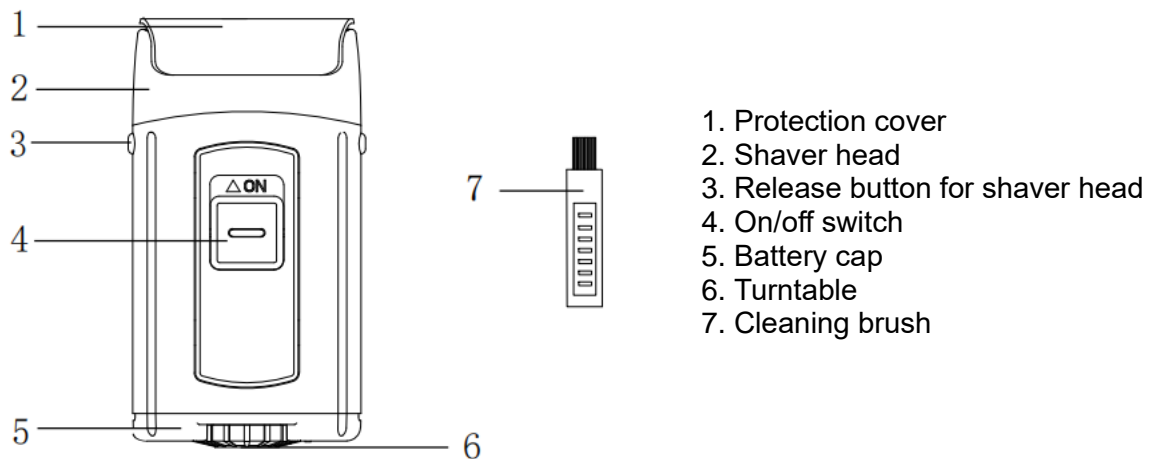

BEFORE FIRST USE

The appliance has been packaged carefully to ensure the product reaches you in good condition. If the product has been damaged, dropped, has a malfunction in any way, do not use.

Carefully unpack your appliance. Make sure you do not discard any packaging material until all parts of the appliance have been found.

HOW TO USE YOUR TRAVEL FOIL SHAVER

We recommend a dry shave before you wash. After washing, your skin is slightly swollen. As a result, shavers are often unable to reach the entire length of your beard hair so the shave will be less thorough.


For a shave, follow the steps below:

Open the battery cap and insert 2 AA Alkaline battery (not included) respecting the polarity then close the case.

1. Remove the protective cap.
2. Push down and slide forward the On/Off switch to turn the shaver on.
3. Use your free hand to stretch the part of your face you intend to shave.
4. While applying gentle pressure, move the shaver head perpendicular to the direction of hair growth.

NOTE: Applying excessive pressure does not provide a closer shave.

5. After a few strokes, use your free hand to check the results and repeat step 4 if necessary.
6. Switch the shaver OFF once you have finished shaving.
7. Put the protective cap on the shaver every time after use to prevent damage.

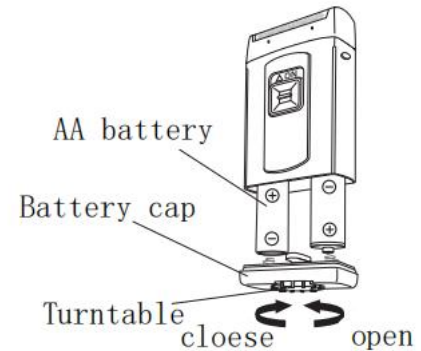


CLEANING AND MAINTENANCE

Be sure to turn off the switch during maintenance.

1. Press the release button (on both sides) and pull off the shaver head.

CAUTION! The blades are extremely sharp! DO NOT touch the blades.

2. Rinse the shaver head and inner blades with clean water or running water.
Do not let shaver sink into the water.
3. When washing is not available, use the cleaning brush to dust off the hair.
4. Allow the shaver head and inner blades dry completely.
5. Reassemble the shaver head to the body.

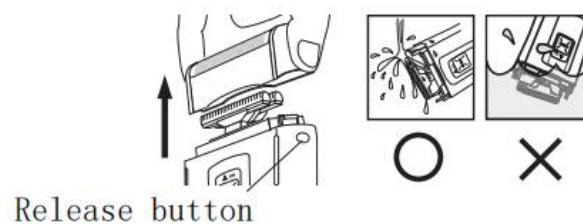

BATTERY DISPOSAL

Batteries contain substances harmful to our environment. Do not dispose of the appliance with the battery inside. Remove the battery and hand it over to your local council recycling facility for environmental protection.

TECHNICAL DATA

Power supply: 2 AA size Alkaline Battery (Battery not included)

Water proof: IPX5

Operating temperature: 0°C to 35°C

Storage temperature: -10°C to 45°C

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us