

# **anko**

## **Massage Buffer**

### **INSTRUCTION MANUAL**



**Model NO.: SM-405**

Thank you

---

- Before using please read this user manual carefully for the correct usage and operation of this product.
  - Please keep the user manual on hand for easy reference.
- 

---

## Important Safety Instruction

---

When using the product, all instructions and basic precautions should always be followed, including the following:

### **DANGER**

To reduce the risk of electric shock:

Always unplug this product from the electrical outlet immediately after use and before cleaning.

### **WARNING**

To reduce the risk of burns, fire, electric shock, or injury to persons:

- 1) The product should never be left unattended when connected to mains power. Unplug from the mains power outlet when it is not in use and before putting on or taking off parts.
- 2) Do not operate under a blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- 3) Do not carry this product by its supply cord or use cord as a handle.
- 4) Never operate the product with the air openings blocked. Keep the air openings free of lint, hair, and the like.
- 5) Do not drop or insert any object into any opening.
- 6) Do not use outdoors.
- 7) Do not operate where aerosol (spray) products are being used or where oxygen is administered.
- 8) To disconnect, switch off all controls and remove plug from mains power outlet.
- 9) Close supervision is necessary when this appliance is used by, or near children, or disabled persons to ensure that they do not misuse the product.
- 10) Keep the cord away from heated surfaces. May cause serious burns. Do not use over insensitive skin areas or in the presence of poor circulation.
- 11) The appliance has a heated surface. To prevent skin burns, persons insensitive to heat must be careful when using the appliance.

- 12) This appliance is not intended for use by persons (including children) with reduced physical, Sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 13) This appliance contains rechargeable batteries that are non-replaceable.

### **Before Using the Unit**

Do not use the appliance if it, or the USB power cord show signs of damage, if it is not in perfect working order, or if it has been dropped or become damp.



The device is not to be used for commercial use or medical purposes.

If you have health concerns, consult your doctor before using the Massage Buffer



Only use indoors!



Do not use the device in damp rooms (e.g. when bathing or showering)

 


• Do NOT wash!

---

## Name and Function of Parts

---

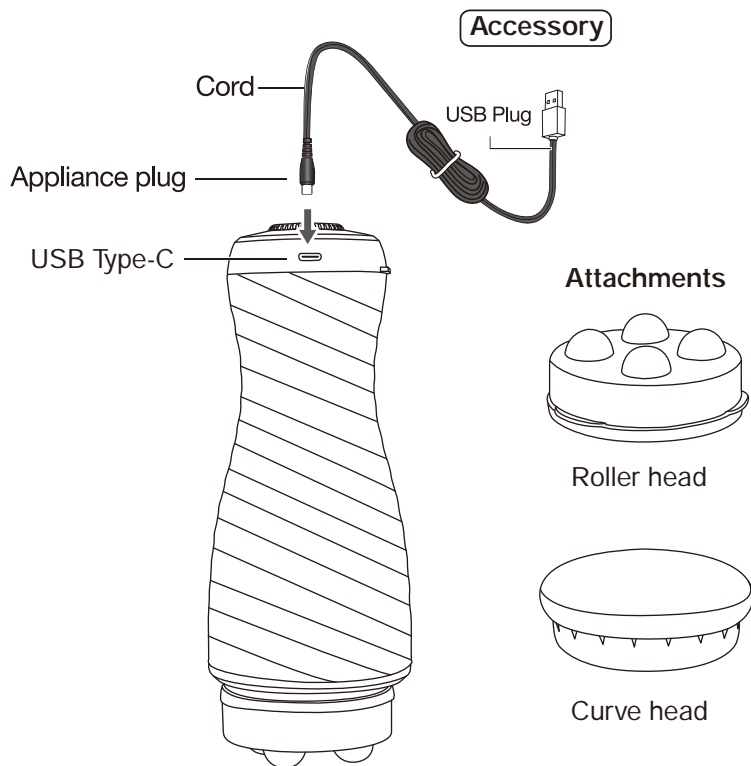

### Tips for use

DO NOT USE the unit without the attachment heads.

The intensity can be adjusted by rotating the dial. Turn clockwise to increase the intensity, and turn anti-clockwise to decrease the intensity.



Green light – Low intensity



Amber light – Medium intensity



Red light – High intensity

**Note:** For your safety, the Massage Buffer will auto-turn off after 15 minutes of continuous use.

---

## How to Operate

---

### Battery Charging


Before first use, the Massage Buffer should be fully charged.

Connect the charging cable to a suitable USB output (5V 2A). To charge the Massage Buffer fully, the charging time is approx. 2.5 hours.

### During charging:

When the battery is charging, the red light will illuminate.

 
When the battery fully charged, the blue light will illuminate. When fully charged, the approximate running time of the massage buffer at: Low-intensity – 180mins; Medium intensity – 90mins; High-intensity – 60mins.

**Note:** The massage buffer has a 15mins auto-off function. To continue using it, press the  button.

When the Massage Buffer is fully charged you may disconnect the power supply. When the Massage Buffer intensity is reduced, stop using the unit. Connect it to a power supply to recharge.

Interchangeable heads for all massage needs

- Curve head for an invigorating massage
- Roller head for deep tissue massage

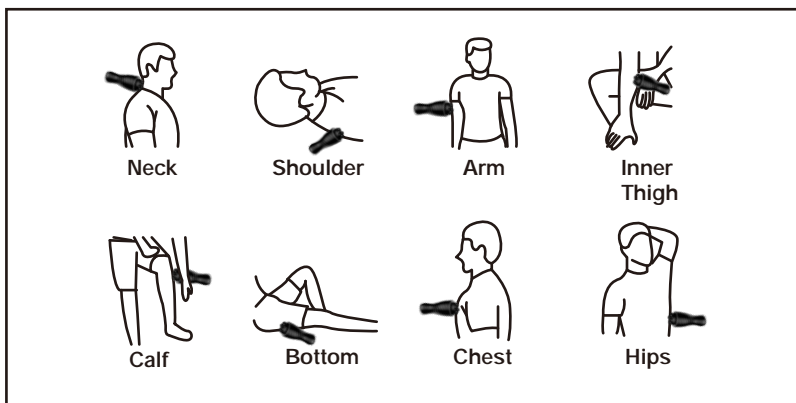

## Troubleshoot

Symptom	Cause	Solution
The product does not work	The power key is not started	Start the power key
	The product will be turned off automatically after it finishes a 15 minutes' massage	To continue using the Massage Buffer, press power key again
The product is hot or suddenly cannot be used	You have exceeded the maximum continuous use time of 15 minutes. This has caused overheating.	Turn off the device and let it cool down for 30 minutes.

If you still have any problem after using the troubleshoots above, please contact Customer Service Centre.

 
 
---

## To clean and maintain the product

---

### 1. Cleaning

Before you clean, please make sure that the switch is in the off position, and the power plug has been pulled out from the socket.  
Please use a dry cloth to clean the product.

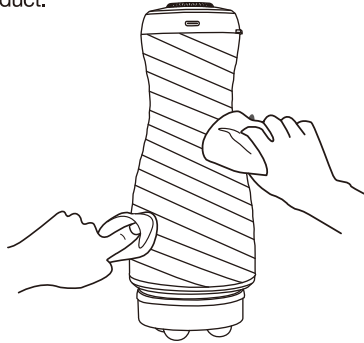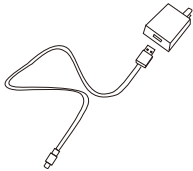

### 2. Maintenance

Keep the product clean and store away in a dry location away from moisture.



#### Attention

Please do not use benzene or thinner or any other aggressive detergents to clean the product.  
It may cause damage to the product.

---

## Technical specifications

---

Name: Massage Buffer

Input: 5V d.c. 2.0A

Li-ion 1800mAh 7.4V



Made in China

# 12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>