

anko

Cordless Stick Vac For Household Use Only



Model No.: EV-PH666-S222
Rev 1

Note: This appliance's specifications and/or components are subject to change without prior notice.

If any Accessories should fail during use, please call 1300 105 888 (Australia) or 09 8870 447 (New Zealand) for an immediate replacement. This will save you from returning the product to the store.

If we can assist you in any other way, please feel free to contact us.

1	Warnings	5
2	Safety Directions	5
3	Transporting your Vacuum	8
4	Components	8
5	Assembly	9
	5.1 Attaching the Extension Tube	9
	5.2 Removing the Extension Tube.....	9
	5.3 Attaching the Motorised Floor Head	9
	5.4 Removing the Motorised Floor Head.....	10
	5.5 Using Without the Extension Tube.....	10
	5.6 Tools / Tool Holder	10
	5.6.1 Crevice / Brush Tool.....	10
6	Charging	11
7	Using the Vacuum Cleaner	13
	7.1 On / Off	13
	7.2 Speed Control	13
	7.2.1 Default Speed – “Low Speed”	13
8	Indicator Lights	14
	8.1 Battery Remaining	14
9	Emptying the Dust Canister	14
10	User Maintenance	15
	10.1 Cleaning the Filters	16
	10.2 Cleaning Dust Canister	18
	10.3 Cleaning the Vacuum Cleaner Body and Tools	19
	10.4 Cleaning the Motorised Floor Head.....	19
11	Storage / Charging Wall Bracket	21
12	Troubleshooting	22
13	Warranty Against Defect	23

1 Warnings

Before using this appliance, read and follow all warnings and instructions in this manual, even if you are familiar with this product.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

2 Safety Directions



Please read this instruction manual carefully before first use. It is advisable to keep this instruction manual for future reference.

DO NOT vacuum water, wet objects, liquids, ashes, hot coals, cigarette butts, matches or any hot, smoking or burning objects, etc.

DO NOT pick up flammable or combustible materials (i.e., lighter fluid, petrol, kerosene, etc.) or use in the presence of explosive liquids or vapour.

DO NOT pick up toxic material (i.e., chlorine bleach, ammonia, drain cleaner, etc.)

DO NOT vacuum Toner (for laser printers, copy machines etc.) as there is a risk of fire and explosion.

DO NOT vacuum plaster dust, cement dust etc. as the filter will block very quickly.

DO NOT use the vacuum without the filter fitted.

DO NOT store or use the appliance near high-temperature areas.

DO NOT run over the charger cable with the vacuum cleaner.

DO NOT use the vacuum cleaner if it is blocked. Turn off and clear all blockages before continuing.

DO NOT use the vacuum cleaner with a blocked filter. Clean the filter before continuing. (refer to User Maintenance section).

DO NOT use the vacuum cleaner if the appliance malfunctions, abnormal noise, smells, or smoke, is dropped or damaged in any manner or if any breakage is found during the operation.

For electrical safety, any repairs to the product must be performed by a qualified electrical person only, or the product must be disposed of.

DO NOT misuse the Charger Cable. Never pull the appliance by the cable or pull to disconnect it from the outlet. Instead, grasp the charger body and pull to disconnect.

DO NOT use the vacuum cleaner to pick up large objects, hard or sharp objects such as glass, nails, screws, coins, etc. that are likely to cause damage.

DO NOT use with damaged Charger Cable or Charger Body.

DO NOT use the vacuum cleaner if it has been dropped, damaged, left outdoors, or dropped into liquid (water etc.)

DO NOT handle the Charger or vacuum cleaner with wet hands.

DO NOT put any objects into openings.

DO NOT use with any openings blocked and do not restrict airflow.

DO NOT use without the filter in place.

DO NOT attempt to modify this product in any way.

DO empty the Dust Canister regularly for optimal operation of the vacuum.

DO keep hair, loose clothing, fingers, feet and body parts away from openings or moving parts.

DO disconnect the Charger from the power supply when not in use,

DO use only on dry, indoor surfaces.

DO use only as described in this manual. Use only the manufacturer's recommended attachments.

DO Keep the Charger Cable away from heated surfaces.

DO Keep all openings free of dust, lint, hair, and anything that may reduce airflow.

DO use extra care when vacuuming on stairs.

DO keep your work area well-lit.

DO store your appliance indoors in a cool dry area.

DO ensure children and babies cannot play with plastic bags or any packaging materials.

DO operate the Charger from a power source of the same voltage, frequency and rating as indicated on the product identification plate.



WARNING

Only use the Battery Charger which was supplied with this appliance.
Model No. ZD12D260050AU 100 – 240V~ 50/60Hz 0.5A Output: 26.0V 500mA

Battery Pack Specification:

Type: Li-ion x 6 cell, 22.2Vd.c., 2200mAh, 48.48Wh (Non-Removable).

Consumers are cautioned against using and/or purchasing counterfeit and/or inferior-quality batteries. These batteries have the potential to cause fire, personal injury, and/or property damage. These batteries are typically found on online auction websites or from other retailers and are known to pose a potential safety risk.

Never try to recharge Non-Rechargeable batteries as they may explode, catch on fire or cause personal injury and/or damage to property.

- May explode if disposed of in fire.
- To prevent injury or burns, do not allow metal objects to contact battery terminals.
- Do not use or store in temperatures above 45°C.



The Battery Pack must be removed from the vacuum cleaner before disposal.

Contact your local waste management authority for more information on Battery Recycling and disposal regulations in your area.



This symbol on the product or its packaging indicates:

Do not dispose of electrical appliances or batteries as unsorted municipal waste, use separate collection facilities. Contact your local council for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. Please contact your local council or regional authority for more information on the collection, reuse, and recycling programmes.

If this appliance is used by a third party, **DO** supply the instruction manual with it.

No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling of the appliance.

This product has not been designed for any uses other than those specified in this manual.

ONLY for domestic use. Industrial or commercial use invalidates the warranty.

Read and Save These Instructions


3 Transporting your Vacuum

To move your vacuum cleaner from room to room, unplug the unit and carry using the carry handle.

Never pull or carry the vacuum cleaner by its Charger cable.

Never carry the vacuum cleaner with the accessories / Tools.

4 Components

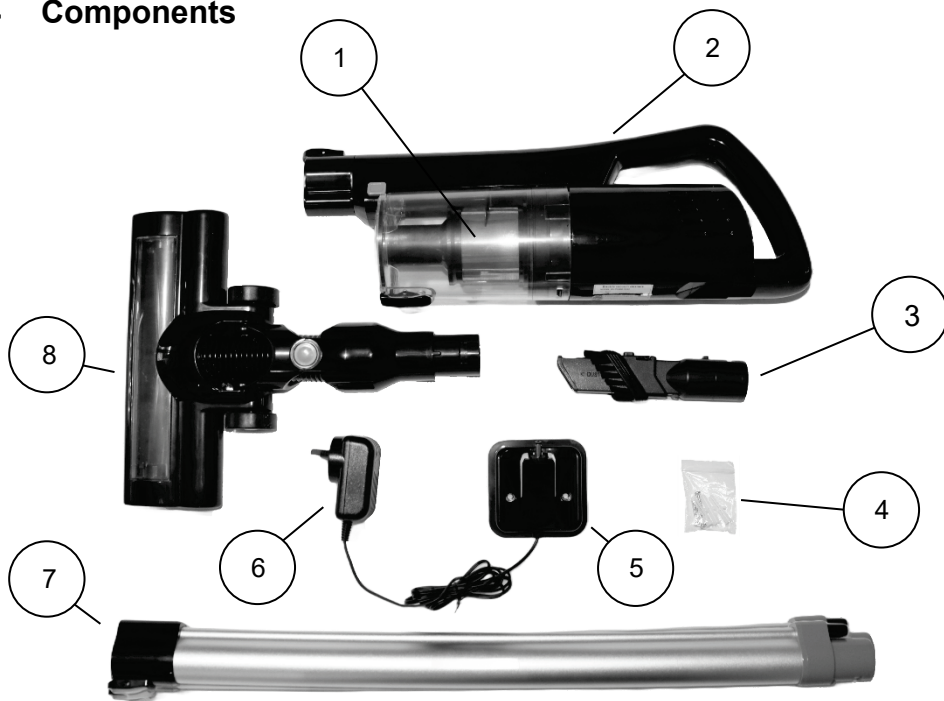


1	Dust Canister	5	Wall Mount / Charging Bracket
2	Vacuum Cleaner Body	6	Battery Charger - ZD12D260050AU
3	Crevice / Brush Tool	7	Extension Tube
4	Wall Plugs and Screws	8	Motorised Floor Head

Note: The specifications and/or components of this appliance are subject to change without prior notice

5 Assembly


5.1 Attaching the Extension Tube

Insert the top end of the Extension Tube into the mating hole in the end of the Vacuum cleaner body ensuring the locating guides are aligned, then push inward until it locks into place.

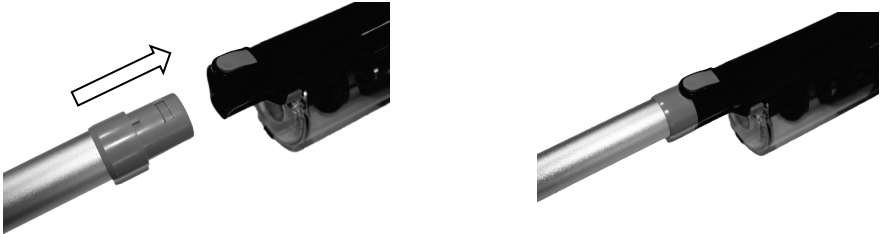


5.2 Removing the Extension Tube

To remove the Extension Tube, press the locking button inward to release it and then pull the tube straight out.

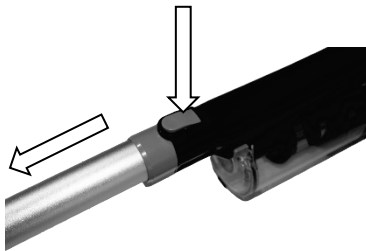

5.3 Attaching the Motorised Floor Head

To attach the motorised floor head to the other end of the extension tube, insert the end of the Extension Tube into the end of the Floor Head, ensuring the locking tabs are aligned, then push inward until it locks into place.

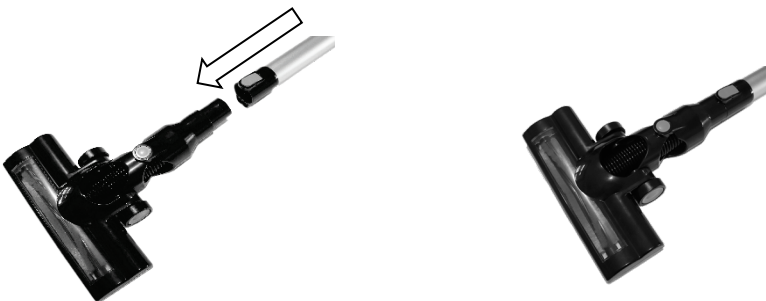

5.4 Removing the Motorised Floor Head

To remove the Motorised Floor Head, grasp the Motorised Floor Head, press the locking button inward to release and then pull the Tube straight out.



5.5 Using Without the Extension Tube.

The vacuum cleaner can be used without the extension tube by attaching the Accessories and Motorised Floor Head directly to the vacuum cleaner.

To attach and remove, follow the same steps as if using the Extension tube.



5.6 Tools / Tool Holder


5.6.1 Crevice / Brush Tool

The crevice / Brush tool is for cleaning furniture and into corners etc.

To use the Brush tool, slide the brush down until it locks in place.



To use the Crevice tool, press the release button to unlatch and slide the brush up until it locks in place.

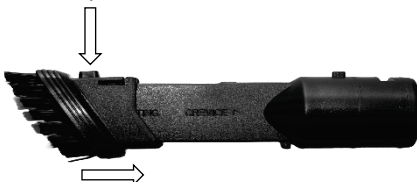

To fit the tool, line up with the end of the hand vac and push in.

Note: The tool can also be used on the end of the Extension Tube.

To remove, press the locking button to release and then pull the tool straight out.




6 Charging

IMPORTANT: Do not use this appliance when charging.

The battery can only be charged whilst the vacuum cleaner is stowed on the wall hanging bracket.


Note: Refer to the section “Storage / Charging Wall Bracket” for instructions on mounting the Storage / Charging Bracket to the wall.

For charging, place the vacuum cleaner on the wall hanging hook ensuring it is seated properly as shown.

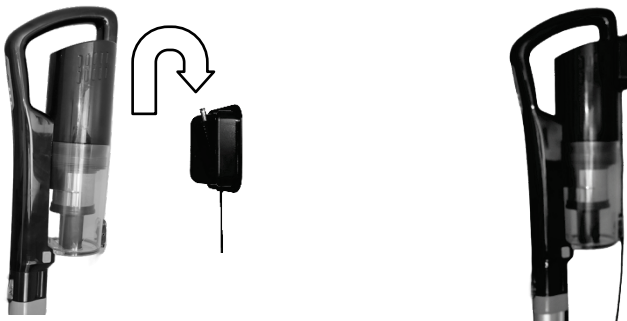

Plug the Battery Charger into the mains power point and switch it on.

During Charging, the three lights on the handle will flash in sequence indicating the batteries are charging.

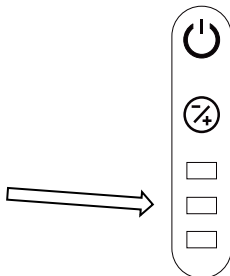

When the batteries are fully charged, these lights will remain permanently on.

When the battery is fully charged, switch off and unplug the battery charger from the mains power supply.

The Vacuum Cleaner is ready for use.

IMPORTANT:

NEVER BLOCK ANY VENTS OR OPENINGS OR COVER THE UNIT WHILE CHARGING.

NEVER LEAVE THE APPLIANCE UNATTENDED WHILE CHARGING.


NEVER LEAVE THE APPLIANCE ON PERMANENT CHARGE. ALWAYS TURN OFF AND UNPLUG THE CHARGER WHEN THE BATTERY IS FULLY CHARGED.

7 Using the Vacuum Cleaner

7.1 On / Off

To use the Vacuum Cleaner, assemble the unit as previously instructed and ensure the battery is fully charged.

To switch on, grasp the handle then press and release the On / Off button on top of the vacuum cleaner body.

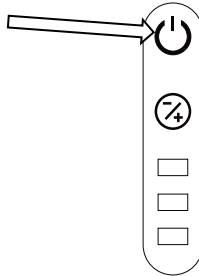

The vacuum cleaner will start in the default “Low” Speed mode.

Press and release the On / Off button again to turn it off.


Note: The vacuum cleaner cannot be started when charging.

7.2 Speed Control

7.2.1 Default Speed – “Low Speed”

When the vacuum cleaner is first switched on for use, it will default to the “Low Speed” setting. This will remain on this setting unless manually changed.

To change to the “Mid” setting, press and release the Speed Button.

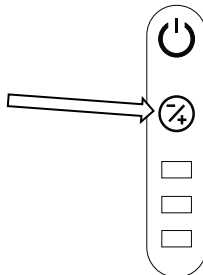


To change to the “High” setting, press and release the Speed Button again.

Pressing and releasing the Speed Button again will cycle back around to the “Low” setting.

8 Indicator Lights

8.1 Battery Remaining

During use, the battery level (remaining power) will be indicated by the three lights on top of the vacuum cleaner handle.

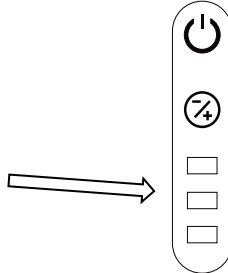


When the batteries are fully charged, all three lights will be permanently on.

As the battery power is drained, the lights will gradually turn off in sequence until the batteries are drained.


Just before the batteries are drained and just before the vacuum cleaner turns off, all three lights will briefly flash indicating the batteries are flat and need recharging.

9 Emptying the Dust Canister


To Empty the dust canister, first remove it from the vacuum cleaner by pressing the release button on the side of the vacuum cleaner, swing the dust canister down and pull forward and off as shown:

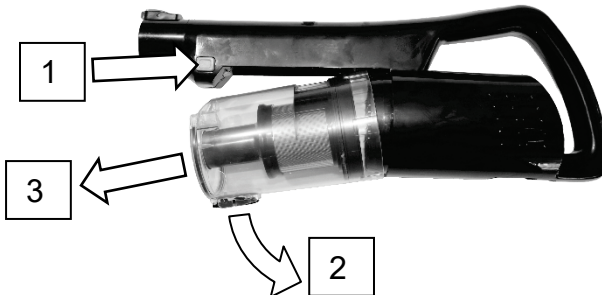

Take the dust canister to a dustbin then press the release button on the dust canister and the trap door will swing open emptying the contents into the bin. To close the trap door, close it manually until it clips shut.

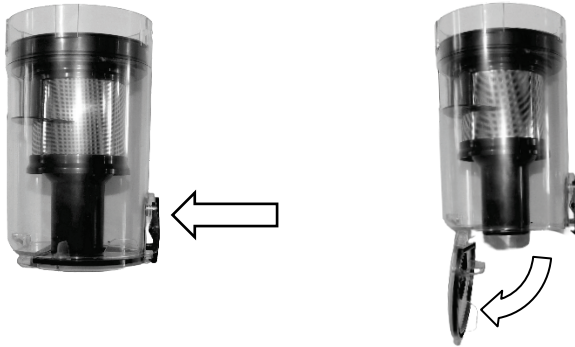

Refit the dust canister to the vacuum cleaner by first locating the filter end onto the vacuum cleaner, push on while swinging the dust canister up and keep pushing up until it locks in place.

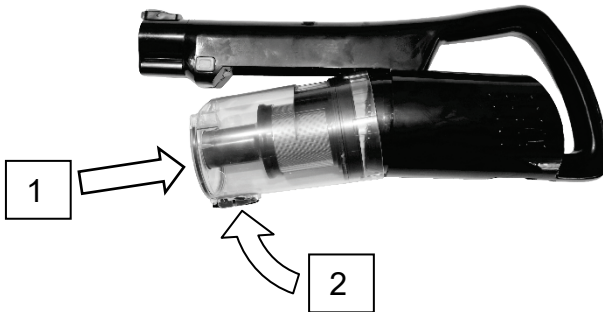

Empty the Dust Canister as frequently as possible or when the suction power is reduced or after use for optimum performance.

10 User Maintenance

DO NOT clean the vacuum cleaner, components or accessories using petrol or any other flammable liquid or solvents, etc.

WARNING: The battery charger must be removed from the vacuum cleaner before any maintenance, cleaning or replacement of parts.

NOTE: To maximise the performance of your vacuum cleaner, you should clean the filters regularly.

If the filter is broken or worn, replace it before continuing to use the vacuum.

A new filter can be purchased from our Customer Service. You can call our customer service number: 1300 105 888 (Australia) and 09 8870 447 (New Zealand), or via email at info@hegroup.com.au

10.1 Cleaning the Filters

Important Note – The Filters must be cleaned regularly for the best suction performance and to prevent overheating and damage to your vacuum cleaner.

Cleaning is best done at the same time as emptying the dust Canister after you have finished vacuuming for the day.

NOTE: Never use the vacuum cleaner with a wet or damp filter or without the filter fitted.

Using a wet or damp filter will damage the filter, will cause serious damage to the vacuum cleaner and will void your warranty.

Only wash the filter if it is very dirty, otherwise, just tap the edge of the filter on a hard surface to dislodge any dust and debris.

To access the filter, first remove the dust canister as described previously.

Grasp the fabric tab on top of the filter with your thumb and index finger and pull the filter up and out of its holder.



Only wash the filter if it is very dirty, otherwise, just tap the edge of the filter on a hard surface to dislodge any dust and debris.

If needed, wash the filter in warm mild soapy water, rinse in clean fresh cold water and let it completely dry.

DO NOT scrub the filter or place it in a dishwasher.

DO NOT use a hairdryer to dry the filter.

Refit the filter (or replace it with a new one) into the Filter Holder.

At the same time as cleaning the fabric filter, it is a good idea to clean the filter holder and the metal filter.

To do this, grasp the wire handle, swing up and pull the filter holder straight up and out.



Remove the inner section by grasping the tabs with your fingers, and rotate it anti-clockwise to unlock and lift up and out.



Wash these components in warm mild soapy water, rinse in clean fresh cold water and let it completely dry.

These parts may be scrubbed clean, however, **DO NOT** place them in a dishwasher.

DO NOT use a hairdryer to dry these components.

When completely dry, refit in the opposite order of disassembly.

Note: The filter holder can only be fitted in one orientation. Align the tabs on the side of the filter holder with the mating slots in the dust canister then slide down.



DO NOT force it in. If it will not drop in easily, check the alignment of the tabs.

10.2 Cleaning Dust Canister

Remove the dust canister as described previously and remove the filter and filter holder as described previously.



Wash the dust canister in warm mild soapy water, rinse in clean fresh cold water and let completely dry.

DO NOT scrub the dust canister or place it in a dishwasher.

DO NOT use a hairdryer to dry the dust canister.

Reassemble and Refit the filter and filter holder to the dust canister as described previously, then refit the dust canister to the vacuum cleaner as described previously.

10.3 Cleaning the Vacuum Cleaner Body and Tools

DO NOT clean the vacuum cleaner, components or accessories using petrol or any other flammable liquid or solvents, etc.

Clean only the outside of the vacuum cleaner body.

Use only a moist cloth and mild detergent for cleaning the vacuum cleaner, components and accessories.


After cleaning, wipe the moisture off the vacuum cleaner, components and accessories with a dry cloth.

Do Not place accessories / components in a dishwasher.

10.4 Cleaning the Motorised Floor Head

The Rotary Brush in the floor head can be removed for easy cleaning and removal of hair etc.


Ensure the Floor Head is removed from the extension tube or vacuum cleaner first as described previously.

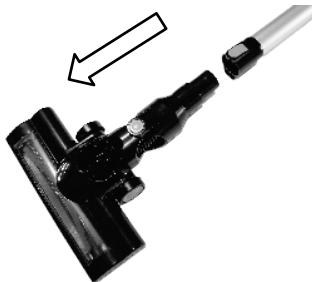


Turn over so that the bottom face is facing up.



There is a small tab on the bottom that needs to be slid sideways to unlock the Rotary Brush Holder.

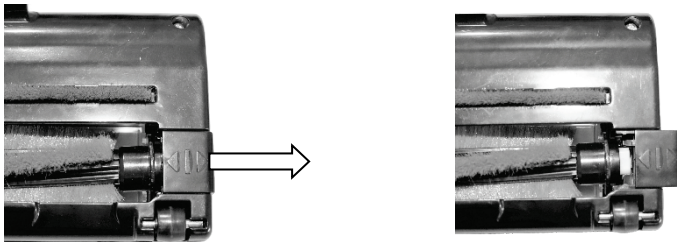

When released, grasp the Rotary Brush, lift the end up, slide to the right and lift it up and out.

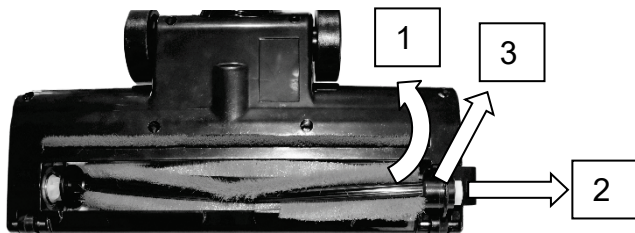


Remove any hair, thread, debris, etc. that may have caught around the brush, end bearings, wheels or stuck in the openings.


After cleaning, refit the brush in reverse order to disassembling it.

Note: the brush can only be fitted in one direction.

Refit the Rotary Brush Holder by sliding the left end onto the drive post first, aligning the right side then push down until the brush holder is in place.

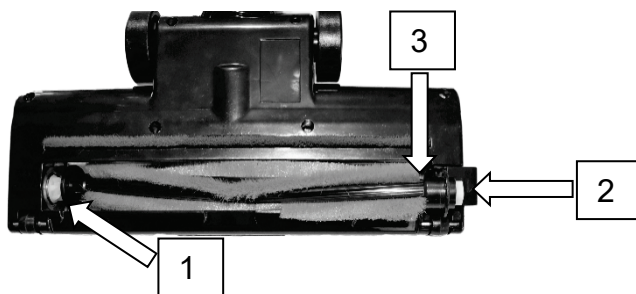

Once the rotary brush is seated properly, slide the locking tab to the left to lock the brush in place.

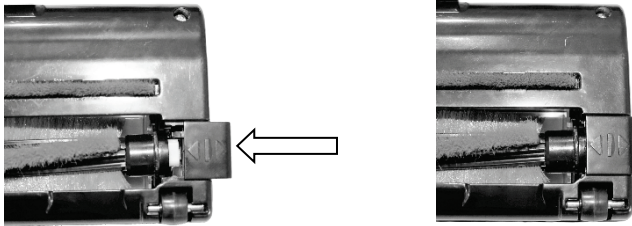

11 Storage / Charging Wall Bracket

There is a Storage / Charging Hanging Bracket supplied with screws and wall plugs for attaching to the wall.

To install the Storage / Charging Hanging Bracket, position the Bracket on the wall at a suitable height where the vacuum cleaner will not touch the floor, and near a mains power point where the supplied Battery Charger can reach without using an extension cord or power board.


Mark the screw holes through the Storage Hanging Bracket onto the wall.

Using a suitable drill (wood drill bit for a timber wall, or masonry drill bit for brick / concrete walls, drill holes $\text{\O}6\text{mm}$ and 25 - 35mm deep.



Insert the plastic wall plugs into each hole and gently hammer in until they are flush with the wall, place the Storage Hanging Bracket over the holes then insert the screws and tighten up. Do Not Overtighten.

Hang the vacuum cleaner as shown:

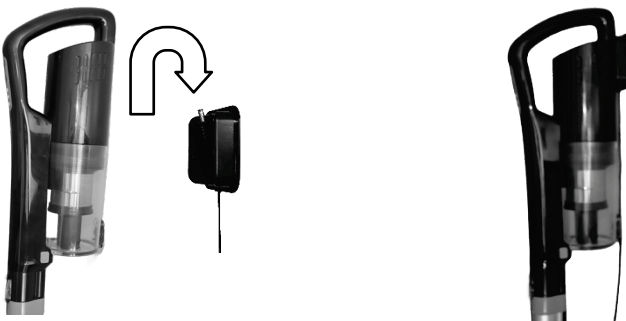

12 Troubleshooting

Will Not Switch On	Check that the battery is fully charged.
	The vacuum cleaner will not turn on if stored on the charging mount bracket
Noisy operation	Clean the filter and empty the Dust Canister
	Check for partial blockages and unblock.
Suction Not Strong	Clean the filter and empty the Dust Canister. Check for blockages and unblock. Check that the battery is fully charged.
	Please call 1300 105 888 to order a new Filter or Battery. Speed setting may only be set too Low. Increase Power to select the Highest power mode.
Floor Head hard to push	The Rotary Brush in the floor head may be jammed with debris etc.
	Ensure the Vacuum Cleaner is switched off and the battery charger is removed then remove the debris from the brush. Or the carpet pile may be too long and jamming the rotary brush.
Static Shock	In some rare instances, one or two users may feel an electric discharge when touching or using the vacuum cleaner during or after use. This is a well-known phenomenon of Static Electricity discharge that happens mostly when the user vacuums a synthetic fibre carpet or other synthetic surfaces. It can also be more prevalent in dry and cool environments. Although the feeling of Static Electricity can be unpleasant for the user, it is not dangerous and is not a fault of the vacuum cleaner. If this static discharge is a problem for the user, the user could try wearing insulating footwear during vacuuming (i.e., rubber or leather soles) or increase the humidity / heat level in the surrounding environment or both.

13 Warranty Against Defect

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expenses incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre, 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd. C/- Customer Service Centre, 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

IMPORTANT! For all technical queries or difficulties in operating the product and for spare parts, contact H.E. Group customer service 1300 105 888 (Australia) and 09 8870 447 (New Zealand).

