

anko

ELECTRIC UNDER BLANKET KING FITTED MODEL NO: TT-1201XK



INSTRUCTION MANUAL PLEASE READ THESE INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE REFERENCE

such as high blood circulation, diabetes or high skin sensitivity.

Warning! Avoid extended use of this electric blanket at a high setting. This may result in skin burns.

Warning! Avoid creasing the blanket. Examine the blanket frequently for signs of wear or damage. If there are such signs or if the appliance has been misused, have it inspected by a qualified electrical person prior to any further use or the product must be disposed.

Warning! This electric blanket is not intended for use in hospitals.

Warning! Do not use this electric blanket on or under any waterbed or mechanically adjustable type of bed such as a bunk or sofa bed. Check to ensure that the controller and supply cord cannot become trapped in any bed or bedding. Keep controller outside of the bedding, as much as possible.

Warning! Use the correct size of blanket for the bed. Do not for example use a double blanket on a single bed. Do not tuck the blanket in.

Warning! For electrical safety the electric blanket must only be used with the detachable control unit supplied with the item. Do not use other attachments not supplied with the blanket.

Warning! For electrical safety the electric blanket must only be used with the detachable control unit 030C supplied with the item. Do not use other attachments not supplied with the blanket.

Warning! Do not use by children under the age of three.

Supply

This electric blanket must be connected to a suitable 220-240V~ 50Hz power supply. If using an extension cord, ensure that the extension cord is of a suitable 10-amp power rating. Fully unwind the supply cord when in use as a coiled cord may overheat.

Warning! Always unplug from the mains supply when not in use.

Supply cord and plug

If the supply cord or controller is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Children

This blanket is not to be used by young children over the age of three unless the controls have been preset by a parent or guardian or unless the child has been adequately instructed on how to operate the controls safely. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, concerning use of the appliance by a person responsible for their safety. Young children should be supervised to ensure that they do not play with the appliance.



Warning! Not to be used by young children (0-3years) .

CLEANING

Warning! When not in use or before cleaning, **always disconnect the blanket from the mains power supply.**

Spot Clean

Sponge the area with a neutral wool detergent or mild soap solution in lukewarm water. Sponge with clean water and dry completely before re-use.



SAFETY INSTRUCTION

Carefully read this manual in full before using this electric blanket

Ensure that you know how the electric blanket functions and how to operate it. Maintain the electric blanket in accordance with the instructions to ensure that it functions properly. Keep this manual with the electric blanket. If the electric blanket is to be used by a third party, this instruction manual must be supplied with it.

The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used.

No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

Warning! Do not use this electric blanket if it has been damaged in any way, if it is wet or moist or if the supply cord is damaged. Return it immediately to the retailer. Electric blankets should be checked annually for electrical safety in order to limit the risk of electric shock or fire.

PACKAGE CONTENTS

1 x 179cm x 200cm Dual Control Electric Blanket
1 x Instruction Manual

Caution! Confirm all parts before disposing of packaging. Safely dispose of all plastic bags and other packaging components. They may be potentially dangerous to children.

OPERATION

Location and Use

Use the blanket as an under blanket only. This blanket is designed for domestic use only. This blanket is not intended for medical use in hospitals and/or nursing homes.

Fitting

Place the blanket on the bed, with the controller at the pillow end, ensuring that the blanket does not overhang the bed edge. Fit the blanket to the bed using the attached skirt. Secure each corner and also the middle. Ensure the blanket is fully flat on the mattress and not bent or wrinkled.

Operation

Once the electric blanket has been installed correctly in position and the bedding completed, connect the controller supply plug to a suitable power outlet. Ensure the controller is set to "Off" before plugging in. Select the desired heat setting on the controller. The indicator lamp indicates that the blanket is ON.

Controls

The controller has the following settings.

L LOW HEAT
M MEDIUM HEAT
H HIGH (PRE HEAT).

There is a LED light which illuminates when the blanket is switched ON.

IMPORTANT! The electric blanket is fitted with an automatic timer to switch OFF the blanket after 12 hours of continuous use on any one of the heat settings (i.e. Low, Medium or High). The auto power OFF function is re-activated for 12 hours each time the controller is switched OFF and switched back ON again by selecting any one of the heat settings. The 12 hour timer is automatic and cannot be adjusted manually.



Hand Washing (Maximum temperature 40°C)

Disconnect the detachable cord from the blanket.



Immerse the blanket only (DO NOT ALLOW THE CONTROLLER TO COME IN CONTACT WITH ANY LIQUIDS) in a lukewarm neutral detergent or mild soapy solution. Soak for five minutes, remove from the solution, and gently squeeze the solution through the blanket. Rinse the blanket thoroughly in clean luke warm water, gently squeeze and drain the excess water from the blanket. DO NOT WRING THE BLANKET.

DRYING

Drape the blanket across a clothes line and drip dry.

DO NOT use pegs to secure the blanket in position.

DO NOT dry with a hair dryer or heater.

IMPORTANT! Ensure the controls are in position that will not allow dripping water to fall onto any part of the controller.

Allow the blanket to dry thoroughly.

Connect the detachable cord to the connector on the blanket. Ensure the connector is properly locked in place.

CAUTION! Electric Shock Hazard. Ensure the electric blanket and connector on the blanket is completely dry, free of any water or moisture, before connecting to mains power.

Warning! During washing and drying the detachable cord must be disconnected or positioned in a way to ensure that water does not flow into the switch or control unit.

Warning! Do not allow the supply cord or controller to be immersed in any liquids.

Warning! Do not wring the blanket

Warning! Do not dry clean this electric blanket. This may damage the heating element or the controller.

Warning! Do not iron this blanket . Do not machine wash or machine dry.

Warning! Do not tumble dry.

Warning! Do not bleach.

SAFE OPERATION GUIDE

- Fit the blanket securely on the mattress with the skirt.
- Use this blanket as an under blanket only. Not recommended for futons or similar folding bedding systems.
- When not in use, pack the blanket in its original packaging for best protection and store in a cool, clean and dry location. Avoid pressing sharp creases into the blanket. Store the blanket only after it has fully cooled down.
- When storing, fold neatly but not tightly (or roll) in the original packaging without sharp bends in the heating element and store where no other objects will be placed on top of it.
- Do not crease the blanket by placing items on top of it during storage.

Warning! The blanket should not be used on an adjustable bed.

Warning! The blanket must be fitted securely to the mattress with the fitted skirt.

Warning! The cord and control must be outside the bedding at all times and away from other heat sources such as heating and lamps.

Warning! Do not use folded, rucked, creased or when damp.

Warning! Use HIGH setting to pre heat the bed 1 hour before use only. Do not sleep with the control set to the high setting. It is highly recommended that the blanket be set to a minimum Low heat if used overnight or for continuous use.

Caution: First Time Use. For first time use it is recommended that the blanket be set on HIGH for 2 hours before sleeping on the bed. This will assist in drying any moisture out of the mattress. Ignore any initial odour that may occur with first time use.

Warning! Do not sleep with the controller set to HIGH. Use **HIGH** setting only to pre heat the bed then reduce the heat setting to minimum LOW setting overnight or preferably switched OFF for safety.

Warning! Remember to switch the blanket controller to "OFF" at the end of use and disconnect from mains power. Do not leave on indefinitely. There may be a risk of fire.

Warning! For added safety it is recommended that this blanket be used with a residual current safety device (safety switch) with a rated residual operating current not exceeding 30mA. If unsure please consult a qualified electrician.



IMPORTANT SAFETY INFORMATION

When using electric appliances always observe safety regulations where applicable to reduce the risk of fire, electric shock and personal injury.

Always check that the power supply corresponds to the voltage on the rating plate on the controller.

Warning! Do not use the electric blanket folded .



Do not use the electric blanket



rucked. Avoid creasing the blanket. Do not insert pins into the electric blanket.

DO NOT use this electric blanket if it is wet or has suffered water splashes.

Warning! Do not use this electric blanket with an infant or child, or any other person insensitive to heat and other very vulnerable persons who are unable to react to overheating. Do not use with a helpless or incapacitated person or any person suffering from medical illness

STORAGE

IMPORTANT! Safety Check

This blanket should be checked annually by a suitably qualified person to ensure its safety and suitability for use.

Store in a safe place

Warning! Before storage of this appliance allow it to cool down before folding.

When not in use store your blanket and instruction manual in a safe and dry place. Roll or gently fold the blanket. Do not crease. Store in a suitable protective bag for protection. Do not place items on the blanket when storing. Before re-use after storage it is recommended that the blanket is checked by a suitably qualified person to eliminate the risk of fire or electric shock through a damaged blanket.

Examine the appliance frequently for signs of wear or damage. If there are such signs or if the appliance has been misused the blanket must be checked by a qualified electrical person for electrical safety, before switching it on again.

TECHNICAL SPECIFICATIONS

Size 179cm x 200cm
220-240v~ 50Hz 2 x 60W
Dual controller 030C

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

anko

ELECTRIC UNDER BLANKET QUEEN FITTED MODEL NO: TT-1101XQ



INSTRUCTION MANUAL PLEASE READ THESE INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE REFERENCE

such as high blood circulation, diabetes or high skin sensitivity.

Warning! Avoid extended use of this electric blanket at a high setting. This may result in skin burns.

Warning! Avoid creasing the blanket. Examine the blanket frequently for signs of wear or damage. If there are such signs or if the appliance has been misused, have it inspected by a qualified electrical person prior to any further use or the product must be disposed.

Warning! This electric blanket is not intended for use in hospitals.

Warning! Do not use this electric blanket on or under any waterbed or mechanically adjustable type of bed such as a bunk or sofa bed. Check to ensure that the controller and supply cord cannot become trapped in any bed or bedding. Keep controller outside of the bedding, as much as possible.

Warning! Use the correct size of blanket for the bed. Do not for example use a double blanket on a single bed. Do not tuck the blanket in.

Warning! For electrical safety the electric blanket must only be used with the detachable control unit supplied with the item. Do not use other attachments not supplied with the blanket.

Warning! For electrical safety the electric blanket must only be used with the detachable control unit 030C supplied with the item. Do not use other attachments not supplied with the blanket.

Warning! Do not use by children under the age of three.

Supply

This electric blanket must be connected to a suitable 220-240V~ 50Hz power supply. If using an extension cord, ensure that the extension cord is of a suitable 10-amp power rating. Fully unwind the supply cord when in use as a coiled cord may overheat.

Warning! Always unplug from the mains supply when not in use.

Supply cord and plug

If the supply cord or controller is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Children

This blanket is not to be used by young children over the age of three unless the controls have been preset by a parent or guardian or unless the child has been adequately instructed on how to operate the controls safely. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, concerning use of the appliance by a person responsible for their safety. Young children should be supervised to ensure that they do not play with the appliance.



Warning! Not to be used by young children (0-3years) .

CLEANING

Warning! When not in use or before cleaning, **always disconnect the blanket from the mains power supply.**

Spot Clean

Sponge the area with a neutral wool detergent or mild soap solution in lukewarm water. Sponge with clean water and dry completely before re-use.



SAFETY INSTRUCTION

Carefully read this manual in full before using this electric blanket

Ensure that you know how the electric blanket functions and how to operate it. Maintain the electric blanket in accordance with the instructions to ensure that it functions properly. Keep this manual with the electric blanket. If the electric blanket is to be used by a third party, this instruction manual must be supplied with it.

The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used.

No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

Warning! Do not use this electric blanket if it has been damaged in any way, if it is wet or moist or if the supply cord is damaged. Return it immediately to the retailer. Electric blankets should be checked annually for electrical safety in order to limit the risk of electric shock or fire.

PACKAGE CONTENTS

1 x 153cm x 200cm Dual Control Electric Blanket
1 x Instruction Manual

Caution! Confirm all parts before disposing of packaging. Safely dispose of all plastic bags and other packaging components. They may be potentially dangerous to children.

OPERATION

Location and Use

Use the blanket as an under blanket only. This blanket is designed for domestic use only. This blanket is not intended for medical use in hospitals and/or nursing homes.

Fitting

Place the blanket on the bed, with the controller at the pillow end, ensuring that the blanket does not overhang the bed edge. Fit the blanket to the bed using the attached skirt. Secure each corner and also the middle. Ensure the blanket is fully flat on the mattress and not bent or wrinkled.

Operation

Once the electric blanket has been installed correctly in position and the bedding completed, connect the controller supply plug to a suitable power outlet. Ensure the controller is set to "Off" before plugging in. Select the desired heat setting on the controller. The indicator lamp indicates that the blanket is ON.

Controls

The controller has the following settings.

L LOW HEAT
M MEDIUM HEAT
H HIGH (PRE HEAT).

There is a LED light which illuminates when the blanket is switched ON.

IMPORTANT! The electric blanket is fitted with an automatic timer to switch OFF the blanket after 12 hours of continuous use on any one of the heat settings (i.e. Low, Medium or High). The auto power OFF function is re-activated for 12 hours each time the controller is switched OFF and switched back ON again by selecting any one of the heat settings. The 12 hour timer is automatic and cannot be adjusted manually.



Hand Washing (Maximum temperature 40°C)

Disconnect the detachable cord from the blanket.



Immerse the blanket only (DO NOT ALLOW THE CONTROLLER TO COME IN CONTACT WITH ANY LIQUIDS) in a lukewarm neutral detergent or mild soapy solution. Soak for five minutes, remove from the solution, and gently squeeze the solution through the blanket. Rinse the blanket thoroughly in clean luke warm water, gently squeeze and drain the excess water from the blanket. DO NOT WRING THE BLANKET.

DRYING

Drape the blanket across a clothes line and drip dry.

DO NOT use pegs to secure the blanket in position.

DO NOT dry with a hair dryer or heater.

IMPORTANT! Ensure the controls are in position that will not allow dripping water to fall onto any part of the controller.

Allow the blanket to dry thoroughly.

Connect the detachable cord to the connector on the blanket. Ensure the connector is properly locked in place.

CAUTION! Electric Shock Hazard. Ensure the electric blanket and connector on the blanket is completely dry, free of any water or moisture, before connecting to mains power.

Warning! During washing and drying the detachable cord must be disconnected or positioned in a way to ensure that water does not flow into the switch or control unit.

Warning! Do not allow the supply cord or controller to be immersed in any liquids.

Warning! Do not wring the blanket

Warning! Do not dry clean this electric blanket. This may damage the heating element or the controller.

Warning! Do not iron this blanket. Do not machine wash or machine dry.

Warning! Do not tumble dry.

Warning! Do not bleach.

SAFE OPERATION GUIDE

- Fit the blanket securely on the mattress with the skirt.
- Use this blanket as an under blanket only. Not recommended for futons or similar folding bedding systems.
- When not in use, pack the blanket in its original packaging for best protection and store in a cool, clean and dry location. Avoid pressing sharp creases into the blanket. Store the blanket only after it has fully cooled down.
- When storing, fold neatly but not tightly (or roll) in the original packaging without sharp bends in the heating element and store where no other objects will be placed on top of it.
- Do not crease the blanket by placing items on top of it during storage.

Warning! The blanket should not be used on an adjustable bed.

Warning! The blanket must be fitted securely to the mattress with the fitted skirt.

Warning! The cord and control must be outside the bedding at all times and away from other heat sources such as heating and lamps.

Warning! Do not use folded, rucked, creased or when damp.

Warning! Use HIGH setting to pre heat the bed 1 hour before use only. Do not sleep with the control set to the high setting. It is highly recommended that the blanket be set to a minimum Low heat if used overnight or for continuous use.

Caution: First Time Use. For first time use it is recommended that the blanket be set on HIGH for 2 hours before sleeping on the bed. This will assist in drying any moisture out of the mattress. Ignore any initial odour that may occur with first time use.

Warning! Do not sleep with the controller set to HIGH. Use **HIGH** setting only to pre heat the bed then reduce the heat setting to minimum LOW setting overnight or preferably switched OFF for safety.

Warning! Remember to switch the blanket controller to "OFF" at the end of use and disconnect from mains power. Do not leave on indefinitely. There may be a risk of fire.

Warning! For added safety it is recommended that this blanket be used with a residual current safety device (safety switch) with a rated residual operating current not exceeding 30mA. If unsure please consult a qualified electrician.



IMPORTANT SAFETY INFORMATION

When using electric appliances always observe safety regulations where applicable to reduce the risk of fire, electric shock and personal injury.

Always check that the power supply corresponds to the voltage on the rating plate on the controller.

Warning! Do not use the electric blanket folded .



Do not use the electric blanket



rucked. Avoid creasing the blanket. Do not insert pins into the electric blanket.

DO NOT use this electric blanket if it is wet or has suffered water splashes.

Warning! Do not use this electric blanket with an infant or child, or any other person insensitive to heat and other very vulnerable persons who are unable to react to overheating. Do not use with a helpless or incapacitated person or any person suffering from medical illness

STORAGE

IMPORTANT! Safety Check

This blanket should be checked annually by a suitably qualified person to ensure its safety and suitability for use.

Store in a safe place

Warning! Before storage of this appliance allow it to cool down before folding.

When not in use store your blanket and instruction manual in a safe and dry place. Roll or gently fold the blanket. Do not crease. Store in a suitable protective bag for protection. Do not place items on the blanket when storing. Before re-use after storage it is recommended that the blanket is checked by a suitably qualified person to eliminate the risk of fire or electric shock through a damaged blanket.

Examine the appliance frequently for signs of wear or damage. If there are such signs or if the appliance has been misused the blanket must be checked by a qualified electrical person for electrical safety, before switching it on again.

TECHNICAL SPECIFICATIONS

Size 153cm x 200cm
220-240v~ 50Hz 2 x 55W
Dual controller 030C

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

anko

ELECTRIC UNDER BLANKET DOUBLE FITTED MODEL NO: TT-1101XD



INSTRUCTION MANUAL PLEASE READ THESE INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE REFERENCE

such as high blood circulation, diabetes or high skin sensitivity.

Warning! Avoid extended use of this electric blanket at a high setting. This may result in skin burns.

Warning! Avoid creasing the blanket. Examine the blanket frequently for signs of wear or damage. If there are such signs or if the appliance has been misused, have it inspected by a qualified electrical person prior to any further use or the product must be disposed.

Warning! This electric blanket is not intended for use in hospitals.

Warning! Do not use this electric blanket on or under any waterbed or mechanically adjustable type of bed such as a bunk or sofa bed. Check to ensure that the controller and supply cord cannot become trapped in any bed or bedding. Keep controller outside of the bedding, as much as possible.

Warning! Use the correct size of blanket for the bed. Do not for example use a double blanket on a single bed. Do not tuck the blanket in.

Warning! For electrical safety the electric blanket must only be used with the detachable control unit supplied with the item. Do not use other attachments not supplied with the blanket.

Warning! For electrical safety the electric blanket must only be used with the detachable control unit 030C supplied with the item. Do not use other attachments not supplied with the blanket.

Warning! Do not use by children under the age of three.

Supply

This electric blanket must be connected to a suitable 220-240V~ 50Hz power supply. If using an extension cord, ensure that the extension cord is of a suitable 10-amp power rating. Fully unwind the supply cord when in use as a coiled cord may overheat.

Warning! Always unplug from the mains supply when not in use.

Supply cord and plug

If the supply cord or controller is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Children

This blanket is not to be used by young children over the age of three unless the controls have been preset by a parent or guardian or unless the child has been adequately instructed on how to operate the controls safely. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, concerning use of the appliance by a person responsible for their safety. Young children should be supervised to ensure that they do not play with the appliance.



Warning! Not to be used by young children (0-3years) .

CLEANING

Warning! When not in use or before cleaning, **always disconnect the blanket from the mains power supply.**

Spot Clean

Sponge the area with a neutral wool detergent or mild soap solution in lukewarm water. Sponge with clean water and dry completely before re-use.



SAFETY INSTRUCTION

Carefully read this manual in full before using this electric blanket

Ensure that you know how the electric blanket functions and how to operate it. Maintain the electric blanket in accordance with the instructions to ensure that it functions properly. Keep this manual with the electric blanket. If the electric blanket is to be used by a third party, this instruction manual must be supplied with it.

The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used.

No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

Warning! Do not use this electric blanket if it has been damaged in any way, if it is wet or moist or if the supply cord is damaged. Return it immediately to the retailer. Electric blankets should be checked annually for electrical safety in order to limit the risk of electric shock or fire.

PACKAGE CONTENTS

1 x 139cm x 188cm Dual Control Electric Blanket
1 x Instruction Manual

Caution! Confirm all parts before disposing of packaging. Safely dispose of all plastic bags and other packaging components. They may be potentially dangerous to children.

OPERATION

Location and Use

Use the blanket as an under blanket only. This blanket is designed for domestic use only. This blanket is not intended for medical use in hospitals and/or nursing homes.

Fitting

Place the blanket on the bed, with the controller at the pillow end, ensuring that the blanket does not overhang the bed edge. Fit the blanket to the bed using the attached skirt. Secure each corner and also the middle. Ensure the blanket is fully flat on the mattress and not bent or wrinkled.

Operation

Once the electric blanket has been installed correctly in position and the bedding completed, connect the controller supply plug to a suitable power outlet. Ensure the controller is set to "Off" before plugging in. Select the desired heat setting on the controller. The indicator lamp indicates that the blanket is ON.

Controls

The controller has the following settings.

L LOW HEAT
M MEDIUM HEAT
H HIGH (PRE HEAT).

There is a LED light which illuminates when the blanket is switched ON.

IMPORTANT! The electric blanket is fitted with an automatic timer to switch OFF the blanket after 12 hours of continuous use on any one of the heat settings (i.e. Low, Medium or High). The auto power OFF function is re-activated for 12 hours each time the controller is switched OFF and switched back ON again by selecting any one of the heat settings. The 12 hour timer is automatic and cannot be adjusted manually.



Hand Washing (Maximum temperature 40°C)

Disconnect the detachable cord from the blanket.



Immerse the blanket only (DO NOT ALLOW THE CONTROLLER TO COME IN CONTACT WITH ANY LIQUIDS) in a lukewarm neutral detergent or mild soapy solution. Soak for five minutes, remove from the solution, and gently squeeze the solution through the blanket. Rinse the blanket thoroughly in clean luke warm water, gently squeeze and drain the excess water from the blanket. DO NOT WRING THE BLANKET.

DRYING

Drape the blanket across a clothes line and drip dry.

DO NOT use pegs to secure the blanket in position.

DO NOT dry with a hair dryer or heater.

IMPORTANT! Ensure the controls are in position that will not allow dripping water to fall onto any part of the controller.

Allow the blanket to dry thoroughly.

Connect the detachable cord to the connector on the blanket. Ensure the connector is properly locked in place.

CAUTION! Electric Shock Hazard. Ensure the electric blanket and connector on the blanket is completely dry, free of any water or moisture, before connecting to mains power.

Warning! During washing and drying the detachable cord must be disconnected or positioned in a way to ensure that water does not flow into the switch or control unit.

Warning! Do not allow the supply cord or controller to be immersed in any liquids.

Warning! Do not wring the blanket

Warning! Do not dry clean this electric blanket. This may damage the heating element or the controller.

Warning! Do not iron this blanket . Do not machine wash or machine dry.

Warning! Do not tumble dry.

Warning! Do not bleach.

SAFE OPERATION GUIDE

- Fit the blanket securely on the mattress with the skirt.
- Use this blanket as an under blanket only. Not recommended for futons or similar folding bedding systems.
- When not in use, pack the blanket in its original packaging for best protection and store in a cool, clean and dry location. Avoid pressing sharp creases into the blanket. Store the blanket only after it has fully cooled down.
- When storing, fold neatly but not tightly (or roll) in the original packaging without sharp bends in the heating element and store where no other objects will be placed on top of it.
- Do not crease the blanket by placing items on top of it during storage.

Warning! The blanket should not be used on an adjustable bed.

Warning! The blanket must be fitted securely to the mattress with the fitted skirt.

Warning! The cord and control must be outside the bedding at all times and away from other heat sources such as heating and lamps.

Warning! Do not use folded, rucked, creased or when damp.

Warning! Use HIGH setting to pre heat the bed 1 hour before use only. Do not sleep with the control set to the high setting. It is highly recommended that the blanket be set to a minimum Low heat if used overnight or for continuous use.

Caution: First Time Use. For first time use it is recommended that the blanket be set on HIGH for 2 hours before sleeping on the bed. This will assist in drying any moisture out of the mattress. Ignore any initial odour that may occur with first time use.

Warning! Do not sleep with the controller set to HIGH. Use **HIGH** setting only to pre heat the bed then reduce the heat setting to minimum LOW setting overnight or preferably switched OFF for safety.

Warning! Remember to switch the blanket controller to "OFF" at the end of use and disconnect from mains power. Do not leave on indefinitely. There may be a risk of fire.

Warning! For added safety it is recommended that this blanket be used with a residual current safety device (safety switch) with a rated residual operating current not exceeding 30mA. If unsure please consult a qualified electrician.



IMPORTANT SAFETY INFORMATION

When using electric appliances always observe safety regulations where applicable to reduce the risk of fire, electric shock and personal injury.

Always check that the power supply corresponds to the voltage on the rating plate on the controller.

Warning! Do not use the electric blanket folded .



Do not use the electric blanket



rucked. Avoid creasing the blanket. Do not insert pins into the electric blanket.

DO NOT use this electric blanket if it is wet or has suffered water splashes.

Warning! Do not use this electric blanket with an infant or child, or any other person insensitive to heat and other very vulnerable persons who are unable to react to overheating. Do not use with a helpless or incapacitated person or any person suffering from medical illness

STORAGE

IMPORTANT! Safety Check

This blanket should be checked annually by a suitably qualified person to ensure its safety and suitability for use.

Store in a safe place

Warning! Before storage of this appliance allow it to cool down before folding.

When not in use store your blanket and instruction manual in a safe and dry place. Roll or gently fold the blanket. Do not crease. Store in a suitable protective bag for protection. Do not place items on the blanket when storing. Before re-use after storage it is recommended that the blanket is checked by a suitably qualified person to eliminate the risk of fire or electric shock through a damaged blanket.

Examine the appliance frequently for signs of wear or damage. If there are such signs or if the appliance has been misused the blanket must be checked by a qualified electrical person for electrical safety, before switching it on again.

TECHNICAL SPECIFICATIONS

Size 139cm x 188cm
220-240v~ 50Hz 2 x 55W
Dual controller 030C

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

anko

ELECTRIC UNDER BLANKET SINGLE FITTED MODEL NO: TT-601XS



INSTRUCTION MANUAL PLEASE READ THESE INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE REFERENCE

such as high blood circulation, diabetes or high skin sensitivity.

Warning! Avoid extended use of this electric blanket at a high setting. This may result in skin burns.

Warning! Avoid creasing the blanket. Examine the blanket frequently for signs of wear or damage. If there are such signs or if the appliance has been misused, have it inspected by a qualified electrical person prior to any further use or the product must be disposed.

Warning! This electric blanket is not intended for use in hospitals.

Warning! Do not use this electric blanket on or under any waterbed or mechanically adjustable type of bed such as a bunk or sofa bed. Check to ensure that the controller and supply cord cannot become trapped in any bed or bedding. Keep controller outside of the bedding, as much as possible.

Warning! Use the correct size of blanket for the bed. Do not for example use a double blanket on a single bed. Do not tuck the blanket in.

Warning! For electrical safety the electric blanket must only be used with the detachable control unit supplied with the item. Do not use other attachments not supplied with the blanket.

Warning! For electrical safety the electric blanket must only be used with the detachable control unit 030C supplied with the item. Do not use other attachments not supplied with the blanket.

Warning! Do not use by children under the age of three.

Supply

This electric blanket must be connected to a suitable 220-240V~ 50Hz power supply. If using an extension cord, ensure that the extension cord is of a suitable 10-amp power rating. Fully unwind the supply cord when in use as a coiled cord may overheat.

Warning! Always unplug from the mains supply when not in use.

Supply cord and plug

If the supply cord or controller is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Children

This blanket is not to be used by young children over the age of three unless the controls have been preset by a parent or guardian or unless the child has been adequately instructed on how to operate the controls safely. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, concerning use of the appliance by a person responsible for their safety. Young children should be supervised to ensure that they do not play with the appliance.



Warning! Not to be used by young children (0-3years) .

CLEANING

Warning! When not in use or before cleaning, **always disconnect the blanket from the mains power supply.**

Spot Clean

Sponge the area with a neutral wool detergent or mild soap solution in lukewarm water. Sponge with clean water and dry completely before re-use.



SAFETY INSTRUCTION

Carefully read this manual in full before using this electric blanket

Ensure that you know how the electric blanket functions and how to operate it. Maintain the electric blanket in accordance with the instructions to ensure that it functions properly. Keep this manual with the electric blanket. If the electric blanket is to be used by a third party, this instruction manual must be supplied with it.

The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used.

No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

Warning! Do not use this electric blanket if it has been damaged in any way, if it is wet or moist or if the supply cord is damaged. Return it immediately to the retailer. Electric blankets should be checked annually for electrical safety in order to limit the risk of electric shock or fire.

PACKAGE CONTENTS

1 x 91cm x 188cm Single Control Electric Blanket
1 x Instruction Manual

Caution! Confirm all parts before disposing of packaging. Safely dispose of all plastic bags and other packaging components. They may be potentially dangerous to children.

OPERATION

Location and Use

Use the blanket as an under blanket only. This blanket is designed for domestic use only. This blanket is not intended for medical use in hospitals and/or nursing homes.

Fitting

Place the blanket on the bed, with the controller at the pillow end, ensuring that the blanket does not overhang the bed edge. Fit the blanket to the bed using the attached skirt. Secure each corner and also the middle. Ensure the blanket is fully flat on the mattress and not bent or wrinkled.

Operation

Once the electric blanket has been installed correctly in position and the bedding completed, connect the controller supply plug to a suitable power outlet. Ensure the controller is set to "Off" before plugging in. Select the desired heat setting on the controller. The indicator lamp indicates that the blanket is ON.

Controls

The controller has the following settings.

L LOW HEAT
M MEDIUM HEAT
H HIGH (PRE HEAT).

There is a LED light which illuminates when the blanket is switched ON.

IMPORTANT! The electric blanket is fitted with an automatic timer to switch OFF the blanket after 12 hours of continuous use on any one of the heat settings (i.e. Low, Medium or High). The auto power OFF function is re-activated for 12 hours each time the controller is switched OFF and switched back ON again by selecting any one of the heat settings. The 12 hour timer is automatic and cannot be adjusted manually.



Hand Washing (Maximum temperature 40°C)

Disconnect the detachable cord from the blanket.



Immerse the blanket only (DO NOT ALLOW THE CONTROLLER TO COME IN CONTACT WITH ANY LIQUIDS) in a lukewarm neutral detergent or mild soapy solution. Soak for five minutes, remove from the solution, and gently squeeze the solution through the blanket. Rinse the blanket thoroughly in clean luke warm water, gently squeeze and drain the excess water from the blanket. DO NOT WRING THE BLANKET.

DRYING

Drape the blanket across a clothes line and drip dry.

DO NOT use pegs to secure the blanket in position.

DO NOT dry with a hair dryer or heater.

IMPORTANT! Ensure the controls are in position that will not allow dripping water to fall onto any part of the controller.

Allow the blanket to dry thoroughly.

Connect the detachable cord to the connector on the blanket. Ensure the connector is properly locked in place.

CAUTION! Electric Shock Hazard. Ensure the electric blanket and connector on the blanket is completely dry, free of any water or moisture, before connecting to mains power.

Warning! During washing and drying the detachable cord must be disconnected or positioned in a way to ensure that water does not flow into the switch or control unit.

Warning! Do not allow the supply cord or controller to be immersed in any liquids.

Warning! Do not wring the blanket

Warning! Do not dry clean this electric blanket. This may damage the heating element or the controller.

Warning! Do not iron this blanket. Do not machine wash or machine dry.

Warning! Do not tumble dry.

Warning! Do not bleach.

SAFE OPERATION GUIDE

- Fit the blanket securely on the mattress with the skirt.
- Use this blanket as an under blanket only. Not recommended for futons or similar folding bedding systems.
- When not in use, pack the blanket in its original packaging for best protection and store in a cool, clean and dry location. Avoid pressing sharp creases into the blanket. Store the blanket only after it has fully cooled down.
- When storing, fold neatly but not tightly (or roll) in the original packaging without sharp bends in the heating element and store where no other objects will be placed on top of it.
- Do not crease the blanket by placing items on top of it during storage.

Warning! The blanket should not be used on an adjustable bed.

Warning! The blanket must be fitted securely to the mattress with the fitted skirt.

Warning! The cord and control must be outside the bedding at all times and away from other heat sources such as heating and lamps.

Warning! Do not use folded, rucked, creased or when damp.

Warning! Use HIGH setting to pre heat the bed 1 hour before use only. Do not sleep with the control set to the high setting. It is highly recommended that the blanket be set to a minimum Low heat if used overnight or for continuous use.

Caution: First Time Use. For first time use it is recommended that the blanket be set on HIGH for 2 hours before sleeping on the bed. This will assist in drying any moisture out of the mattress. Ignore any initial odour that may occur with first time use.

Warning! Do not sleep with the controller set to HIGH. Use **HIGH** setting only to pre heat the bed then reduce the heat setting to minimum LOW setting overnight or preferably switched OFF for safety.

Warning! Remember to switch the blanket controller to "OFF" at the end of use and disconnect from mains power. Do not leave on indefinitely. There may be a risk of fire.

Warning! For added safety it is recommended that this blanket be used with a residual current safety device (safety switch) with a rated residual operating current not exceeding 30mA. If unsure please consult a qualified electrician.



IMPORTANT SAFETY INFORMATION

When using electric appliances always observe safety regulations where applicable to reduce the risk of fire, electric shock and personal injury.

Always check that the power supply corresponds to the voltage on the rating plate on the controller.

Warning! Do not use the electric blanket folded .



Do not use the electric blanket



rucked. Avoid creasing the blanket. Do not insert pins into the electric blanket.

DO NOT use this electric blanket if it is wet or has suffered water splashes.

Warning! Do not use this electric blanket with an infant or child, or any other person insensitive to heat and other very vulnerable persons who are unable to react to overheating. Do not use with a helpless or incapacitated person or any person suffering from medical illness

STORAGE

IMPORTANT! Safety Check

This blanket should be checked annually by a suitably qualified person to ensure its safety and suitability for use.

Store in a safe place

Warning! Before storage of this appliance allow it to cool down before folding.

When not in use store your blanket and instruction manual in a safe and dry place. Roll or gently fold the blanket. Do not crease. Store in a suitable protective bag for protection. Do not place items on the blanket when storing. Before re-use after storage it is recommended that the blanket is checked by a suitably qualified person to eliminate the risk of fire or electric shock through a damaged blanket.

Examine the appliance frequently for signs of wear or damage. If there are such signs or if the appliance has been misused the blanket must be checked by a qualified electrical person for electrical safety, before switching it on again.

TECHNICAL SPECIFICATIONS

Size 91cm x 188cm
220-240v~ 50Hz 60W
Single controller 030C

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

anko

ELECTRIC UNDER BLANKET KING SINGLE FITTED MODEL NO: TT-651XKS



INSTRUCTION MANUAL PLEASE READ THESE INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE REFERENCE

such as high blood circulation, diabetes or high skin sensitivity.

Warning! Avoid extended use of this electric blanket at a high setting. This may result in skin burns.

Warning! Avoid creasing the blanket. Examine the blanket frequently for signs of wear or damage. If there are such signs or if the appliance has been misused, have it inspected by a qualified electrical person prior to any further use or the product must be disposed.

Warning! This electric blanket is not intended for use in hospitals.

Warning! Do not use this electric blanket on or under any waterbed or mechanically adjustable type of bed such as a bunk or sofa bed. Check to ensure that the controller and supply cord cannot become trapped in any bed or bedding. Keep controller outside of the bedding, as much as possible.

Warning! Use the correct size of blanket for the bed. Do not for example use a double blanket on a single bed. Do not tuck the blanket in.

Warning! For electrical safety the electric blanket must only be used with the detachable control unit supplied with the item. Do not use other attachments not supplied with the blanket.

Warning! For electrical safety the electric blanket must only be used with the detachable control unit 030C supplied with the item. Do not use other attachments not supplied with the blanket.

Warning! Do not use by children under the age of three.

Supply

This electric blanket must be connected to a suitable 220-240V~ 50Hz power supply. If using an extension cord, ensure that the extension cord is of a suitable 10-amp power rating. Fully unwind the supply cord when in use as a coiled cord may overheat.

Warning! Always unplug from the mains supply when not in use.

Supply cord and plug

If the supply cord or controller is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Children

This blanket is not to be used by young children over the age of three unless the controls have been preset by a parent or guardian or unless the child has been adequately instructed on how to operate the controls safely. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, concerning use of the appliance by a person responsible for their safety. Young children should be supervised to ensure that they do not play with the appliance.



Warning! Not to be used by young children (0-3years) .

CLEANING

Warning! When not in use or before cleaning, **always disconnect the blanket from the mains power supply.**

Spot Clean

Sponge the area with a neutral wool detergent or mild soap solution in lukewarm water. Sponge with clean water and dry completely before re-use.



SAFETY INSTRUCTION

Carefully read this manual in full before using this electric blanket

Ensure that you know how the electric blanket functions and how to operate it. Maintain the electric blanket in accordance with the instructions to ensure that it functions properly. Keep this manual with the electric blanket. If the electric blanket is to be used by a third party, this instruction manual must be supplied with it.

The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used.

No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

Warning! Do not use this electric blanket if it has been damaged in any way, if it is wet or moist or if the supply cord is damaged. Return it immediately to the retailer. Electric blankets should be checked annually for electrical safety in order to limit the risk of electric shock or fire.

PACKAGE CONTENTS

1 x 105cm x 200cm Single Control Electric Blanket
1 x Instruction Manual

Caution! Confirm all parts before disposing of packaging. Safely dispose of all plastic bags and other packaging components. They may be potentially dangerous to children.

OPERATION

Location and Use

Use the blanket as an under blanket only. This blanket is designed for domestic use only. This blanket is not intended for medical use in hospitals and/or nursing homes.

Fitting

Place the blanket on the bed, with the controller at the pillow end, ensuring that the blanket does not overhang the bed edge. Fit the blanket to the bed using the attached skirt. Secure each corner and also the middle. Ensure the blanket is fully flat on the mattress and not bent or wrinkled.

Operation

Once the electric blanket has been installed correctly in position and the bedding completed, connect the controller supply plug to a suitable power outlet. Ensure the controller is set to "Off" before plugging in. Select the desired heat setting on the controller. The indicator lamp indicates that the blanket is ON.

Controls

The controller has the following settings.

L LOW HEAT
M MEDIUM HEAT
H HIGH (PRE HEAT).

There is a LED light which illuminates when the blanket is switched ON.

IMPORTANT! The electric blanket is fitted with an automatic timer to switch OFF the blanket after 12 hours of continuous use on any one of the heat settings (i.e. Low, Medium or High). The auto power OFF function is re-activated for 12 hours each time the controller is switched OFF and switched back ON again by selecting any one of the heat settings. The 12 hour timer is automatic and cannot be adjusted manually.



Hand Washing (Maximum temperature 40°C)

Disconnect the detachable cord from the blanket.



Immerse the blanket only (DO NOT ALLOW THE CONTROLLER TO COME IN CONTACT WITH ANY LIQUIDS) in a lukewarm neutral detergent or mild soapy solution. Soak for five minutes, remove from the solution, and gently squeeze the solution through the blanket. Rinse the blanket thoroughly in clean luke warm water, gently squeeze and drain the excess water from the blanket. DO NOT WRING THE BLANKET.

DRYING

Drape the blanket across a clothes line and drip dry.

DO NOT use pegs to secure the blanket in position.

DO NOT dry with a hair dryer or heater.

IMPORTANT! Ensure the controls are in position that will not allow dripping water to fall onto any part of the controller.

Allow the blanket to dry thoroughly.

Connect the detachable cord to the connector on the blanket. Ensure the connector is properly locked in place.

CAUTION! Electric Shock Hazard. Ensure the electric blanket and connector on the blanket is completely dry, free of any water or moisture, before connecting to mains power.

Warning! During washing and drying the detachable cord must be disconnected or positioned in a way to ensure that water does not flow into the switch or control unit.

Warning! Do not allow the supply cord or controller to be immersed in any liquids.

Warning! Do not wring the blanket

Warning! Do not dry clean this electric blanket. This may damage the heating element or the controller.

Warning! Do not iron this blanket . Do not machine wash or machine dry.

Warning! Do not tumble dry.

Warning! Do not bleach.

SAFE OPERATION GUIDE

- Fit the blanket securely on the mattress with the skirt.
- Use this blanket as an under blanket only. Not recommended for futons or similar folding bedding systems.
- When not in use, pack the blanket in its original packaging for best protection and store in a cool, clean and dry location. Avoid pressing sharp creases into the blanket. Store the blanket only after it has fully cooled down.
- When storing, fold neatly but not tightly (or roll) in the original packaging without sharp bends in the heating element and store where no other objects will be placed on top of it.
- Do not crease the blanket by placing items on top of it during storage.

Warning! The blanket should not be used on an adjustable bed.

Warning! The blanket must be fitted securely to the mattress with the fitted skirt.

Warning! The cord and control must be outside the bedding at all times and away from other heat sources such as heating and lamps.

Warning! Do not use folded, rucked, creased or when damp.

Warning! Use HIGH setting to pre heat the bed 1 hour before use only. Do not sleep with the control set to the high setting. It is highly recommended that the blanket be set to a minimum Low heat if used overnight or for continuous use.

Caution: First Time Use. For first time use it is recommended that the blanket be set on HIGH for 2 hours before sleeping on the bed. This will assist in drying any moisture out of the mattress. Ignore any initial odour that may occur with first time use.

Warning! Do not sleep with the controller set to HIGH. Use **HIGH** setting only to pre heat the bed then reduce the heat setting to minimum LOW setting overnight or preferably switched OFF for safety.

Warning! Remember to switch the blanket controller to "OFF" at the end of use and disconnect from mains power. Do not leave on indefinitely. There may be a risk of fire.

Warning! For added safety it is recommended that this blanket be used with a residual current safety device (safety switch) with a rated residual operating current not exceeding 30mA. If unsure please consult a qualified electrician.



IMPORTANT SAFETY INFORMATION

When using electric appliances always observe safety regulations where applicable to reduce the risk of fire, electric shock and personal injury.

Always check that the power supply corresponds to the voltage on the rating plate on the controller.

Warning! Do not use the electric blanket folded .



Do not use the electric blanket



rucked. Avoid creasing the blanket. Do not insert pins into the electric blanket.

DO NOT use this electric blanket if it is wet or has suffered water splashes.

Warning! Do not use this electric blanket with an infant or child, or any other person insensitive to heat and other very vulnerable persons who are unable to react to overheating. Do not use with a helpless or incapacitated person or any person suffering from medical illness

STORAGE

IMPORTANT! Safety Check

This blanket should be checked annually by a suitably qualified person to ensure its safety and suitability for use.

Store in a safe place

Warning! Before storage of this appliance allow it to cool down before folding.

When not in use store your blanket and instruction manual in a safe and dry place. Roll or gently fold the blanket. Do not crease. Store in a suitable protective bag for protection. Do not place items on the blanket when storing. Before re-use after storage it is recommended that the blanket is checked by a suitably qualified person to eliminate the risk of fire or electric shock through a damaged blanket.

Examine the appliance frequently for signs of wear or damage. If there are such signs or if the appliance has been misused the blanket must be checked by a qualified electrical person for electrical safety, before switching it on again.

TECHNICAL SPECIFICATIONS

Size 105cm x 200cm
220-240v~ 50Hz 65W
Single controller 030C

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us