

43330836 BATTEN FIX LIGHT SHADE

(Model No.: 406337)

This product is designed to fit into a standard bayonet (B22) batten holder, which is preinstalled in the ceiling.


If you do not have a ceiling batten holder, or you are unsure about its suitability, contact a qualified electrician for advice

INSTRUCTIONS FOR INSTALLATION :

Caution: Before adding or replacing your batten fix light shade, make sure the electricity is switched off and any plugs are removed from the wall socket. Always allow bulb to cool completely before installation.

Caution: Always ensure pendant is completely installed and secure before connecting to an electricity supply.

1. Remove all three component from packaging.
 2. Remove the plastic outer ring from lamp holder.
 3. Install batten fix light shade to lamp holder as per below instruction.
 4. Screw the plastic outer ring to the lamp holder
 5. Install the globe -Max 40W B22 Edison Screw(not included) into the lamp holder.
 6. Check to ensure that all the components have been assembled correctly.
- Connect to electricity to see batten fix light shade light up.

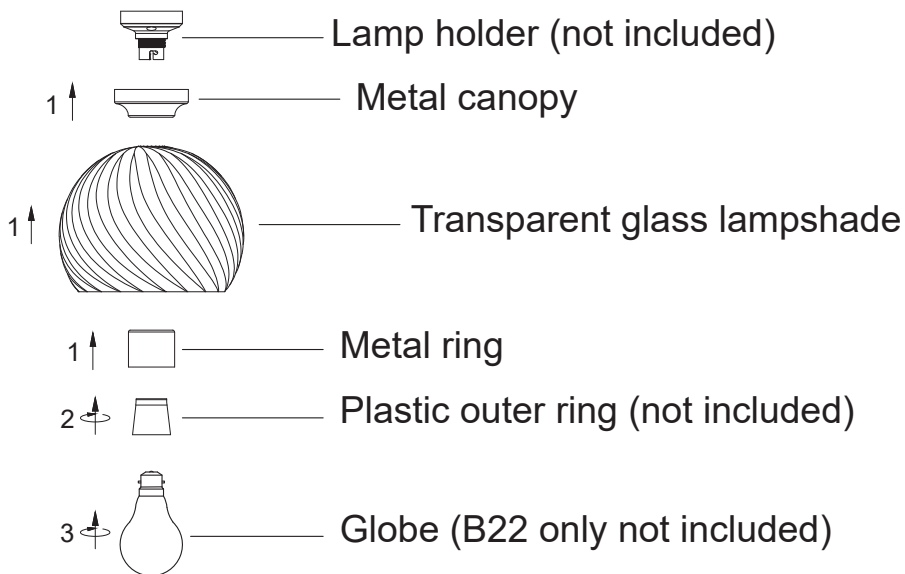

Care information

1. Carefully read all instructions for the assembly and use of this product before connecting to an electricity supply.
2. Light bulbs become very hot in seconds. Do not attempt to touch the light while the lamp is lit and supervise others accordingly.
3. Before cleaning or replacing shade, switch off the light and unplug from the mains socket. Allow the bulb to cool for at least 10 minutes before touching it and making the change.
4. Ensure the new bulb is secure in the lamp holder before reconnecting to the power supply. If in doubt, consult a qualified electrician.

FOR INDOOR USE ONLY