

# WOODEN CLIMBING FRAME INSTRUCTIONS

Keycode: 43347100

**WARNING!** Requires adult assembly only. Use only under adult supervision.

**WARNING!** Not suitable for children under 3 years. Only for one child use.

**WARNING!** Not for commercial use. Do not repeatedly assemble and disassemble the product. Do not jump on this product. Do not step on the edge or sit the edge as it poses a risk of overturning. Do not climb from the side of the product. Never allow your child jump on the product when using it.

**WARNING!** Contains functional sharp point. Make sure all screws, nuts and bolts are firmly tightened before using the product. Please install the product according to the instructions. Only use on flat ground. Do not expose to the sun. For indoor use only. For domestic use only.

**WARNING!** This product is a toy and cannot be used as a tool. Adults are strictly prohibited from stepping onto the product. If the product shows visible damage during use, please stop using it.


**WARNING!** Not for children with a body mass of more than 30kg.

**WARNING!** Always ensure the product is placed on a flat, even surface to ensure that it does not tip over.

Remove the product and related pieces from the box. Set all the parts out and read the assembly instructions prior to use. Keep the packaging until assembly is complete. Please keep for future reference.

## CONTENTS:

The product consists of below components, please assemble each part step by step.

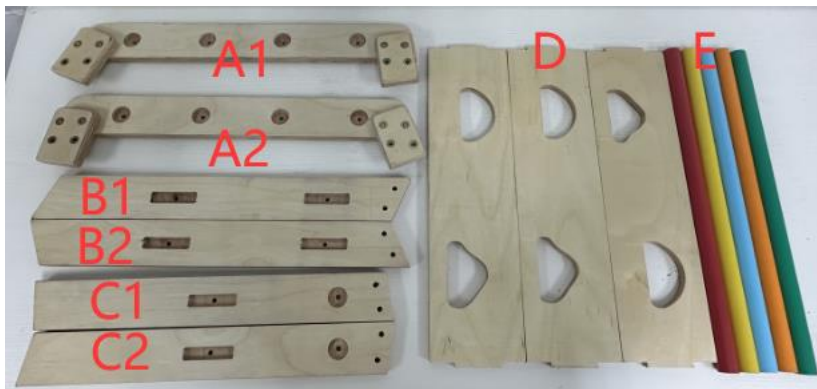


- A. 2pcs wooden panel
- B. 2pcs wooden panel
- C. 2pcs wooden panel
- D. 3pcs climbing board
- E. 5pcs wooden rung

**WARNING: A1&A2 are pre-assembled, do not loosen the screws.**

Accessories:


- 2 sets steel angle
- 1pc hex wrench
- 16pcs silver screw
- 8pcs gold screw
- 4pcs rubber label

## Assembly Instructions

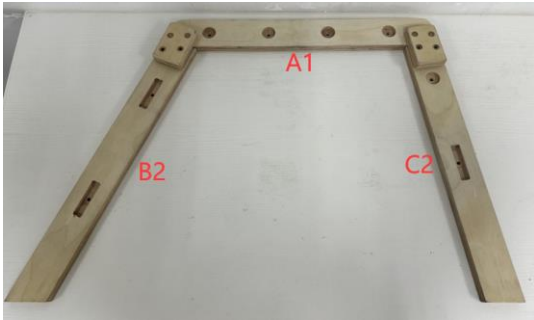


Use the gold screws to connect A1&B2&C2 as the image.

**Note: Please tighten firmly using the hex wrench.**

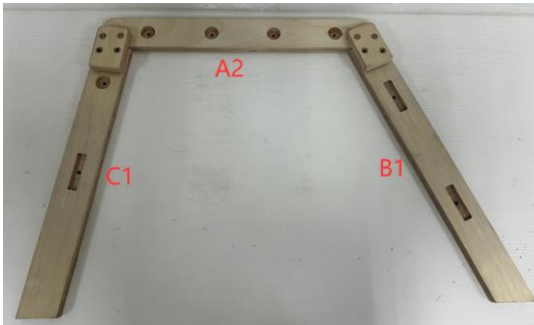


Use the gold screws to connect A2&B1&C1 as the image.

**Note: Please tighten firmly using the hex wrench.**

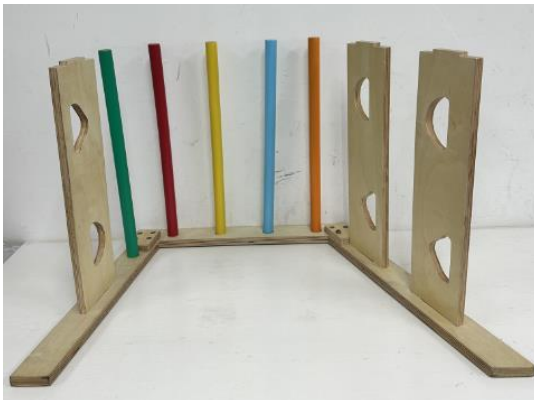

Insert the rungs and boards one by one, using the silver screws to tighten. Please tighten half firstly.

**Note: Please do not tighten firmly before all wooden rungs and boards are assembled.**

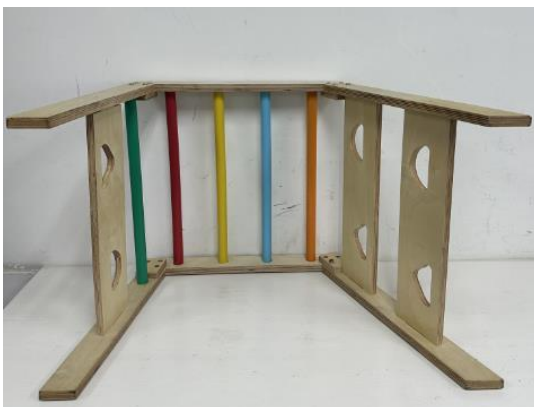

Put another panel on and tighten with silver screws.

**Note: Please tighten firmly all screws at this step.**



Use the provided screw through steel angle and the hole in the lower corner of the wooden panel, put on the screw cover, then use the wrench(not included) to tighten.

Select the appropriate fixing screw(not included) and fix the steel angle to the ground. The steel angles are mandatory installation, please check and ensure the security of steel angles before use.



In order to ensure the climbing frame is stable and non-slip, please stick the rubber stickers to the bottom of the panels.

**Product picture after assembled:**



## Storage & Care Instructions

Wipe the product clean with a dry cloth. Do not use abrasive materials or solvents. Ensure item is clean and 100% dry before storing to prevent mould and mildew.Keep away from water and direct sunlight.

It is not recommended to use power tools for assembly, which will cause the screws to slip. It is strictly prohibited to use if there is obvious deformation or damage.

It is of particular importance that they be followed at the beginning of each season as well as at regular intervals during the usage season.

Always check all screws for tightness and tighten when required. Always check all screws for sharp edges and replace when required. Always check any means of attachment for evidence of deterioration; replace when required in accordance with manufacturer's instructions. If these checks are not carried out, the toy could

overturn or otherwise become a hazard. Do not use this product if you detect any damage or loosening of the screws on the products.

**MADE IN CHINA**

**CUSTOMER SERVICE**

**KMART AU:** 1800 124 125

**KMART NZ:** 0800 945 995

**TARGET AU:** 1300 753 567