anko

K: 43351381 | T: 68779054 (Model: JLR-78448)

Magnetic Wireless Charging Pad Instruction Manual

This is a magnetic wireless charger that allows you enjoy the fun of digital products easily. Please kindly read the user manual before using and keep it for future reference.



Safety Notes

1.Do not squeeze or collisions.

2.Do not disassemble or throw into fire or water, to avoid causing a short circuit leakage.

- 3.Do not use wireless charger in severely hot, humid or corrosive environments, to avoid circuit damage and occurs leakage phenomenon.
- 4. Do not place too close with magnetic stripe or chip card (ID card, bankcards, etc.) to avoid magnetic failure.

5. Please keep the distance at least 20cm between implantable medical devices (pacemakers, implantable cochlear, etc.) and the wireless charger, to avoid potential interference with the medical device.

6. To take care of the children, to ensure that they won't play the wireless charger as a toy, to avoid unnecessary accidents.

Wall Charger

- Wall charger (not included) with USB-C output should be used
- Compatible with wall charger with fast charging feature



Charging mode:

- 1. Attach the wireless charger to the phone supporting magnetic charging.
- 2. Also supports wireless charging with non-magnetic wireless charging device.



Specification:

Input: 5V == 3A, 9V== 2.22A, 12V == 1.67A

Output: 5W/7.5W

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd.	Target Australia Pty Ltd
C/- Customer Service Centre	C/- Customer Service Centre
690 Springvale Road,	2 Kendall Street, Williams Landing,
Mulgrave Vic 3170	Vic, 3027
Customer Service: 1800 124 125	Customer Service: 1300 753 567 or
(Australia) or 0800 945 995	via Customer Help at
(New Zealand) or via	target.com.au/help/contact-us
Customer Help at kmart.com.au	