

anko

K: 43351725 | T: 68768430 (Model: 42967286)

Instruction Manual Bluetooth Foldable Headphone




Please read all the information carefully before you use the product and keep the manual for future reference.


Packing list:



 
Headphone*1

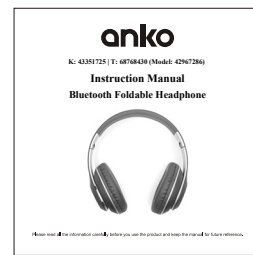

User's Manual*1

 


Dual 3.5mm audio cable*1

 

Micro USB Charging Cable*1

Production structure

 - 1.Mode button
- 2.Volume+/NEXT
- 3.Multi-function button (MFB)
- 4.Volume-/PREV
- 5.Power switch
6. LED indicator

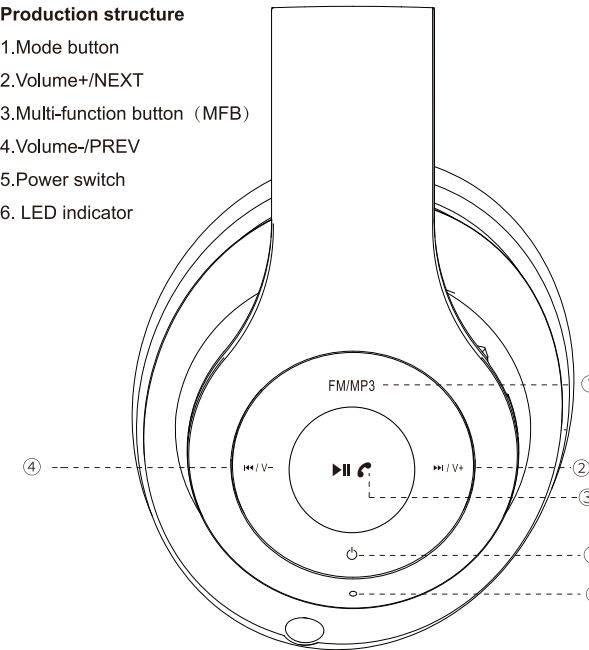

Bluetooth headphone turn ON/OFF

1. Turn on: Hold down the power switch button for 3 seconds.
2. Turn off: Hold down the power switch button for 3 seconds.

Bluetooth connection

- Follow the steps (Please make sure that your phone is built-in Bluetooth function)
1. Hold down the power switch button for 3 seconds, the LED indicator flashes alternately with blue and red, the headphone enter the pairing status.
(Note: The headphone can automatically enter pairing status after power on if there is no reconnection. As the headphone can automatically reconnect with the last device that you had paired. To re-connect, you just need to turn it on.)
 2. Activate the Bluetooth function and search for "anko43351725" referring to your phone instructions.
 3. Manually click "anko43351725" to connect. If the LED flashes blue slowly, the connection is successful.

Answering incoming calls

- Press the Multi-function button once to answer incoming calls.
Tip: Since some mobile phones default to answer calls via their own receiver, please refer to the instructions of your phone and set on your phone.

End the current call

- Press the Multi-function button once to end the current call.

Reject incoming calls

- Press the Multi-function button for 1 second when there comes a call.

Last number redial

- Double press the Multi-function button to redial the last calling number.

Music playing

- 1.Play/Pause: Short press the Multi-function button ;
- 2.PREV: Long press to select the previous song;
- 3.NEXT: Long press to select the next song;
- 4.VOL+: Short press to increase volume;
- 5.VOL-: Short press to decrease volume.

Mode switching

- Short press the mode button FM/MP3 to select mode. (Bluetooth/Micro SD card/FM)

Micro SD card mode

Insert a Micro SD card, the headphones will automatically recognize and play MP3 music automatically.



Micro SD card

Wired mode: Dual 3.5mm Audio Cable connecting To Audio Jack

1. Plug and play: Connecting the headphone to a music player with the provided dual 3.5mm audio cable, the headphone can be used as wired headphone without starting.
2. In this mode, you can't use any function of the headphone, including pause playback, volume adjustment, microphone and so on.

Note: The Bluetooth headphone will automatically switch off and become a wired headphone after plugging in the 3.5mm audio cable.

FM mode

1. Short press the mode button FM/MP3 to select FM mode, then press the Multi-function button once to scan and memorize the FM radio stations.
2. Short press and to adjust the volume. Press and hold or button to select the desired channels.

To charge the headphone

1. As product is built-in non-removable and rechargeable battery, please use the provided micro USB cable to charge.
2. Fully charge the product before the first use. It takes 2 hours to charge for the subsequent use.
3. The LED indicator turns red when charging, and the LED indicator turns off when the battery is fully charged.

Notes

- Please choose the charger that is certified by the regular manufacturer.
- The battery performance may decrease as repeating charging and using the product. It's a normal phenomenon for all rechargeable batteries.

Specification

Bluetooth Version: V5.0
Battery: 400mAh
Playing time: Up to 8H
Talk time: Up to 8H
Charging time: 3H
Standby time: 300H

Warnings:

- Please follow the instruction to operate.
- Please charge the headphone with input power 5V/1A, in order to protect the battery.
- Please store or use the headphone in a normal temperature environment.
- Please keep the headphone from heat source, such as radiators, hot air regulators, stoves, or other heat generating instruments. As it is not anti-high temperature.
- Don't jam the ports of the headphone, such as charger port and microphone etc.
- In order to protect your hearing and extend the headphone service life, it is not recommended to adjust the volume to the maximum level for a long time.
- Working temperature: 0°C~ 45°C.
- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.
This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.
You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

材质: 128g双铜纸

双面印刷

风琴折