

KMT说明书折页 128g双铜 尺寸: 89*127mm

anko

K: 43-351-732 | T: 68-734-640
Model: HQ500B

Bluetooth Headphone User Manual

Accessories inside:

- Type-C charging cable x 1
- 3.5mm audio cable x1
- User manual x 1



12 month warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.


Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

WARNING:

- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- Replacement of a battery with an incorrect type that can result in an explosion or the leakage
- Please note the product working temperature is : 0-40 °C.

Function overview:

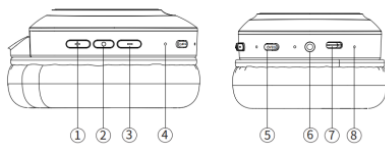

- | | |
|-----------------------------|-----------------------|
| ① Volume up/ Next song | ② MFB button |
| ③ Volume down/Previous song | ④ Bluetooth indicator |
| ⑤ Power on/off & EQ button | ⑥ 3.5mm jack input |
| ⑦ Type C charging port | ⑧ Microphone |

Specification

Bluetooth name	anko43351732
Bluetooth version	V5.3
Working distance	≤10m
Frequency response	50-8K Hz
Input Voltage	DC 5V 1A
Charging time	2Hrs
Charging port	Type-C
Speaker driver unit	Φ 40mm, 32Ω
Playing time	58Hrs (at 80% Volume)
Battery capacity	400mAh

Operation Instruction

Power on/off

- Turn on: In power-off status, press and hold the power on button 2s, the blue light will be on around 2 seconds, then blue and red light will flash alternately, the headphone enter into pairing mode.
- Turn off: In power-on status, press and hold the power off button 3s, the indicator light will turn off .

Pairing

Turn on the Bluetooth switch of the mobile phone or other devices(such as PC, Tablet etc), search for the pairing name **anko43351732** in your mobile Bluetooth list, click it to connect the headphone with your device; Once paired successfully, a voice prompt will alert and the blue indicator flashes slowly every 6 seconds .

EQ mode

There're three kinds of EQ for your option, click the EQ button to switch EQ mode you need, there's voice prompt to help you to choose the mode .

1) Bass mode; 2) Pop mode; 3) Vocal mode

Music playing

Volume up: Click the "+" button to increase volume ; Volume down: Click the "-" button to decrease volume ; Next song: Press and hold the "+" button around 2 seconds ; Previous song: Press and hold the "-" button around 2 seconds ; Music play/pause: Click the MFB button .

Phone Calling

Answer call: Click the MFB button when call is coming ;

End call: Click the MFB button when call is over

Cancel call: Click the MFB button when calling

Reject call: Press and hold the MFB button around 2 seconds when call is coming

Redial: Double click the MFB button to redial last call number

Siri or google assistant

In standby mode or music mode, long press MFB button 2 seconds to activate Siri or Google assistant.

AUX mode

Connect one end of the 3.5mm audio cable into the audio jack of the headphone , Connect the other end into your mobile or other devices, then play music directly.

Note: The headphone will be power off once plug the 3.5mm audio cable into audio jack(When headphone is power on). If you need to turn on the headphone, the 3.5mm audio cable must be taken out from the headphone.

Reset (to clear the paired device information in headphone)

To disconnect the headphone with other devices, press and hold the "+" and "-" button at the same time around 3 seconds until the red and blue indicator blink alternately, then headphone could pair with new devices.

Charging

Before using, please check and assure the battery is full charged.

While the headphone is in low battery, please use Type-C charging cable to charge and the charging indicator will be red when charging. Once it's fully charged, the indicator will be solid blue.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under license