 





## RGB GAMING MOUSE PAD SMALL

### Operating instructions

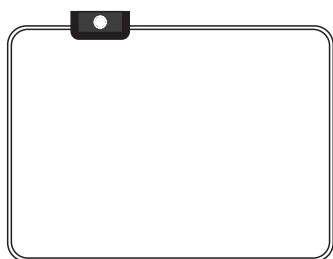


K:43-351-978  
T:68-736-439  
Model No.:43351978
 
### Product Appearance

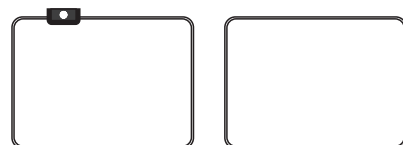

 
Front side / cloth      back side/ rubber base

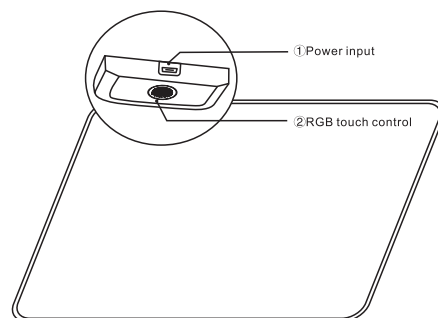

Product Size:350x250x3mm

### Instructions for use:

 ① Connect the USB power cable to the power supply

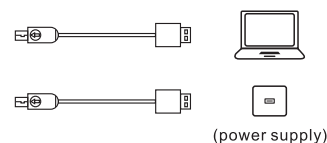

② RGB touch control

- 1、 Long press the key to activate the light.
- 2、 Lightly press to control the lighting mode. Each press will switch to the next lighting mode and continue cycling. (power off memory/on/off memory).

③ Technical Parameter

INPUT:5V==0.5A

Touches	Specifications
Light mode transformation	
1st	7-color gradient achieved by left and right lighting .
2nd	Left and right lights achieve 7-color breathing changes.
3rd	The left and right lights achieve colorful flashing changes.
4th	Red light on the left and long red light on the right.
5th	The purple light on the left , and the orange light on the right.
6th	The rose red light on the left , and the yellow light on the right.
7th	Blue light on the left, long bright green light on the right.
8th	Green light on the left, blue light on the right.
9th	Indigo light on the left , indigo light on the right.
10th	Yellow light on the left , purple light on the right.
11th	White light on the left, white light on the right.
12th	Realizing Colorful Cyclic Changes in Left and Right Lights.
13th	Turn off.

### Part lists Includes:

mouse pad  
micro USB cable  
Manual

### Noted:

- 1、 Please keep the controller away from water and other liquids.
- 2、 If cleaning is required, please ensure that it is disconnected from the power supply.
- 3、 Maintain an ambient temperature of 0°C-45°C for use.

## 12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us