

**anko**

# **Pet Talking Buttons**



**Contents**



**A**

 
 


**B**



**C**

A. Button x 4pcs	B. Screwdriver x 1pc	C. Stickers x 2pcs
------------------	----------------------	--------------------

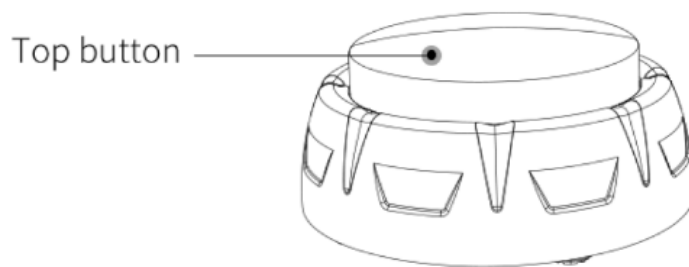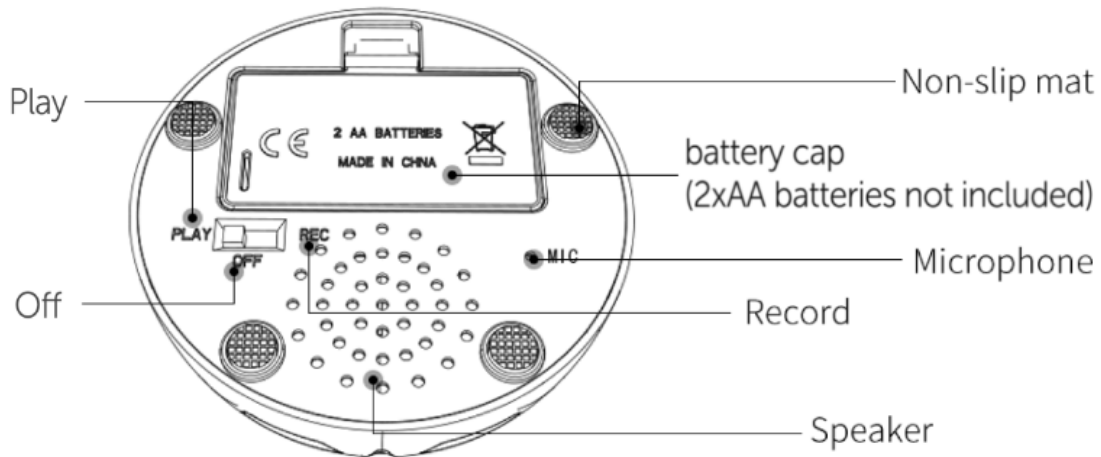

**EACH BUTTON REQUIRES 2 X AA BATTERIES (NOT INCLUDED).**



## User manual

### Step 1.

Use the screwdriver provided to open the battery compartment on the button. Insert 2x AA batteries (not included).


### Step 2.

Set the switch to REC, press and hold the top button until you hear a single beep sound. Hold it close to your mouth and talk into the button. After you have recorded your sound or word, release your hand from the top of the button and you will hear a double beep sound, which means the sound has been recorded successfully. The recording time is up to 30 seconds.



### Step 3.

To play the sound you have recorded, set the switch to Play and press the top of the button to hear the sound. You can re-record as many times as you like.

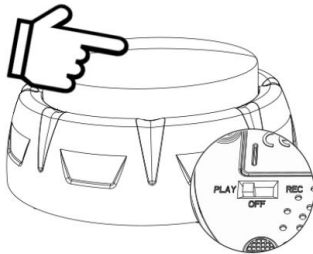

### Step 4.

To turn the button off, set the switch to Off.



**Optional:** There are decorative stickers which you can stick to the top of the buttons to keep note of which button makes what sound.

**WARNING:** BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY. DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE PET TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCULATED. REMOVE BATTERIES FROM THE PET TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY ADULT REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.