

**Specifications:**

Bluetooth version: 5.3  
 Speaker power: 2×7.5W  
 Frequency: 100Hz-20KHz  
 Distortion rate ≤1%  
 Build-in Rechargeable battery  
 Charging time up to 3 hours  
 Input: DC 5V / 1600mA

**12 Month Warranty**

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

| Contact for Kmart purchases  | Contact for Target purchases  |
|--|---|
| Kmart Australia Ltd.<br>C/- Customer Service Centre<br>690 Springvale Road,<br>Mulgrave Vic 3170<br>Customer Service: 1800 124 125<br>(Australia) or 0800 945 995<br>(New Zealand) or via<br>Customer Help at <a href="http://kmart.com.au">kmart.com.au</a> | Target Australia Pty Ltd<br>C/- Customer Service Centre<br>2 Kendall Street, Williams Landing,<br>Vic, 3027<br>Customer Service: 1300 753 567 or via Customer<br>Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a> |

# anko

**User Manual**

PORTABLE BT PILL SPEAKER

K:43366668 | T: 69015908 (Model: JLR-78567)

**Notice:**


Please read user manual carefully before any operations, and keep it for your records.

**Safety instructions:**

- Do not disassemble this product.
- This product is not a toy. Use extra caution while children are using this product.
- Keep the speaker away from direct sunlight, fire and high voltage equipment.
- Do not store the speaker inside a car during hot weather.
- Speaker shall not be exposed to excessive heat such as sunshine, fire or the like.
- Device may become warm while charging.
- Be assured to turn product completely off when plugging and unplugging into outlet.
- The marking information is located at the side of apparatus.

**Package includes:**

- 1×Bluetooth® speaker
- 1×USB charging cable
- 1×User Manual
- 1×3.5mm AUX cable

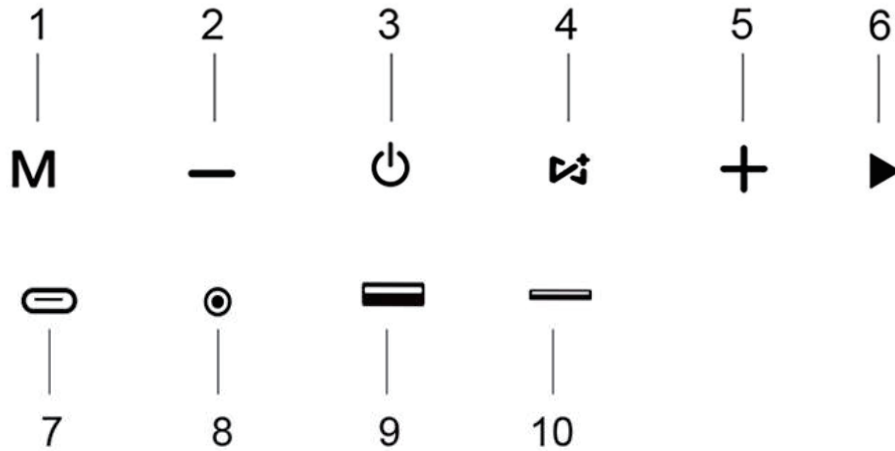

### Functionality:

- ① Mode button: can switch function between Bluetooth, Aux, TF mode and USB mode
- ② Short press to Volume-. Long press to previous song.
- ③ Power button: turn on/off the unit.
- ④ TWS button: Long press to TWS mode (On the Bluetooth mode)
- ⑤ Short press to Volume+. Long press to next song
- ⑥ Play/Pause button
- ⑦ Charging port
- ⑧ 3.5mm audio input line/Auxiliary
- ⑨ USB port (support 16G Max)
- ⑩ TF card (support 16G Max)

### Charging:

The speakers are powered via an integrated rechargeable battery. The battery cannot be removed or replaced. Upon initial use, the battery should be charged fully to ensure optimal performance and battery life.

Charge the device with the included USB charging cable. Plug the micro-USB end of the charging cable into the DC charging port (7) and the USB-A into a suitable USB port on your computer or a USB wall charger with DC5V. The led indicator will turn red while charging. Once fully charged, the red led will turn off. Charging time approx. 3 hours.

### Power On/Off

1. Long press 3s to turn the unit on
2. Long press 3s to turn the unit off.

### Pairing a Bluetooth device for the first time

1. Turn the unit on.
2. Turn on your external device.

3. Select Bluetooth device name “anko43366668” your Bluetooth settings menu to pair.
  4. When successfully paired and connected, a beep will issue from the unit.
- After initial pairing, the unit will stay paired unless unpaired manually by the user.

If you have used Bluetooth connection before, the system will start searching for the device last connected. When the device is found, the system will re-connect automatically.

NOTE: Only one Bluetooth device can be connected to the speakers at one time.

When Aux in is connected, Bluetooth function will be switched off, please disconnect the Aux in cable before using Bluetooth.

NOTE:

Should your device become unpaired or you are not able to connect it, repeat the above steps.

### TWS mode.

You can pair two same model speakers to enjoy louder volume and stereo sound.

1. Turn on both speakers.
2. Long press the button on one unit
3. A notify sound will be heard and TWS button turn to white light mean two speakers paired successfully in TWS mode.
4. Select Bluetooth device name anko43366668 in your Bluetooth settings menu to pair.
5. Pairing with your external device by Bluetooth.
6. You can press button on one speaker to control both units.
7. When you turn off TWS mode, one speaker still working.
8. When you switch off one speaker, another also switched off.
9. The speaker will connect automatically when both turned on.

Note: TWS mode only available in Bluetooth mode

### AUX-in mode.

Plug the 3.5mm cable into the AUX port, connect the other end with mobile phone, computer or other audio equipment. The speaker will turn into AUX-in mode.

Short press to play/pause

Press +/- to control volume

### Play music with TF card and USB drive.

Insert the MicroSD card or USB drive into the slot, music will play automatically when there is audio files stored.

Short press to play/pause

Long press +/- to control previous/ next song

Short press +/- to control volume

Supported file format: MP3/WMA/WAV/FLAC/APE

### Hands free

Press button to answer or hang up a phone call

Press button twice to redial the last number